



**baja designs**<sup>®</sup>  
*The Scientists of Lighting*

**44-8052**



**Dodge, Ram TRX 1500 (21-On), Dual S2 Reverse Kit  
Instructions**



## Tools Required

- 10mm, 9/16" Socket
- 9/16" wrench

1. Located above the tow hook on the inside of the bumper, using a 10mm socket, remove the factory bolt.
2. Place the appropriate bracket, (Passenger Side Shown) and re-apply the factory bolt and tighten down.

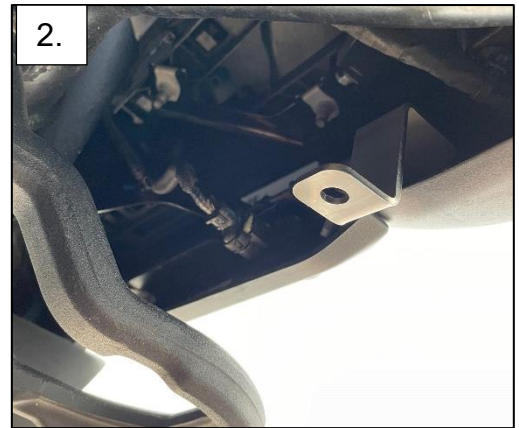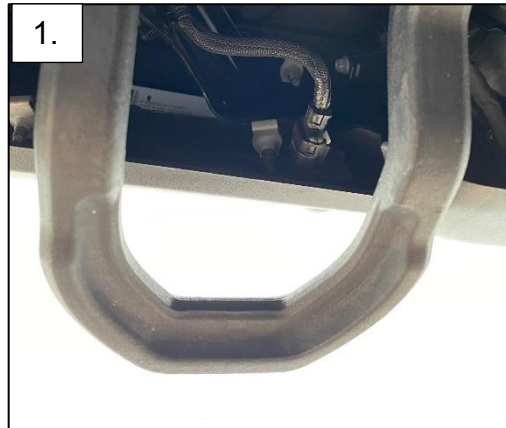

3. Using a 9/16" wrench and socket, torque down the light onto the bracket.




4. Plug in the 55" splitter onto the connectors on the light. Route the wiring across the bumper. Plug in the 10' extension into the 55" splitter.



5. Route the 10' extension over the axle and alongside the driver side of the vehicle to the front wheel well. Attach the upfitter harness and run through the wheel well into the engine bay.



6. Route the wires to the front of the battery where there will be 6 Aux wires. Using the table below, attach the splice connector to any desired Aux wire. Attach the ground ring terminal to the surrounding vehicle ground.

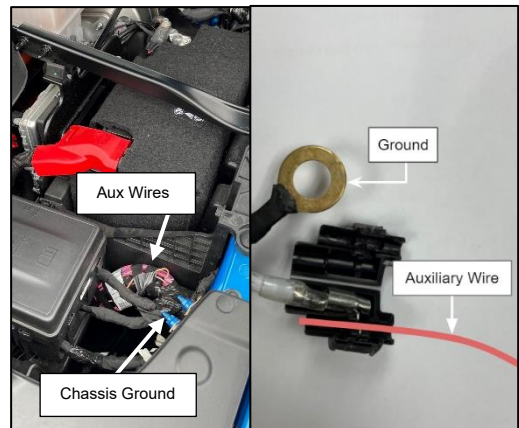

Tie all wires away from sharp, hot, and/or rotating components.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.

Circuit Function	Fuse	Wire Color
AUX Switch 1	F001A - 50 Amp	Pink/Dark Blue
AUX Switch 2	F002A - 20 Amp	Pink/Dark Green
AUX Switch 3	F003A - 20 Amp	Pink/Violet
AUX Switch 4	F004A - 50 Amp	Pink/Beige
AUX Switch 5*	F42 - 20 Amp	Pink/Brown
AUX Switch 6*	F50 - 20 Amp	Pink/Yellow