


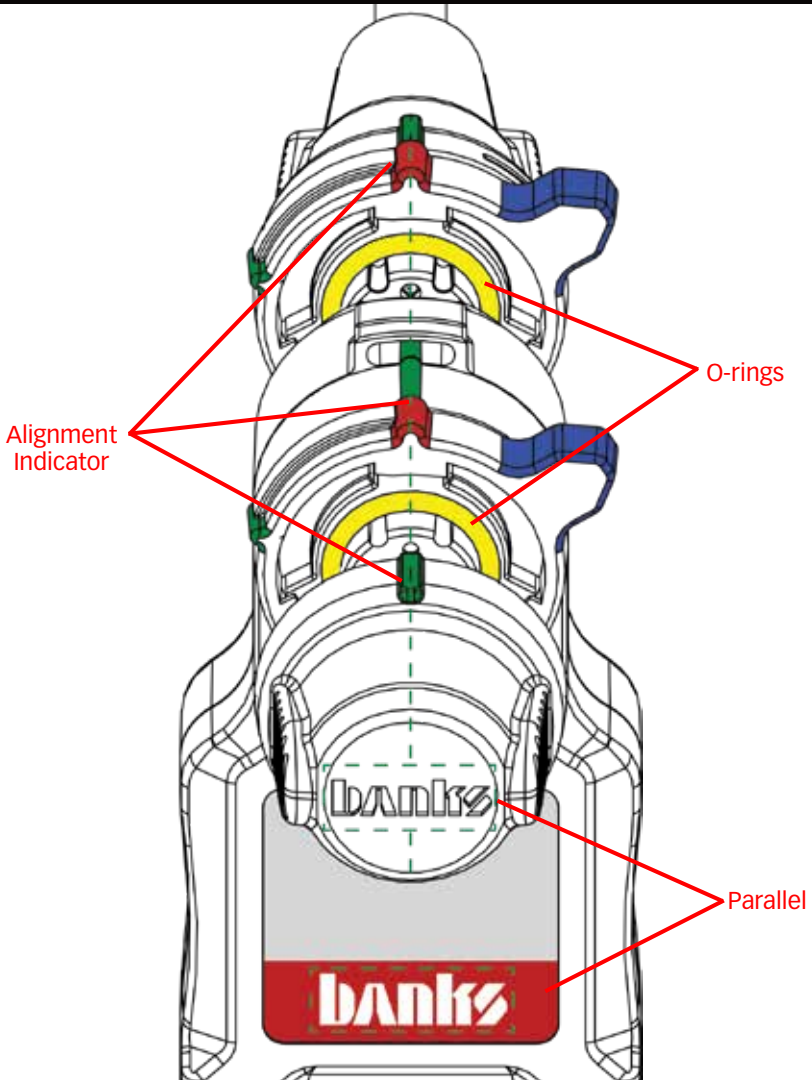


# ATTENTION!

**FAILURE TO ALIGN CAP, STARTER CABLE CAN AND O-RING CAUSE MODULE FAILURE.**

***PLEASE READ ALL THREE SIDES OF THE CONNECTION GUIDE***



1. Ensure the OBDII Cable is not plugged into the OBDII port.
2. Rotate the Locking Tab(s) counter clockwise to the unlocked position.

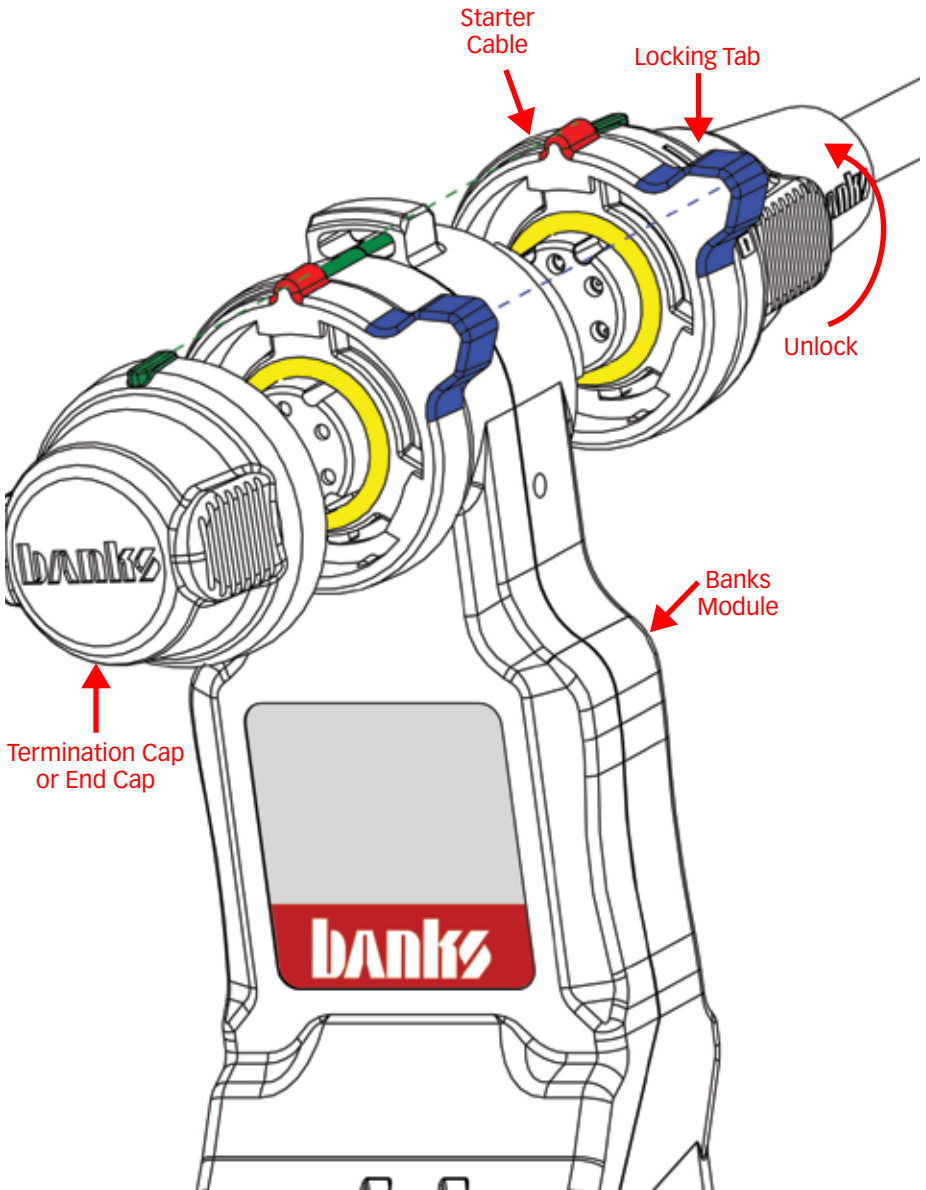

3. Please make sure the O-ring (shown below in yellow) on starter cable and Derringer tuner are present on both.
4. The "Banks" logo on the Terminator/End Cap should be parallel with the "Banks" logo on the module below for proper alignment. Position all alignment indicators at the 12 o'clock position.
5. Rotate Locking Tabs clockwise to lock modules.

