


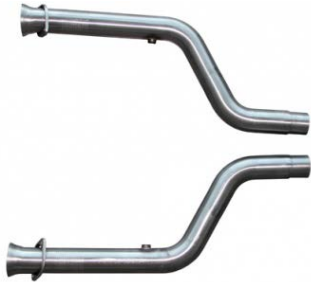

2005-2012 Dodge Charger/Challenger/300c 5.7L Hemi
2-3/4" Mid Pipe for Full Lengths
 Part #1796,1797



Special Tools

Required:

- No special tools required

Install Time:

Approximately
30 min

Difficulty:

1 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

- After installation of BBK Full Length Headers, install the matching Mid Pipes, rotate pipes as needed for alignment and fitment then start tighten at the collectors evenly and then the rear couplers ensuring the entire exhaust system is aligned correctly.
- Be sure that the BBK Logo on the driver side pipe is facing the correct way when looking underneath the vehicle

STEP 2

- Remove the oxygen sensors from the stock pipes and install onto the BBK Mid-Pipes.
NOTE!!! Be sure to add a small amount of anti-seize to the top thread of each oxygen sensor using the supplied anti-seize packet. As you thread the oxygen sensor pack into the part the anti-seize will spread evenly throughout the threads.

STEP 3

- Now reconnect the oxygen sensors.

STEP 4

- Re-connect the negative battery terminal and start the vehicle to ensure there are no leaks.