

Front Adjustable Track Bar

Dodge Ram 2500/3500 Pickup | 2003-2012

Part #: 55357

Rev. 121514



Box Kit		
Part #	Qty	Description
	1	Drivers Side Bracket
	1	Passengers Side Bracket
	1	Center Tie Rod Bracket
	3	5/16"x1-1/4"x2" U-bolt
	4	1/4" USS Washers
	4	5/16"-18 Torque Prevailing Nuts
	7	1/2"-13 Torque Prevailing Nuts
	4	1/2"-13x1-1/2" Bolt Grade 5
	3	1/2"-x2-1/2" Bolt Grade 5
	12	1/2" SAE Washers
	3	1/2" USS Washers

SAFETY WARNING

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.


INSTALLATION INSTRUCTIONS

1. Park vehicle on clean level surface with wheels facing straight ahead. Block rear wheels for safety.
2. Remove OE stabilizer and discard hardware.
3. Cutoff passenger's side OE stabilizer mount as shown (Fig 1- front, Fig 2 – back).

FIG 1 - FRONT



FIG 2 - BACK

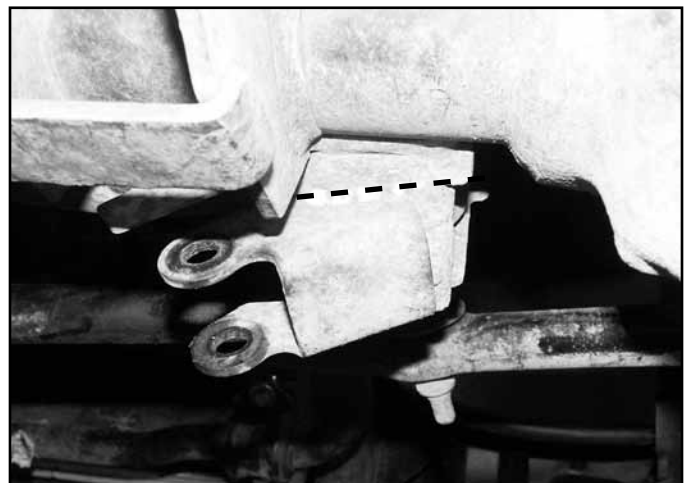


4. Install studs into driver's and passenger's side brackets with lock washer and nut as shown in Figure 4. Torque to 65 ft-lbs.
5. Clamp passenger's side bracket (#01526) on lower control arm mount. Ensure that edges of the bracket are aligned with OE brackets. (Fig 3 & 4) Note: The top hole in the bracket will be offset to the outside of the vehicle.
6. Mark hole centers and drill two 1/2" holes in the OE bracket.
7. Install 1/2" x 1-1/4" bolts, washers, and nuts from bolt pack #317 and torque to 75 ft-lbs.
8. Repeat steps 4-6 for driver's side bracket (#01525).
9. Loosely install center bracket (#01527) as shown in Figure 5. Use the larger diameter USS washers on the 1/2" x 2-1/2" bolt. A 1/2" USS washer is required between the center bracket and drag link. Install the 5/16" U-bolts with washers and nuts at this time.
10. Lightly grease bushings and install into both ends of stabilizers.

FIG 3



FIG 4

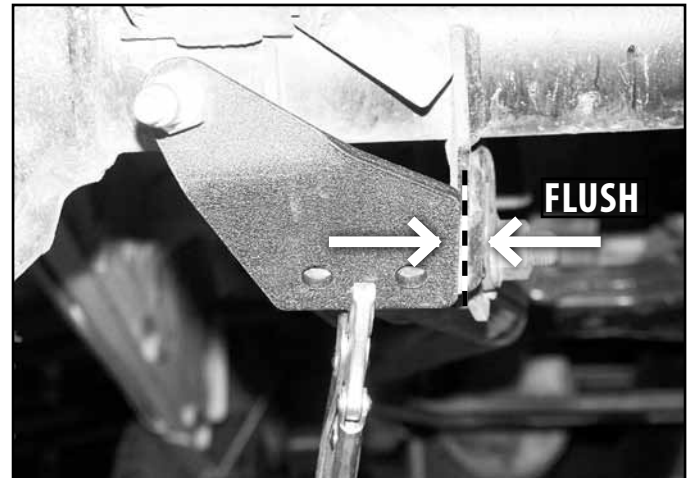

11. Install sleeve (#51792-1) into end of stabilizer that will connect to center mounting bracket.
12. Attach passenger's side stabilizer mounting bracket with included hardware. Torque to 55 ft-lbs. Repeat for driver's side.
13. Install stabilizers into center bracket with 1/2" x 2-1/2" bolts, washers, and nuts. Torque to 75 ft-lbs. (Fig 5)
14. Check all hardware for proper torque.
15. Check hardware after 500 miles.

FIG 5

