

Beat-Sonic[®] SLA-81

NO:000003

Installation Manual

Applicable to Toyota Land Cruise Prado and Lexus GX470 without Factory Navigation Systems

MODEL	YEAR	CHASSIS CODE
Land Cruiser Prado	2002 - 2006	VZJ121W/125W/KDJ121W/125W

- Features:**
- Allows installation of any aftermarket audio or video head units with speaker outputs
 - Original Vehicle (OEM) Amplifiers remains functional driving all speakers
 - Accepts 1 DIN or 2 DIN applications.

- Caution**
- This product is incompatible on vehicles with OEM Toyota or Lexus Navigation System or Multi-Vision Monitor Screens.
 - Due to the design of the OEM amplifier, the front-rear fader control is not functional


Dimension of the electronic audio adapter box
40 × 25 × 87.0mm 約210g

Package Content
Electronic Audio Adapter (1)
Face Panel (1), Brackets Left and Right (1 Set)
hardware screws (2 types, 4 each), Instruction Manual (1)


- Precautions and Warnings**
- Take caution to not destroy vehicle components, and use extreme cautions working near any pipes, lines, wires, and sharp metals. Keep away from moisture, and extreme heat / cold.

BeatSonic nor any affiliate distributors or retailer is not responsible for any injuries, or damage resulting from use or installation of this product. Obay all applicable laws and regulators.

- Upon Install Please Do the Following:**
- Disconnect all batteries and capacitors before disassembly and installation
 - Protect all wire harness using electrical tape or compatible methods
 - Check that all vehicle functions are normal after installation before driving the vehicle

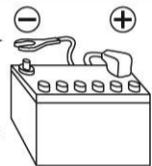


2 Connector Diagram

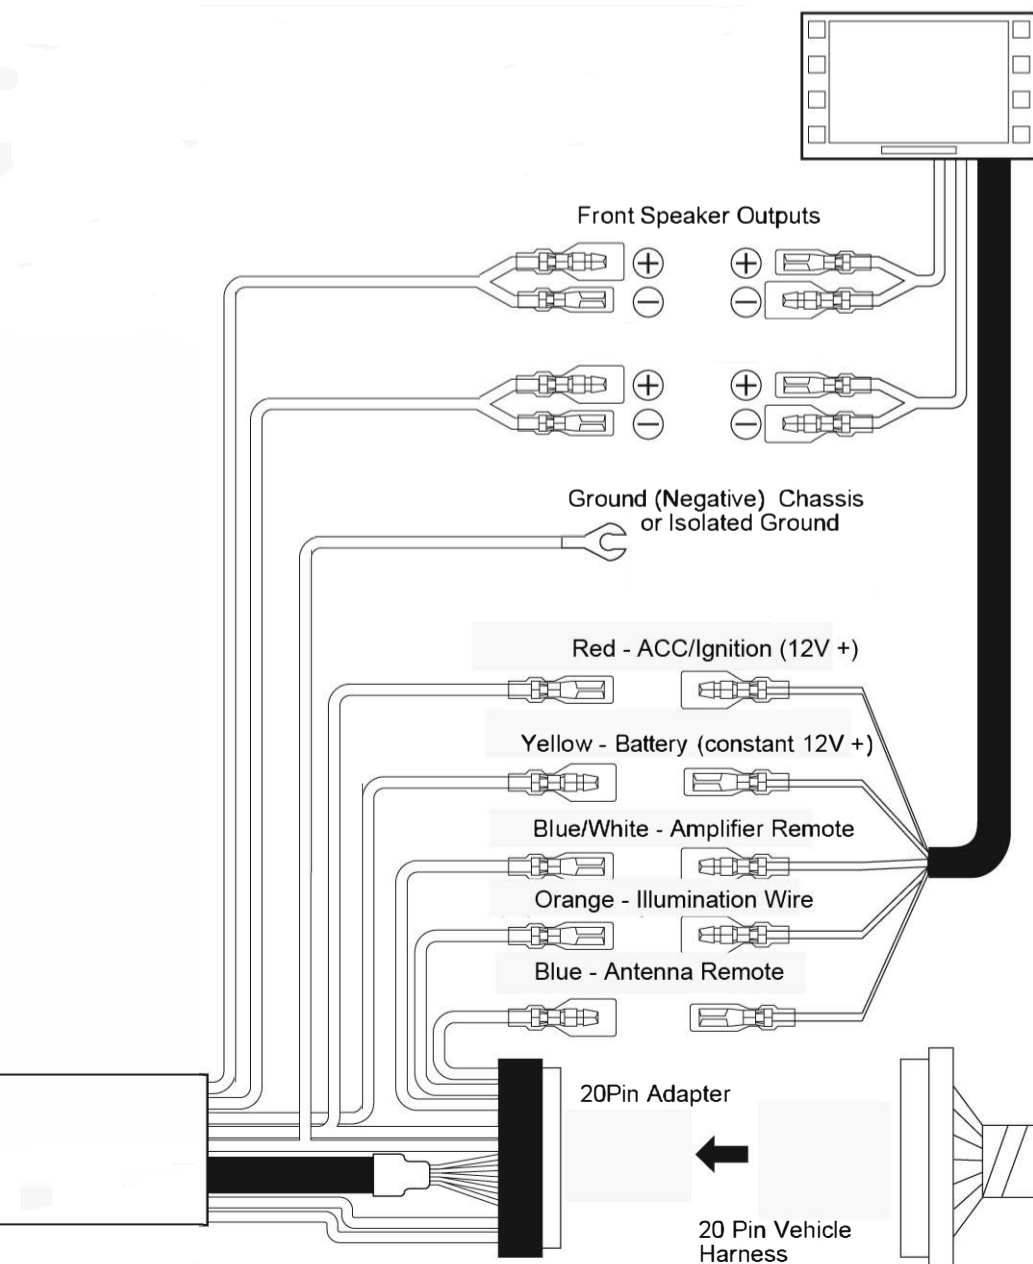


1 Removal of OEM Head Unit

1. Remove the shifter side panels from center console (3 hooks on each panels and 2 tabs)

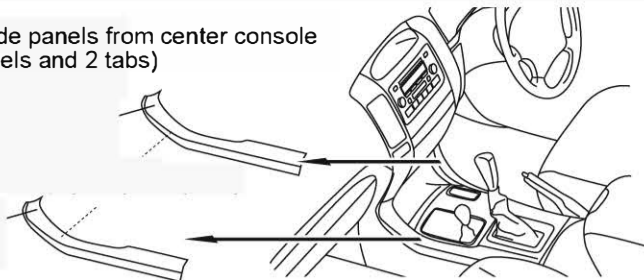


2. Remove the side air vent trim (6 hooks and 1 tab)

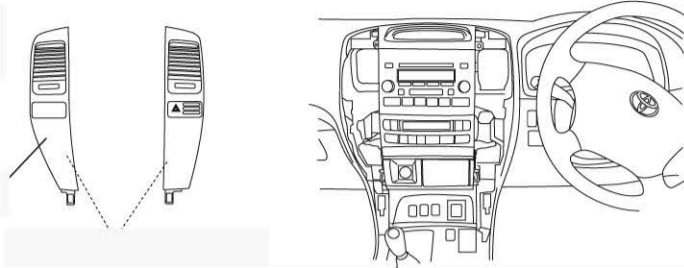


3. Remove the ash tray (4 hooks)

Remove the Audio Assembly (6 screws)

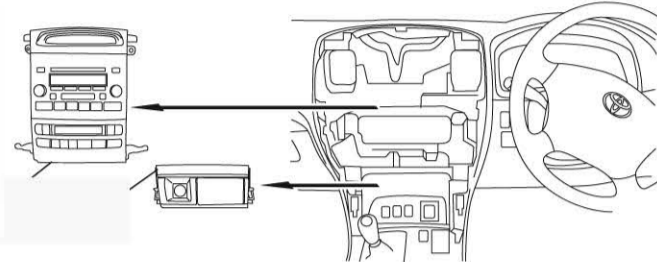

4. Remove the side hardware support brackets from the audio assembly


Remove the wire harness

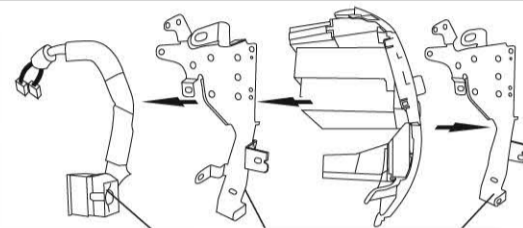

5. Remove the Multi-Display by pushing the unit forward after removing 6 screws and unhooking from 1 tab) and remove display face

Repeat the removal process with HVAC controller (Air controller)


Take caution to preserve the double sided tape for reuse. (or provide alternate tape)

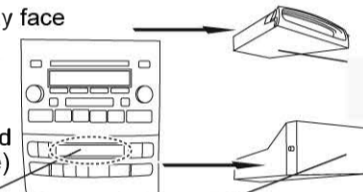

3 Installation of the audio system


1. Install the HVAC controller and Multi-Display to the Beat Sonic supplied face panel using 6 screws and align it properly.

Attach the display panel face.

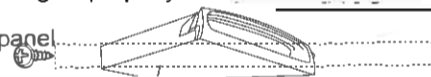

2. Diagram to the right, carefully identify and cut off the tabs as shown.


The tabs will not be needed for installation

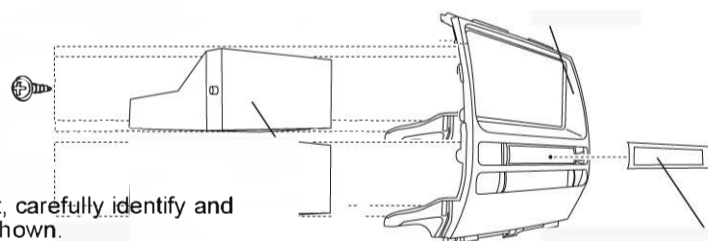


- 3.

Attach the side panels and hardware mounts on the left and right of the aftermarket head unit as shown.

Use the screws provided by the aftermarket radio to ensure that depth and lengths of the screws are correct for the unit.

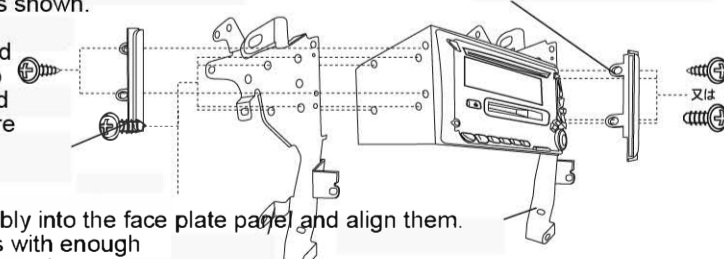

4. Install the entire assembly into the face plate panel and align them. Attach the wire harness with enough clearance, then screw together.

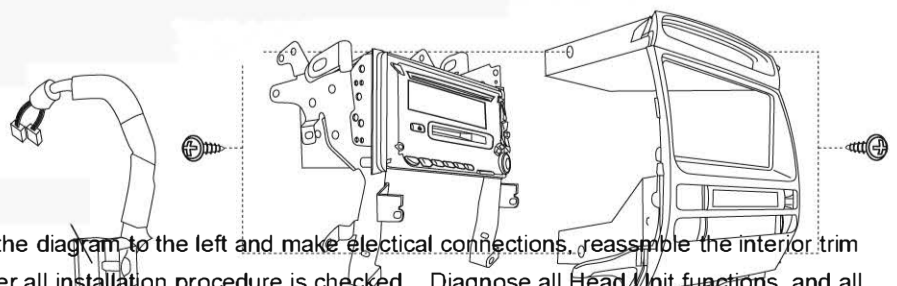

5. Follow the diagram to the left and make electrical connections, reassemble the interior trim
- 4 After all installation procedure is checked. Diagnose all Head Unit functions, and all Vehicle Controls before test drive.