



# Installation Instructions Front Floor Liner

Vehicle Application:  
Jeep® Wrangler JL (2 Door) and Unlimited (4 Door)  
2018 - current  
Part Number 51514

**⚠ WARNING** READ AND FOLLOW ALL INSTRUCTIONS. Unsecured Front Liners may shift, restricting pedal movement which may lead to loss of vehicle control.

TO AVOID RISK OF SERIOUS INJURY: Front Driver's Side Liner MUST be Secured with the anchors that came with your Jeep®. Replace factory carpet anchor if damaged or missing.


DO NOT STACK ANY OTHER LINERS OR MATS OVER OR UNDER your Bestop Floor Liner. Floor Liner MUST be anchored directly to carpet.


**⚠ WARNING** This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.



**WEAR SEAT BELTS AT ALL TIMES**

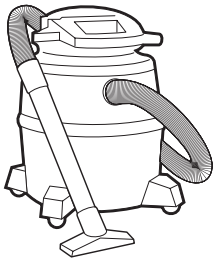Tools
 <p>Vacuum Cleaner</p>

Installation Time
 <p>15 minutes</p>
Skill Level
<p>① ② ③ ④</p> <p>1 - Easy</p>



# Installation Instructions Front Floor Liner

Vehicle Application:  
Jeep® Wrangler JL (2 Door) and Unlimited (4 Door)  
2018 - current  
Part Number 51514


## Parts List

- Required parts for installation      - Page number in Installation Guide


All Sections

Hardware

Page 3

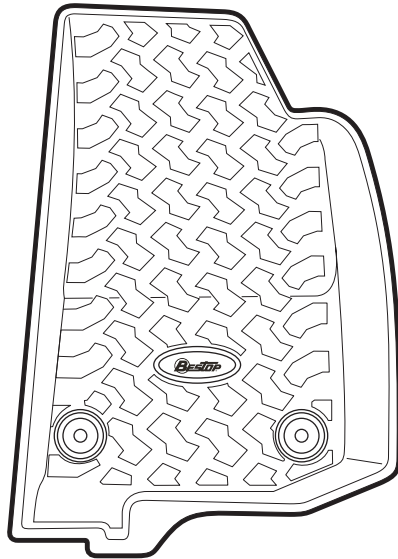

Driver's Side Liner  
Qty. 1

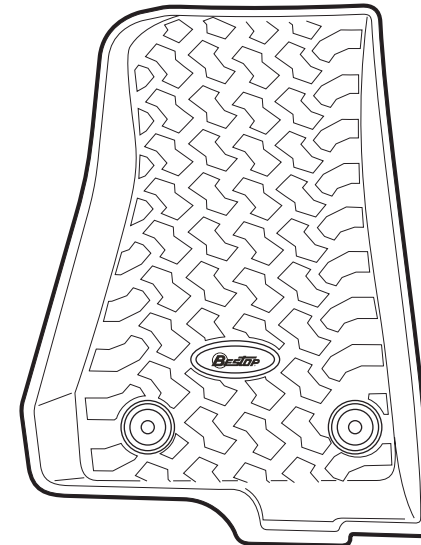

Passenger Side Liner  
Qty. 1


**Step 1**

Remove all existing Floor Mats or Liners, according to manufacturer's instructions. Factory installed liners will pull up/off the factory carpet anchors.


Do not stack or combine your Floor Liners over other floor mats or liners.

Vacuum the vehicle carpet and make sure it is completely dry.

**Hardware**

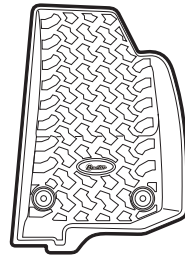


Driver's Side Liner  
Qty. 1

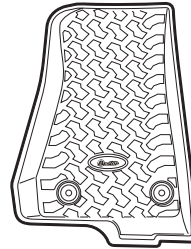

Passenger Side Liner  
Qty. 1

**Step 2**

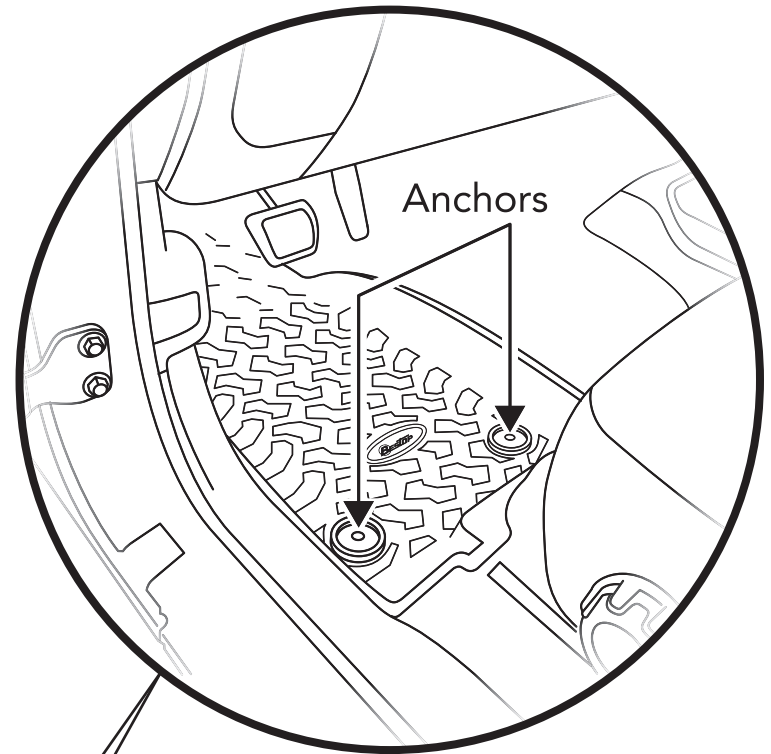

**Step 2**

Place the Driver Side Floor Liner into position in the driver's side foot well.

Make sure that the original equipment carpet anchor buttons pass completely through the anchor holes in the Bestop Floor Liner.

Press down on the floor liner anchors to SNAP them into position around the anchor buttons.

Repeat for the Passenger Side Floor Liner.

