



FRONT KITS: BRJK07F4, BRJK07F2, BTJK07F4, BTJK07F2



Jeep Wrangler JK BedRug/BedTred Interior Installation Instructions



Congratulations on choosing the finest interior flooring kit available for your Jeep. The BedRug/BedTred material is mold and mildew resistant, easily cleaned with water & household cleaning chemicals and extremely resistant to most chemicals.

- **Kit Contents:** Driver side front floor, passenger side front floor, mid section, rear floor (4-door kits only), heat shield material, hook fasteners, and instruction sheet.
- **Tools needed:** Flathead screwdriver, scissors, soap, water, and rubbing alcohol.

NOTE: If you have purchased both a front and a rear kit, it is recommended to install the rear kit first.

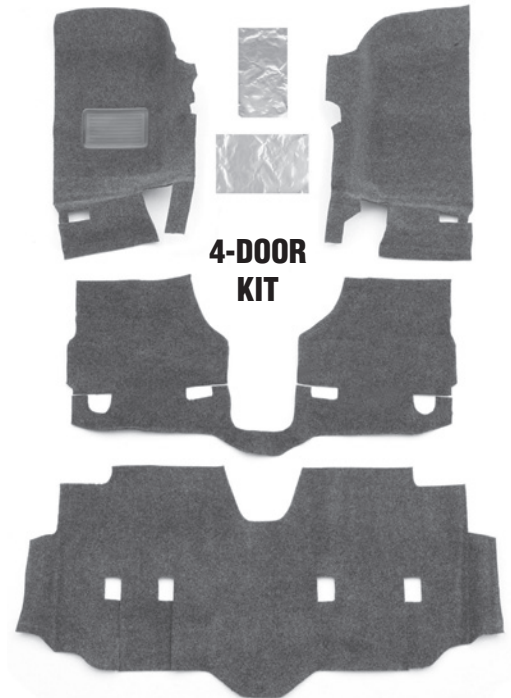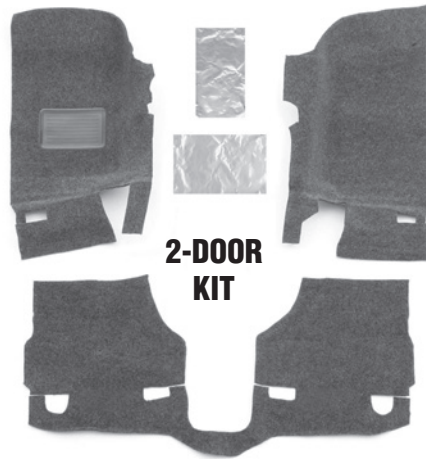

PREPARATION

1. Read all instructions before beginning installation.
2. Remove old Jeep flooring material (if equipped).
3. Wash and dry the floor pan areas thoroughly.
4. Place the hook fasteners on each piece of loop sewn on the back side of the BedRug. For BedTred installation, place the hook fasteners to the loop surface on the underside of the BedTred.
5. Cut the hook fasteners with tape backing to match the length of the loop sewn on the underside of each BedRug piece. Pre-install provided heat shields on underside of the two front pieces in areas, using the locator marks. (**Fig. 1**) Note: Passenger side heat shield is the larger of the two pieces.

IMPORTANT: Jeep floor should be at least 68°F (20°C) for maximum adhesion. Clean all areas with rubbing alcohol before applying tape. When removing backing, do not touch adhesive.

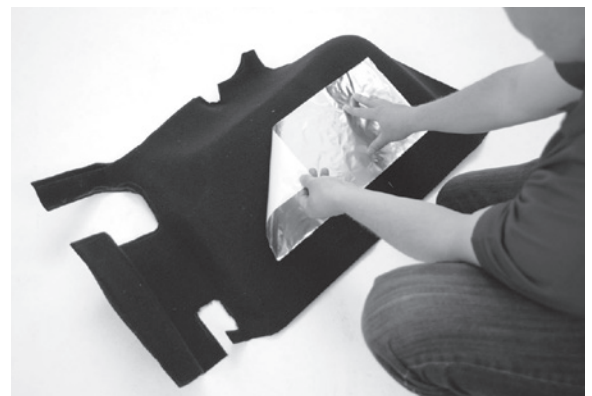


FIGURE 1: HEAT SHIELDS

INSTALLING FRONT FLOOR PIECES

6. Adjust the front seats to the rear most position to allow maximum clearance for installation. Place front floor pieces into place. Tuck under console and around seat brackets as shown. (**Fig. 2 and Fig. 3**)
7. Once properly aligned, pull back part to access the three pieces of hook fastener (**Fig. 4**). Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment. Repeat for other front floor piece.



FIGURE 2:



FIGURE 3:

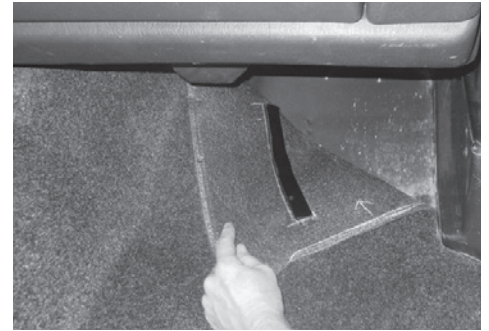


FIGURE 4:

INSTALLING MID SECTION

8. Adjust the front seats to the fully forward and tilted up (2-door passenger entry) position. Next place the mid section into place. Position the mid section around seat brackets (**Fig. 5 and Fig. 6**) and tuck under cupholder and console. (**Fig. 7**)
9. Once properly aligned, pull back part to access the four pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.



FIGURE 5:



FIGURE 6:



FIGURE 7:

INSTALLING REAR FLOOR (4-DOOR ONLY)

10. Place the rear floor section into place. Tuck the liner around and underneath the front and rear seat brackets (**Fig. 8 and Fig. 9**)

11. Once properly in place, pull back part to access the four pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.



FIGURE 8:



FIGURE 9:

FITMENT NOTE: The rear floor section is designed to fit on top of the rear wheel well pieces.

BEDTRED HOOK & LOOP PLACEMENT

