




800 EXT INSTALLATION DETAILS

INSTALLATION KIT INCLUDES

(2) Midgate Brackets, (4) 3/8 Bolts, (4) 3/8 Nuts

MIDGATE BRACKETS

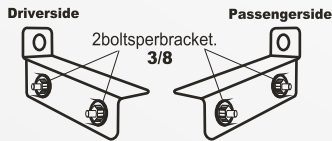

Tools Needed

(2) 1/2" Open end wrenches, Wrench for factory tie-down bolts = Hex Head (Torx on some models)

FACTORY TIE-DOWN REMOVAL

FIG 1 Remove 2 Factory tie-down bolts: (2 at midgate floor) Right and left sides of vehicle.

3050 XL BRACKET INSTALLATION

FIG 2 Place midgate brackets as shown and attach with tie-down bolts previously removed in **FIG 1**.

DO NOT TIGHTEN YET!

BEDSLIDE PLACEMENT & MOUNTING

Fig 3 Place the BEDSLIDE unit in vehicle up against midgate brackets. Using the BEDSLIDE latch located near the tailgate, unlatch the sliding floor and pull back approximately 12" to allow room to attach midgate brackets. **DO NOT** slide all the way out until the midgate brackets are secured! **If vehicle is not level during installation, temporarily secure the BEDSLIDE from movement.**

FIG 4 Using supplied bracket bolts, attach the (2) 3/8" nuts and bolts to BEDSLIDE and midgate brackets. 2 on the right side and 2 on the left side.

FIG 5 Square & align the BEDSLIDE with the vehicle and tighten all bolts to vehicle and the BEDSLIDE floor frame. Latch the sliding load floor in the closed position.

Your BEDSLIDE is now installed. GET TO IT!

*BEDSLIDE'S payload rating is based on even weight distribution. While BEDSLIDE rates the maximum payload per BEDSLIDE model it is the end user responsibility to abide by the vehicles payload rating. BEDSLIDE is not responsible if a vehicles payload rating is exceeded beyond manufactures specifications.

