

Supplied Hardware: [2] TRAX slot mounts,
[4] 1/4-20 X 1 1/4" phillips combo head,
[4] 1/4-20 serrated flange nuts, [2] Side towers,
[2] D-ring tie downs

BEDSLIDE
GET TO IT.






UPPER BIN
48" & 58"

Tools Needed: Phillips screwdriver, 7/16 wrench

STEP 1.

INSERT A MOUNT BLOCK INTO EACH GUARDRAIL



A. Loosen and remove the 1/4-20 x 5/8 set screw securing the plastic end cap on the ends of each GUARDRAIL. Then loosen and remove the 1/4-20 x 3/4 button head securing the GUARDRAIL to each of the SIDE TOWERS mounted on the BEDSLIDE. **B.** Insert a MOUNT BLOCK into the open end of each GUARDRAIL. **C.** Re-attach GUARDRAIL to the SIDE TOWERS along with the plastic end caps to each side.

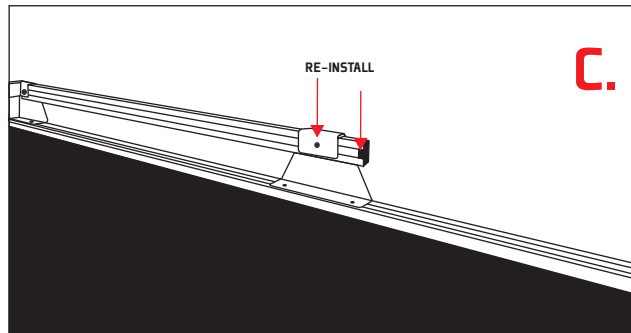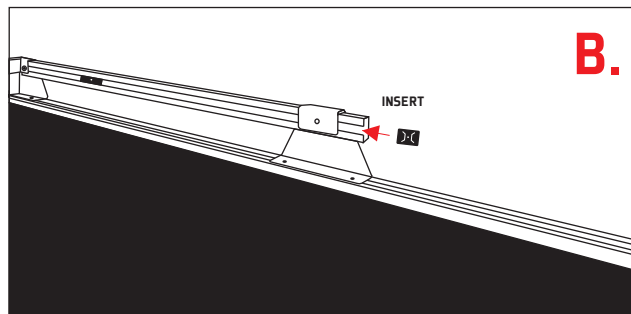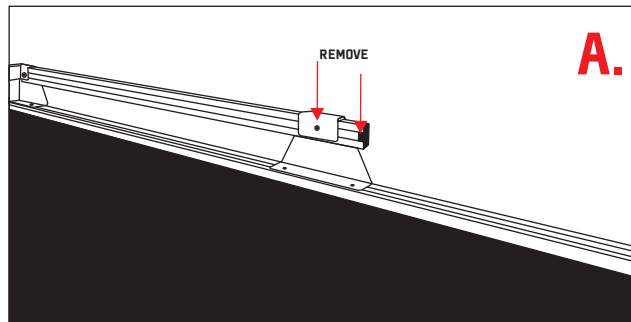

STEP 2.

ATTACH A MOUNTING BRACKET TO EACH GUARDRAIL


Attach a mounting bracket to each GUARDRAIL by tucking the open end with a single hole from underneath the GUARDRAIL and pull upwards so it sits tight against the aluminum GUARDRAIL. Secure with a D-ring tie down and repeat to the opposite side.

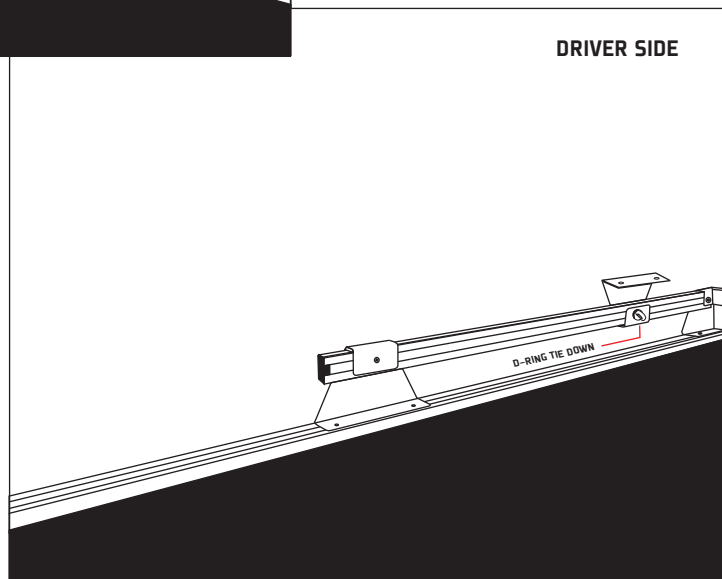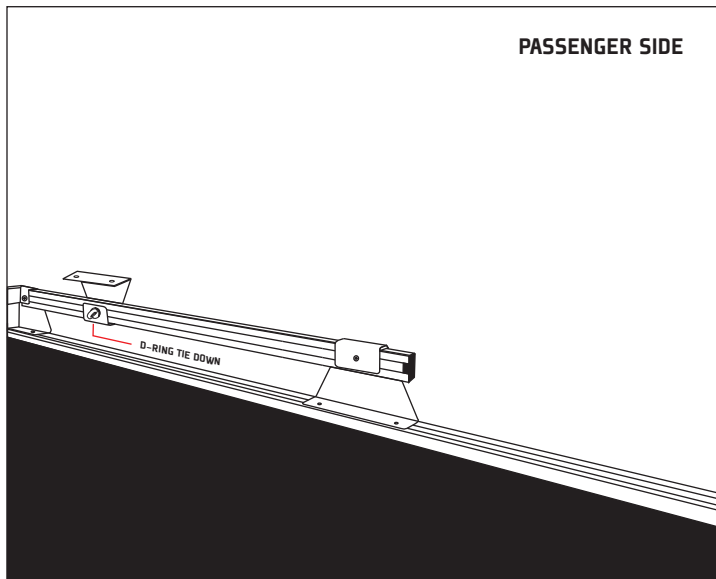

STEP 3.

ATTACH UPPER BIN TO THE MOUNTING BRACKETS

Rest the UPPER BIN on top of both the LEFT and RIGHT mounting brackets. Insert (2) 1/4-20 x 1 1/4" phillips combo head bolts through the pre-drilled holes located inside the BIN and through the holes on the mounting bracket. Secure with a 1/4-20 serrated flange nut at each bolt. Repeat to the opposite side.

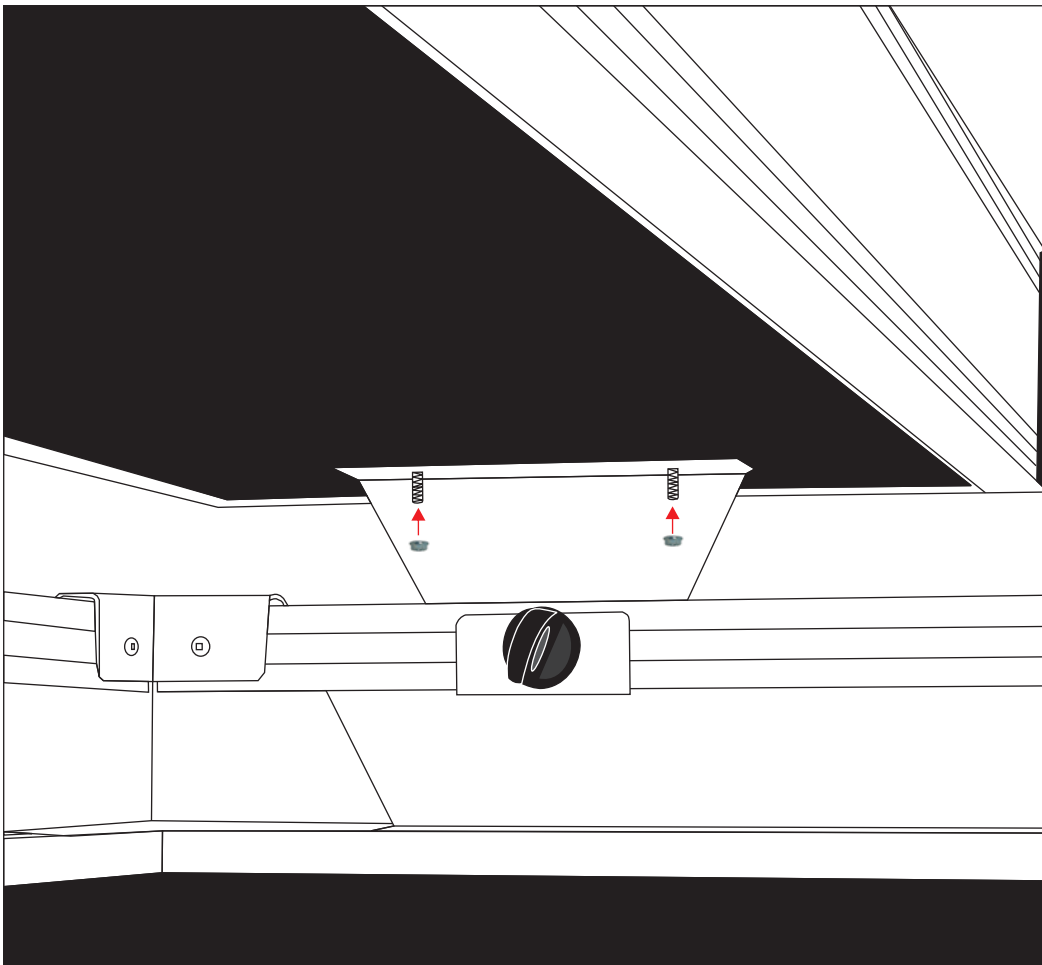

THAT'S IT! YOUR UPPER BED BIN IS INSTALLED!

