

INSTALLATION INSTRUCTIONS

Before you begin installation, make certain you have received the correct kit (reference parts received with shadow sheet) and make sure to read all installation instructions.

For the best results, the temperature of the dash and the dash pieces should be approximately 70 F (21 C). In colder conditions, use a heat gun or hair dryer to warm part surfaces to the ideal temperature.



STEP 1: CLEAN THE SURFACE


Caution! Factory part surface **MUST** be completely dry and free of contaminants for your dash kit to adhere properly!

Use the alcohol pads included in your kit to wipe all surfaces clean. In many cases, you may need to repeat this step more than once.

STEP 2: LIFT PART FROM BOX

Identify the location on the dash where each piece in your kit is to be applied. In preparation for the installation of each piece, simply lift it off the packing board.

Caution! To insure the strongest adhesion, avoid making direct contact with the adhesive surface.

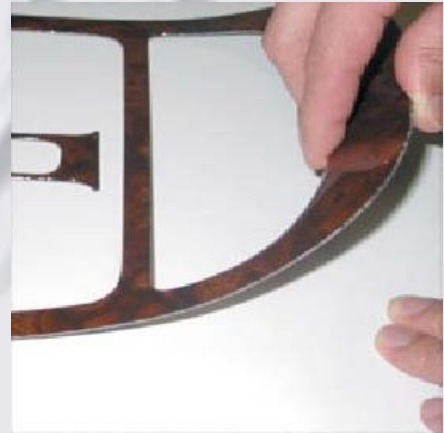

STEP 3: INSTALL PART

Starting with any of the larger pieces and beginning from any edge, apply the piece onto the dash.

Caution! Do not press firmly into place until you are comfortable with the parts position.

If the piece is not positioned properly, simply lift it up and reinstall to achieve the desired fit.

If you are in a colder than recommended installation climate, gently warm each piece with a heat gun or hair dryer to insure proper adhesion.

3M™5849 Installation

We *could* use cheaper 3M adhesive and individual part liner to cut costs, BUT if we did, B&I wouldn't have the easiest, safest and most secure installation system available.

Promoter NOT Required 3M™5849 is the premium acrylic foam adhesive, featuring **maximum bond-strength and built-in promoter**.

All other dash kits require you to apply promoter to each factory part prior to installation. This process is tedious and time-consuming (especially for 20+ piece kits) and, if a dash part is misaligned, it is very difficult to realign without damaging the factory part or dash part. Also, promoter pens/pads often leak unexpectedly, which may damage uncovered factory parts. And, promoter is toxic, which may be harmful to skin on contact. Finally, since only one small pen/pad is generally provided, you may need to purchase extra promoter to insure all dash parts stick properly.

No Individual Part Liner

B&I flat dash parts are packaged on clear liner sheets to save you the time and trouble of picking liner off each part.



Repositionable

IF misaligned, B&I dash parts can be repositioned for perfect fitting - a key benefit for 1st-time installers.

Flat Dash Overview



Step 1

Clean factory part surfaces with isopropyl alcohol (included).



Step 2

Gently tack down onto factory part. If misaligned, simply lift, realign and tack down again.



Step 3

Once aligned properly, firmly press into place.



No promoter to apply or extra to buy.



No individual liner to pick off each part.



Check out the collection of custom dash kits we offer.