



95224RTF Streamline Small Block Chevrolet Valve Cover.

Supplies Needed:

RTV Silicone

3/32" Allen Key

#271 Red Loctite® Thread Locker

Prep and finish valve cover as needed.

Remove polished trim pieces from packaging.


Place one external tooth lock washer on each 8-32 X 1/4 button head cap screw.

Apply #271 Red Loctite® to the threads of each 8-32 button head cap screw.

Place polished trim piece on valve cover and seat into recess. Install 8-32 button head cap screws and washers through inside of valve cover and into trim piece. Do Not Over-Tighten! Repeat for other valve cover.

Allow Loctite® to cure for a minimum of 1 hour before proceeding to the next step.

Finish polished trim installation by applying a liberal Dab of RTV silicone encasing the button head and washer to the valve cover (see caption for example). Allow RTV to fully cure before installing valve covers.

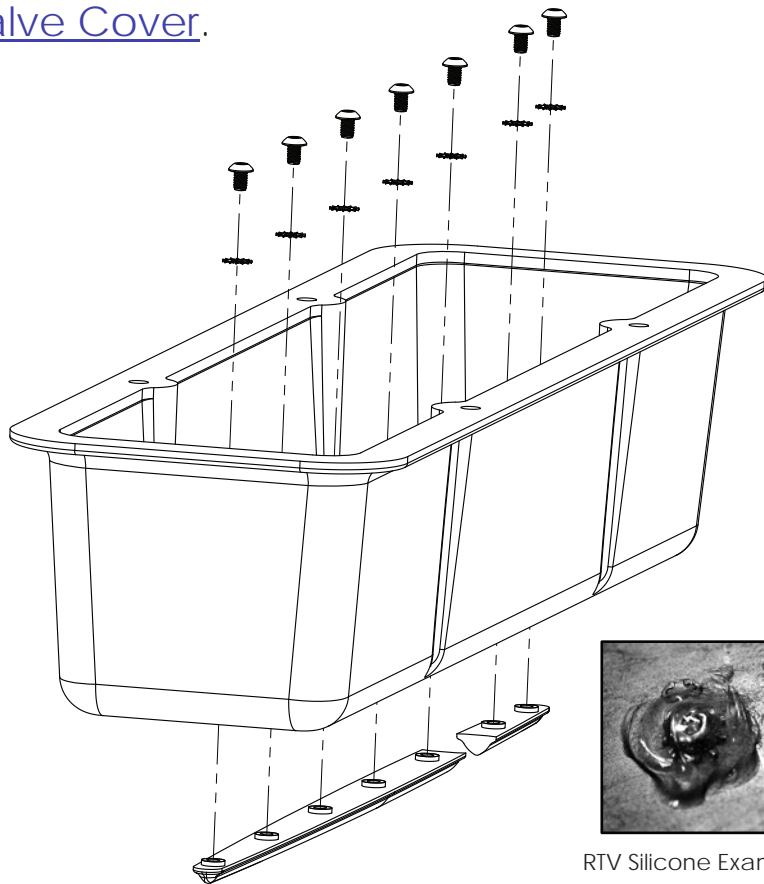

RTV Silicone Example