

E4-WM5-Y118A00 MOUNTING INSTRUCTION



Remove

Place vehicle on a chassis hoist, lift it and remove wheels.

Remove bottom mount.



The lower control arm must be supported by suitable means!

Remove top fixing mount.

Remove shock absorber from vehicle.

Remove original mounting parts.

Install



Do not remove fixing strap before fitting BILSTEIN shock absorber, it is to be use for mounting aid!


Fit BILSTEIN and/ or original mounting parts on shock absorber in reverse sequence of removal.

Fit assembled shock absorber to the vehicle in reverse sequence of removal.

**ALL DRAWINGS ARE GENERALIZED!
BRACKETS, ETC. SPECIFIC
TO STRUT ARE NOT SHOWN!**

For the torque and retorque of nuts the use of an impact screwdriver is not allowed because this would destroy the wrench. Self- locking nuts must only be used once

						List 1
	M8	M 10	M 12	M 14	M 16	Thread
	13	25	45	72	110	
	10	19	34	54	83	Torque ft lb

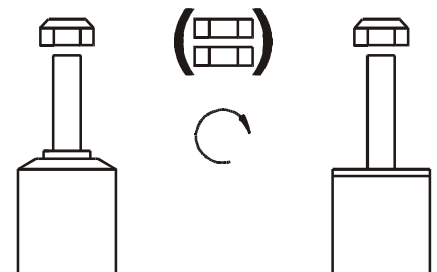


E4-WM5-Y118A00

MOUNTING INSTRUCTION



1. nut *B
2. plate *B
3. bumper *B
4. body
5. fixing strap (mounting aid) *B
6. bumper *B
7. plate *B
8. dust cover *B
9. BILSTEIN shock absorber

*B = parts supplied by BILSTEIN

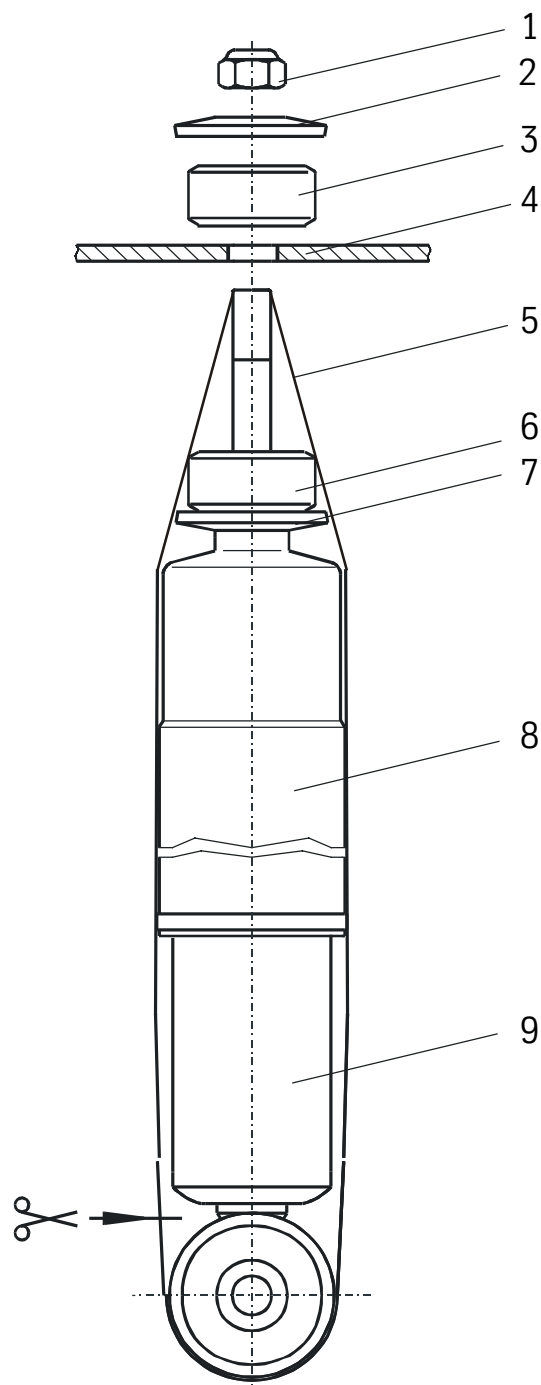

Do not remove fixing strap before fitting BILSTEIN shock absorber, it is to be use for mounting aid!