

E4-WM5-Y265A01

MOUNTING INSTRUCTION



ALL DRAWINGS ARE
GENERALIZED!
BRACKETS, ETC. SPECIFIC
TO STRUT ARE NOT SHOWN!


SUBARU Impreza 10.00 -

VA lks./ re.


front
left/ right

HA lks./ re.

rear
left/ right

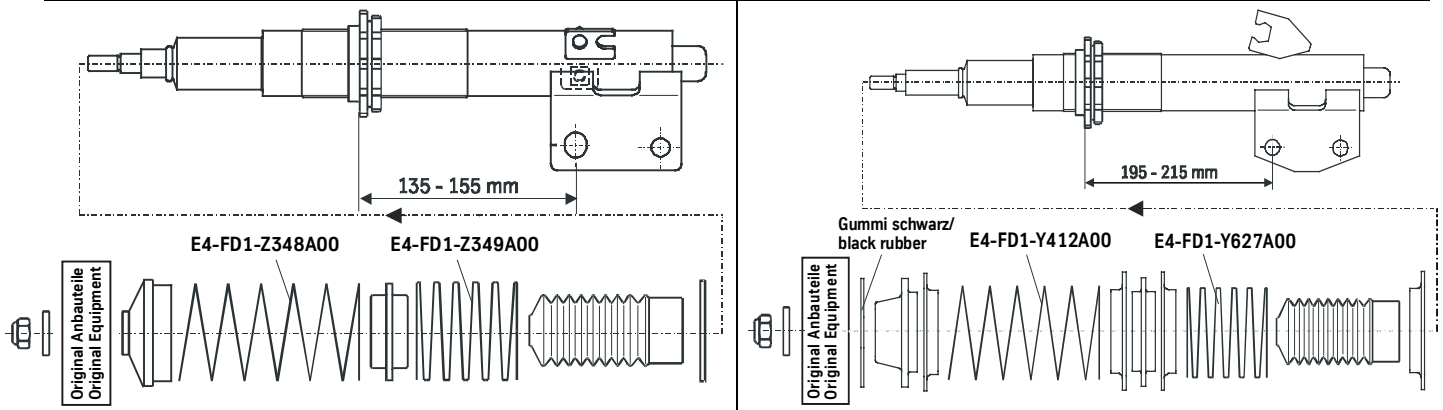

When fitting the intermediate ring (3), care must be taken to ensure that the shorter side of the ring is fit-ted to the helper spring (4).

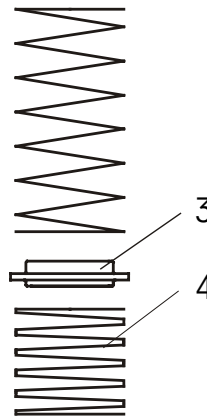

	M 8	M 10	M 12	M 14	M 16	
	13	25	45	72	110	List Thread Torque Nm Torque ft lb
	10	19	34	54	83	

For the torque and retorque of nuts the use of an impact screwdriver is not allowed because this would destroy the wrench.
Self-locking nuts must only be **used once**

E4-WM5-Y265A01

MOUNTING INSTRUCTION



Remove front/ rear

Place vehicle on a chassis hoist, lift it and remove wheels.



The lower control arm must be supported by suitable means!

Remove bottom mount.

Remove top fixing nut from support bearing.
Do not remove center nut at this time!

Remove complete strut and clamp it in an appropriate strut vise.

Using a suitable spring compressor, compress suspension spring until tension on support bearing is released.

Release center nut and remove original mounting parts and coil spring. Please refer to diagram to identify which parts will be replaced with BILSTEIN-supplied components.

Install front/ rear

Assemble BILSTEIN and/ or original mounting parts, as well as the new BILSTEIN springs on the BILSTEIN strut in reverse sequence of removal.



The adjustment range for front and rear axle (see lowering list) must be observed strictly!

The correct mounting position of the suspension springs can be determined by the printing on the springs; install them with the print upright.


Fit assembled BILSTEIN strut to the vehicle in reverse sequence to removal.

All rubber mounted struts/ shock absorbers must be tightened after the vehicle is let down to the ground. All other kind of mounting, like brackets for ex. must be tightened before the vehicle is let down to the ground.

E4-WM5-Y265A01 MOUNTING INSTRUCTION



general instructions for force adjustment

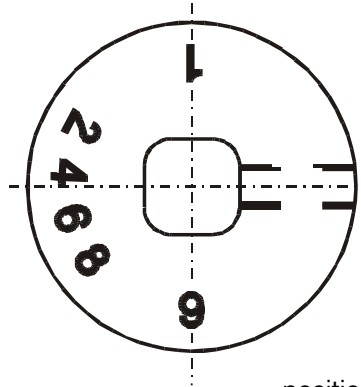

position **9** = **soft** (clockwise direction)

position **1** = **firm** (counter- clockwise direction)

During the adjustment you will hear a positive „click“ at each position of the adjustment.

The adjusting element of the struts is located at the bottom edge of the strut, covered by a blue plastic cap. That cap must be removed before adjusting. After the adjustment the cap must be replaced again.

AFTER INSTALLATION PLEASE OBSERVE THE FOLLOWING POINTS:

After installing the suspension system, caster and camber must be checked and adjusted according to manufacturer's specifications. -
Check and reset load- dependent brake compensator and ABS system according to manufacturer's specifications.

Check and adjust headlight aim. -

Because the vehicle has been lowered, freedom of movement for all wheel-/ tire- combinations must be checked. -

E4-WM5-Y265A01

MOUNTING INSTRUCTION




Lowering

The lowering we indicates here refers to the stationary height of a new vehicle. To obtain comparable measured values, the influence of the wheel/ tire combination on the stationary height to be calculated, should be eliminated.


So the vertical distance from wheel hub centre to the lower edge of the mudguard should be compared prior to/ after conversion. The extension of lowering has to be reduced by the series lowering.

	SUBARU Impreza 10.00 -
type	
B16	F4-GM5-A128-H0
front	bis ca./ up to approx. 45 mm
rear	bis ca./ up to approx. 45 mm
adjustment range front	135 – 155 mm
adjustment range rear	195 – 215 mm

FRONT

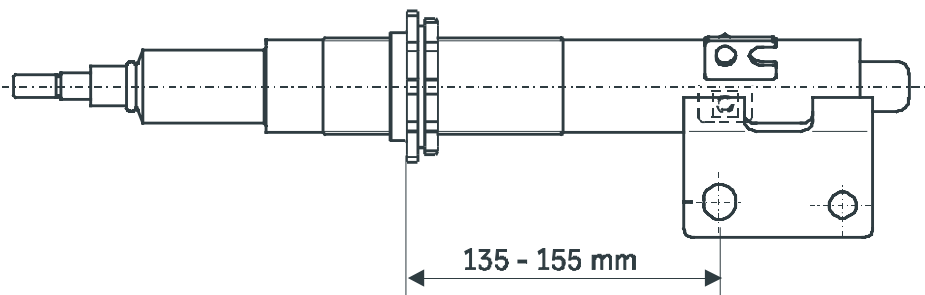

REAR

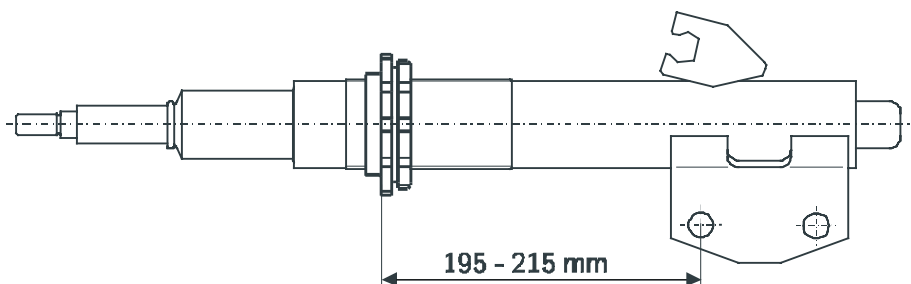

E4-WM5-Y265A01

MOUNTING INSTRUCTION



fig.1

Carefully check that the spring will not become loose at fully extended shock absorber length (max. lowering)!

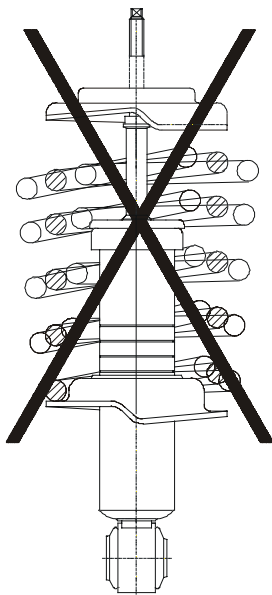


fig.2

The wheel or other chassis components must not touch spring plate, bracket or bracket hose holder (max. lowering)

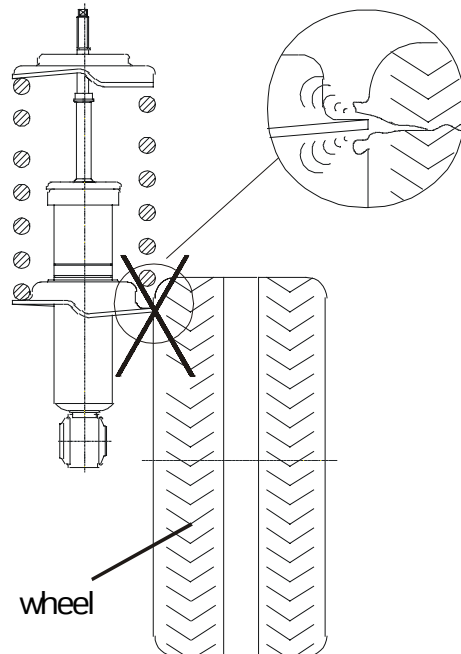


fig.3

The spring must not be fully compressed when the shock absorber is fully compressed (upper groove)!

