

INSTALLATION INSTRUCTIONS

PART#:7G113206SS/7G113206A
TAIL LIGHT GUARD FOR NISSAN TITAN 04-09

NOTE: Please read this information before installing. **NO DRILLING REQUIRED** for the installation of these taillight guards. To obtain correct installation, we recommend you follow these step by step installations carefully. Please take care when installing this product to protect the finish and your investment. The manufacturer takes no responsibility for injuries or damage to your vehicle caused during installation.

Step One: Locate hardware and check contents with hardware listed below.

)
;

Step Two: Remove factory screws that support the tail light to the vehicle (Figure 1). Carefully unfasten clips and remove tail light.

Step Three: Locate (1) – M6 x $\frac{3}{4}$ " Phillips Screw, (1) – M6 Nut, and (1) – M6 Flat Washers. Attach "L" Mounting Bracket with hardware listed in this step (Figure 2). Repeat this step for opposite side.

Step Four: Carefully re-install tail light and fasten factory clips on the tail light.

Step Five: Locate (2) – M6 x 3/4" Philips Screws and (2) – M6 Flat Washers. Position Taillight Guard onto vehicle and secure it by using the hardware listed in this step (Figure 1). Repeat this step for opposite side.

Step Six: Once the Taillight Guard is secure, attach the side of the Taillight Guard to the "L" Bracket by using the included (1) - #6 x $\frac{1}{2}$ " Sheet Metal Screw (Figure 3). Repeat this step for opposite side. Note: some bending of the bracket may need to occur to assure a snug fit.

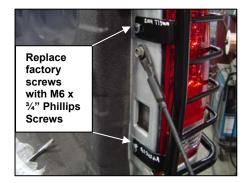






Figure 1 Figure 2 Figure 3

Cleaning Instructions: For stainless steel, an aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap, window and glass cleaner may be used to clean stainless steel. For gloss black finish: Mild soap, window and glass cleaner may be used. Do not use any type of polish or wax that contains abrasive that could damage the finish.

BLACK HORSE BULL BARS GRILLE GUARDS