

INSTALLATION INSTRUCTIONS

PART # 17BH23MA\17BH23MSS MODULAR GRILL GUARD DODGE DURANGO 98-03/DAKOTA 97-04

•	1 1	Set Set	Grille Guard Lower Mounting Brackets(left & right, when		2 4	pc pc	M10 Lock Washers M10 Oversized Flat Washer
	sitting in the car)			•	4	pc	M12 x 40mm Hex Bolts
•	1	Set	Upper Mounting Brackets	•	4	pc	M12 Lock Nuts
•	2	pc	M10 x 1" Hex Bolts	•	8	pc	12mm Flat Washers
•	2	рс	M10 Hex Nuts				

Instructions:


<u>Step One</u>: Locate the hardware kit and check the contents of with the hardware listed below. Illustrations are for reference only, styles vary with application.

<u>Step Two</u>: Locate the two factory bolts that hold the main bumper bracket in place on each side of the vehicle. Remove the nuts on them one side at a time. Orient the brackets as per Fig.#1 and loosely reinstall the nuts.


Step Three: Open the hood and remove the two innermost upper bumper bolts. Orient the upper support brackets as per Fig.#2. Loosely reinstall the factory bumper bolts.

Step Four: Place the front guard up to the vehicle with the lower mounting brackets going to the outside of the side plates.

Step Five: Make final adjustments to the alignment of the guard and tighten all the bolts at this tine. (NOTE: Make sure the guard does not interfere with the opening and closing of the hood.)

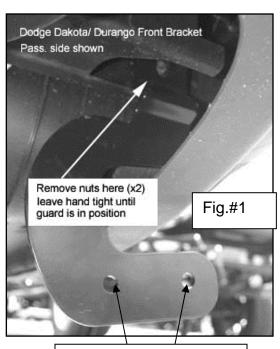

2pcs M12 x 40mm Hex Bolts 4pcs 12mm Flat Washers 2pcs M12 Lock Nuts

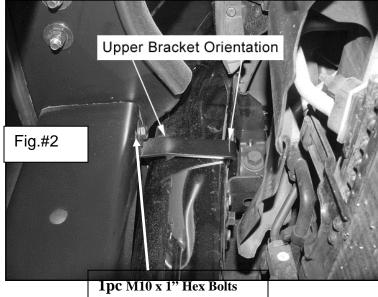

2pcs 10mm Oversized Flat Washer 1pc 10mm Lock Washer 1pc M10 Hex Nuts