# **INSTALLATION INSTRUCTION**

# ITEM NUMBER: 8D118501SS-DL

# BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN MURANO 09-15

# NOTICE:

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- $\Rightarrow$  Please periodically check and retighten all the hardware and clean the investment for a refresh look.

No.	Qty	Name	No.	Qty	Name
Φ	1	Rear bar	6	2	Hook bolt
Ø	1	Bracket-A-L	7	2	Hook bolt connection plate
			8	2	Plastic plate
3	1	Bracket-A-R	9	1	Shim
			10	4	M8*25 Hex bolt
4	1	Bracket-B-L	11	4	M10*35 Hex bolt
			12	10	D10 Flat washer
5	1	Bracket-B-R	13	6	O D10 Spring washer
9			13	6	D10 Hex nut

#### PART LIST

# **ASSEMBLY PROCEDURE:**

Step 1: Check all the contents are available in accordance with the above list.

Step 2: Remove the factory hex bolts as FIG.2, using these factory bolts to install Bracket-B-L, don't forget to put the shim

between the bracket and car frame. Do not tighten all the bolts.

Step 3: Using hook bolt to install Bracket-B-R. Do not tighten all the bolts. (FIG.3)

Step 4: Install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as **FIG.1.** Do not tighten all the bolts.

Step 5: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

Step 6: Installation is finished.

### FIG.1




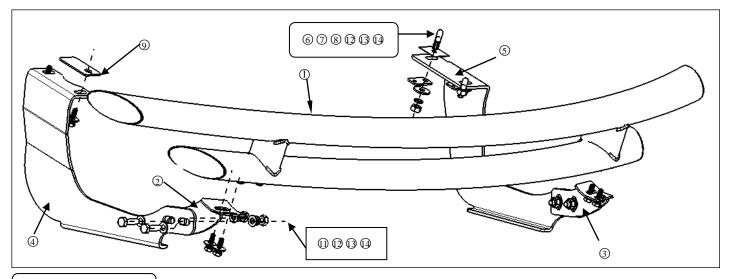



FIG.2

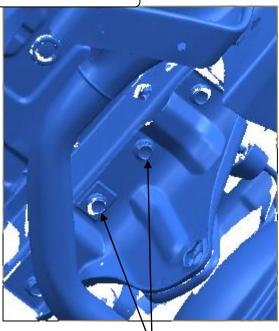


Remove the factory hex bolts

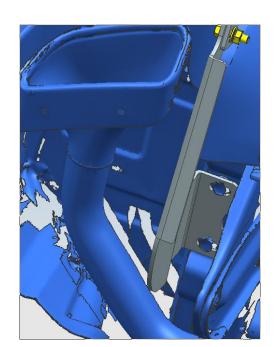

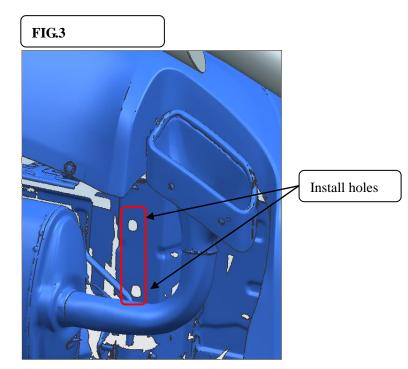

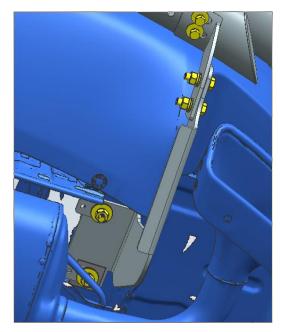

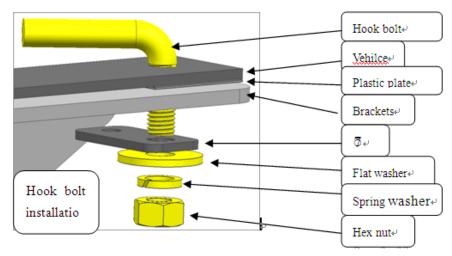

NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.