INSTALLATION INSTRUCTION

ITEM NUMBER: 8HO1SS-DL

BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA ODYSSEY 2015

NOTICE:

- ⇒ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- ≓ Please periodically check and retighten all the hardware and clean the investment for a refresh look.


PART LIST


FARI LISI					
No.	Qty	Name	No.	Qty	Name
đ	1	Rear bar	6	4	Hook bolt
2	1	Bracket-A-L	Ø	4	Hook bolt connection plate
			8	4	Plastic plate
3	1	Bracket-A-R	9	4	M8*25 Hex bolt
			1:0	4	M10*35 Hex bolt
4	1	Bracket-B-L	Ħ	12	D10 Flat washer
			13	8	D10 Spring washer
5	1	Bracket-B-R	В	8	D10 Hex nut

ASSEMBLY PROCEDURE:

- Step 1: Check all the contents are available in accordance with the above list.
- Step 2: Using hook bolt to install Bracket-B-L. Do not tighten all the bolts. (FIG.2)
- Step 3: Using hook bolt to install Bracket-B-R. Do not tighten all the bolts. (FIG.3)
- Step 4: Install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as FIG.1. Do not tighten all the bolts
- Step 5: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.
- Step 6: Installation is finished.

FIG.1

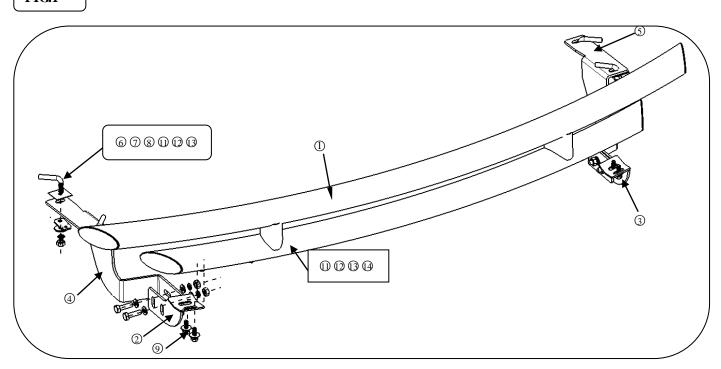

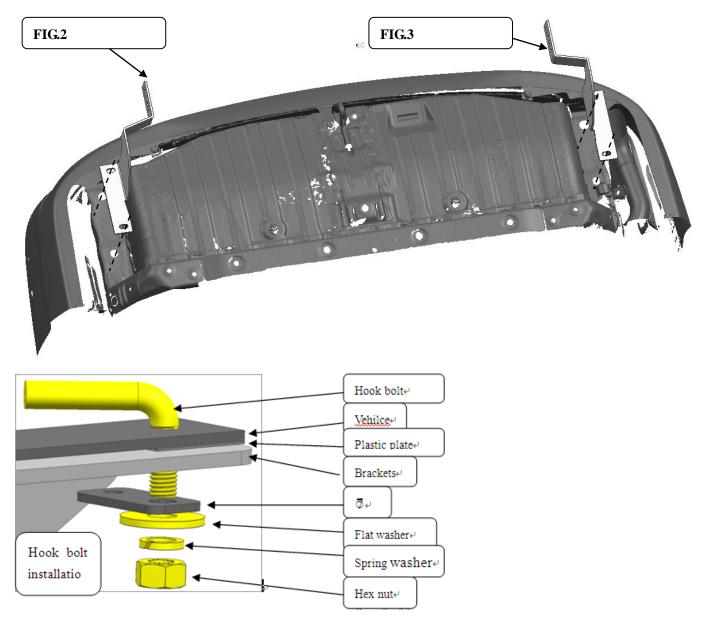

NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.