



INSTALLATION INSTRUCTIONS
PREMIUM RUNNING BOARD BRACKETS FOR TOYOTA RAV4
2019-2021

PART # PR-T369BK

Before Installation

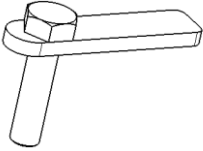
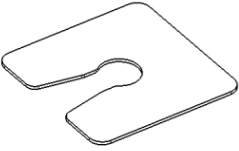
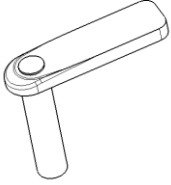
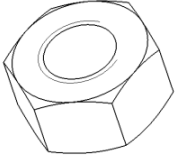
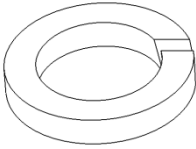
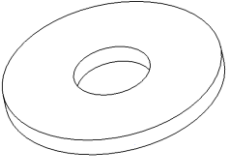
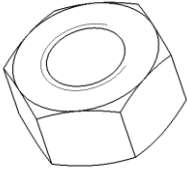
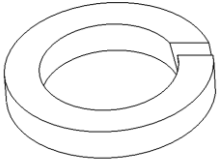
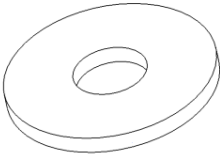
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

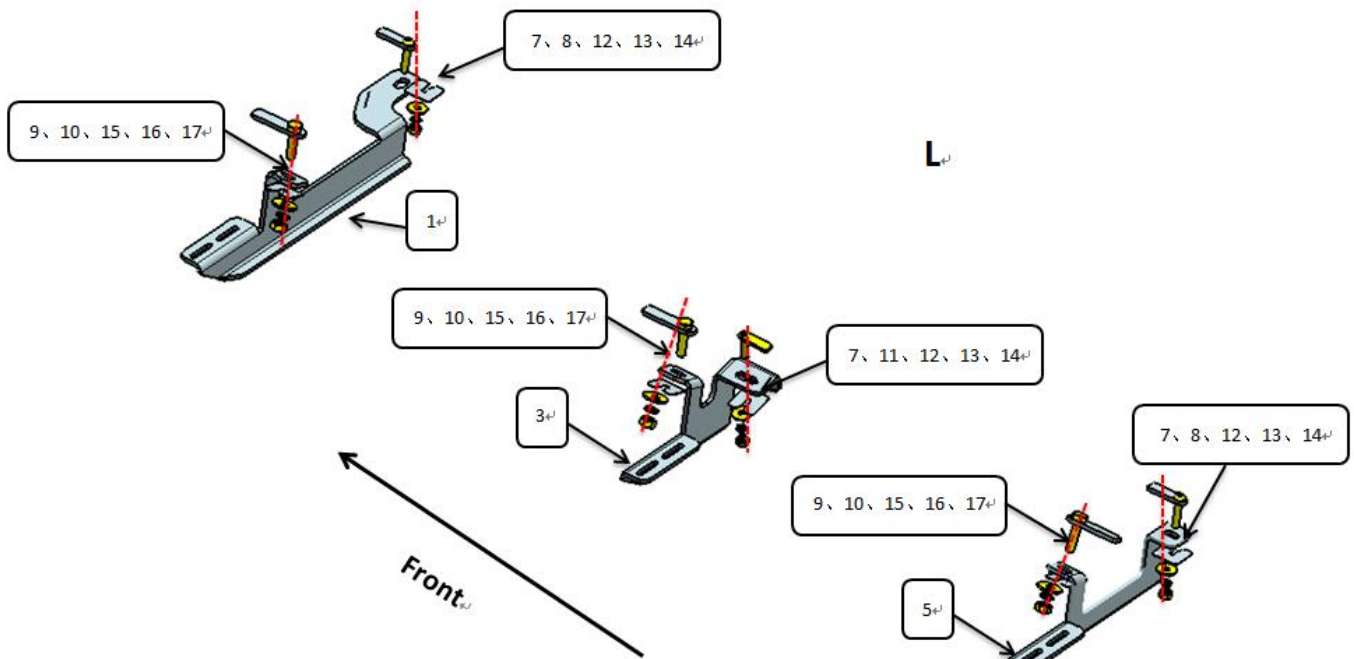
Parts list

NO.	QTY	PIC	NO.	QTY	PIC
①	1	Front mounting bracket (L)	②	1	Front mounting bracket (R)
③	1	Center mounting bracket (L)	④	1	Center mounting bracket (R)
⑤	1	Rear mounting bracket (L)	⑥	1	Rear mounting bracket (R)
⑦	6	Plastic buckle M8	⑧	4	T-bolt M8

<p>⑨</p>	<p>6</p>	 <p>T-bolt M10</p>	<p>⑩</p>	<p>6</p>	 <p>Plastic buckle M10</p>
<p>⑪</p>	<p>2</p>	 <p>Flat head T-bolt M8</p>	<p>⑫</p>	<p>6</p>	 <p>Hex nut M8</p>
<p>⑬</p>	<p>6</p>	 <p>Spring washer D8</p>	<p>⑭</p>	<p>6</p>	 <p>Flat washer D8</p>
<p>⑮</p>	<p>6</p>	 <p>Hex nut M10</p>	<p>⑯</p>	<p>6</p>	 <p>Spring washer D10</p>
<p>⑰</p>	<p>6</p>	 <p>Flat washer D10</p>			

Installation Steps

INSTALLING PICTURE:



Step 1: Verify that all parts are present according to the manual.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.