



INSTALLATION INSTRUCTION

STEP BOARD FOR TOYOTA SIENNA 11-12






















ITEM NO: RUNTY91

ATTENTION



1. Please read this installation instruction before installing this part.
When install it, please pay attention to protecting your vehicles.

2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

PARTS LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Step Board		2	lateral symmetry	⑩	T hex Bolt		6	M8X30
②	front mount bracket		2	lateral symmetry	⑪	Flat washer		6	M8
③	back mount bracket		4	lateral symmetry	⑫	Lock washer		6	M8
④	middle strengthner muscle		2	lateral symmetry	⑬	Hex Nut		6	M8
⑤	back strengthner muscle		2	lateral symmetry	⑭	Hex Bolt		12	M6X25
⑥	Hex Bolt		8	M10X30	⑮	Flat washer		12	M6
⑦	Flat washer		14	M10	⑯	Lock washer		12	M6
⑧	Lock washer		14	M10	⑰	Hex Nut		12	M6
⑨	Hex Nut		14	M10	⑱	U hex Bolt		2	M10 44x40x牙长20
⑲	hex Bolt		4	M8X20	⑳	Flat washer		2	
					㉑	T型螺丝		2	M10x40 (60x20x5)

no tyre of instruction

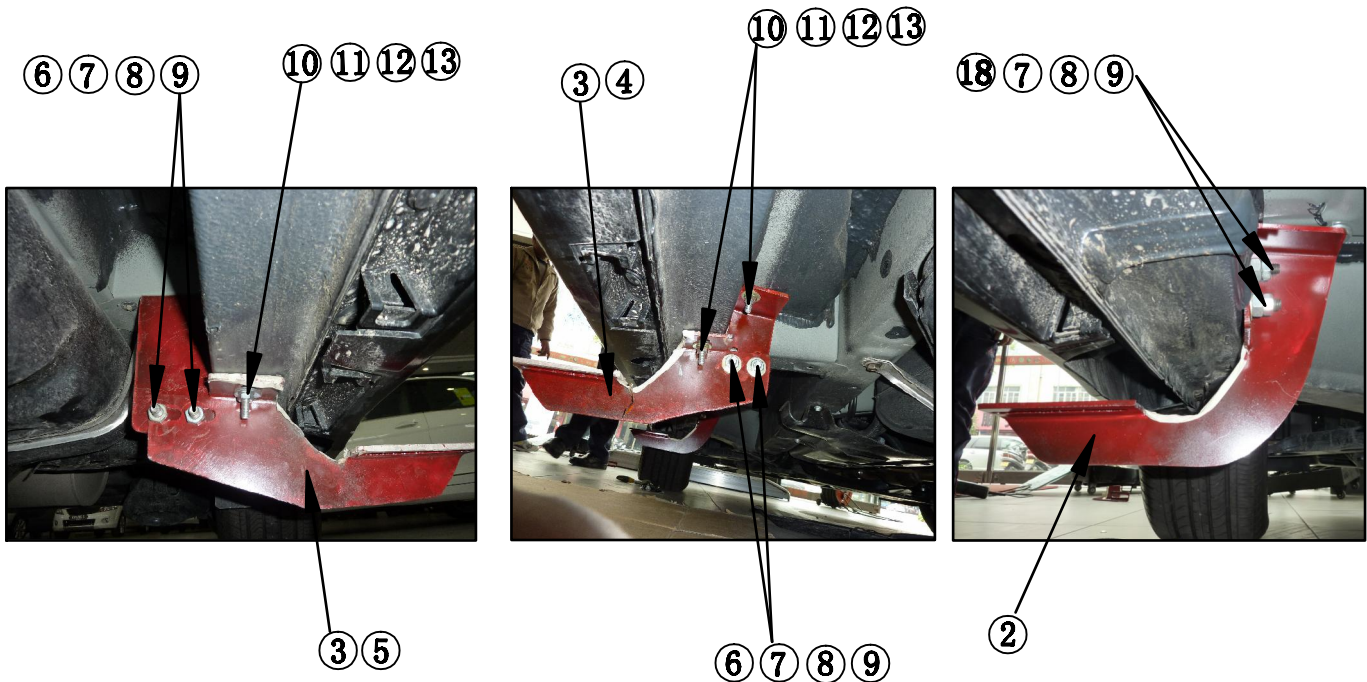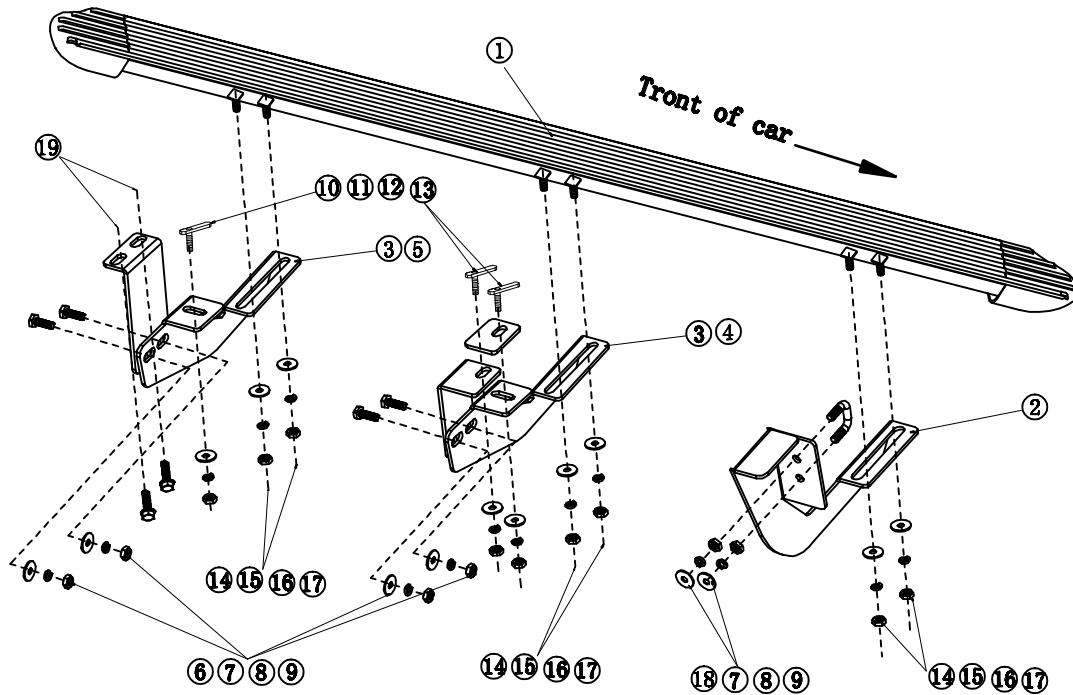

INSTALLATION STEPS:


STEP 1. Check the parts in the box carefully if match above list .

STEP 2. Pls prepare the tools for installation,
follow as:10-12、12-14、14-17wrench.


STEP 3. Put strengthner muscles 4 5 on the mount brackets
2 3 with M10X20 bolt 6 , then tighten it.

STEP 4. Put the mount brackets 2 3 on the girder of the
car with bolts 10 18 19 , then tighten it.

no tyre of instruction

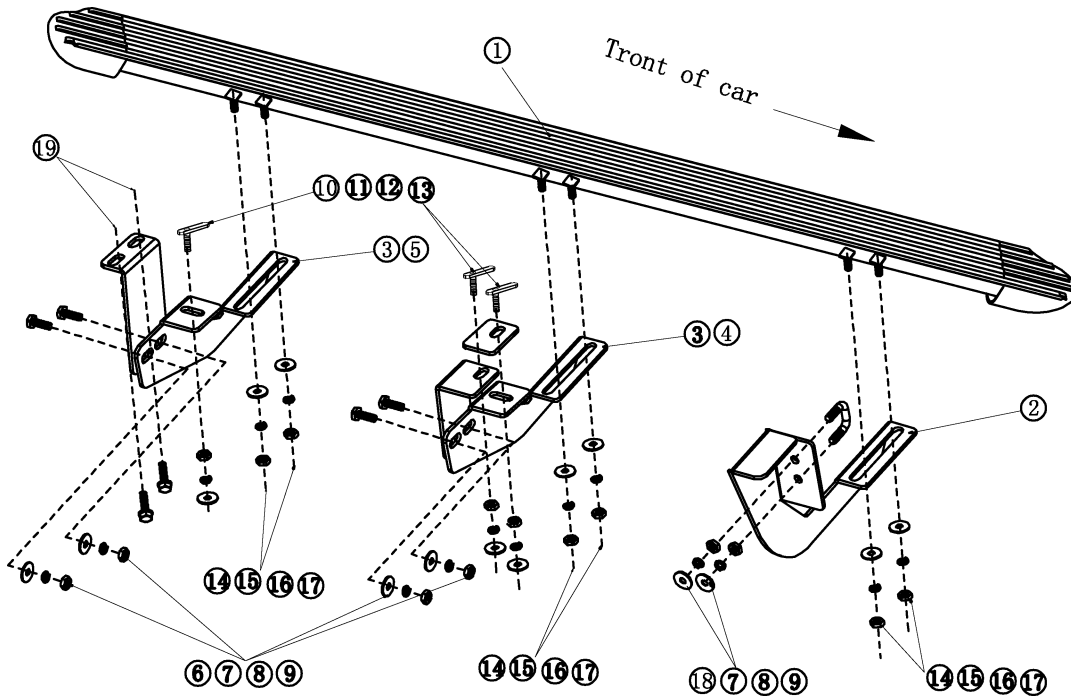

have tyre of instruction

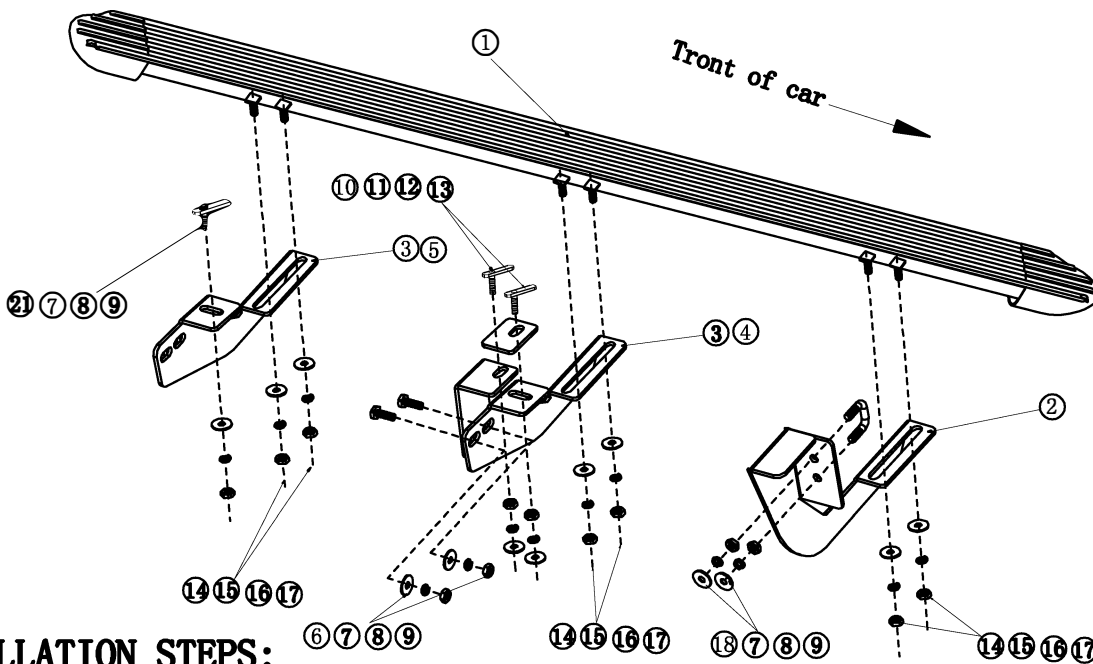

INSTALLATION STEPS:

STEP 1. Check the parts in the box carefully if match above list .

STEP 2. Pls prepare the tools for installation,
follow as:10-12、12-14、14-17wrench.

STEP 3. Put strengthner muscles (4) (5) on the mount brackets
(2) (3) with M10X20 bolt (6) , then tighten it.

STEP 4. Put the mount brackets (2) (3) on the girder of the
car with bolts (10) (18) (19) , then tighten it.