



INSTALLATION INSTRUCTIONS

PREMIUM RUNNING BOARD BRACKET FOR VW ATLAS 2019

PART # BR-W20

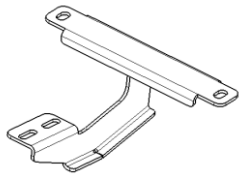
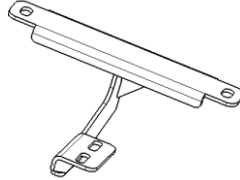
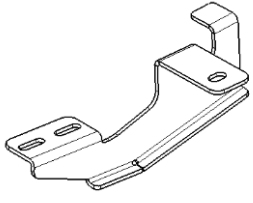
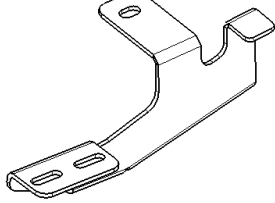
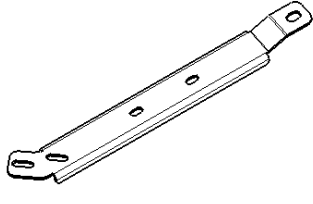
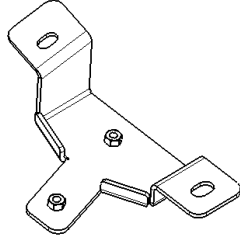
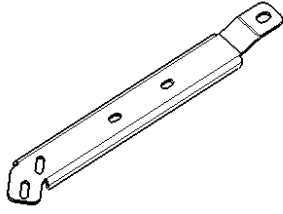
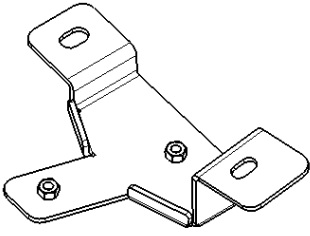
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

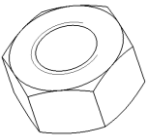

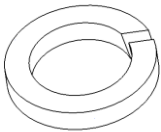
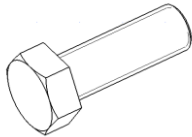
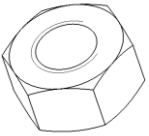


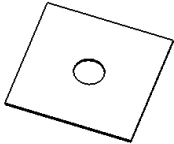



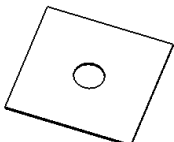
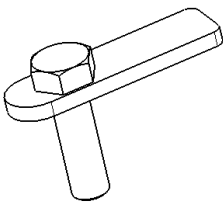
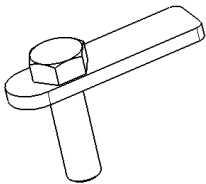
Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

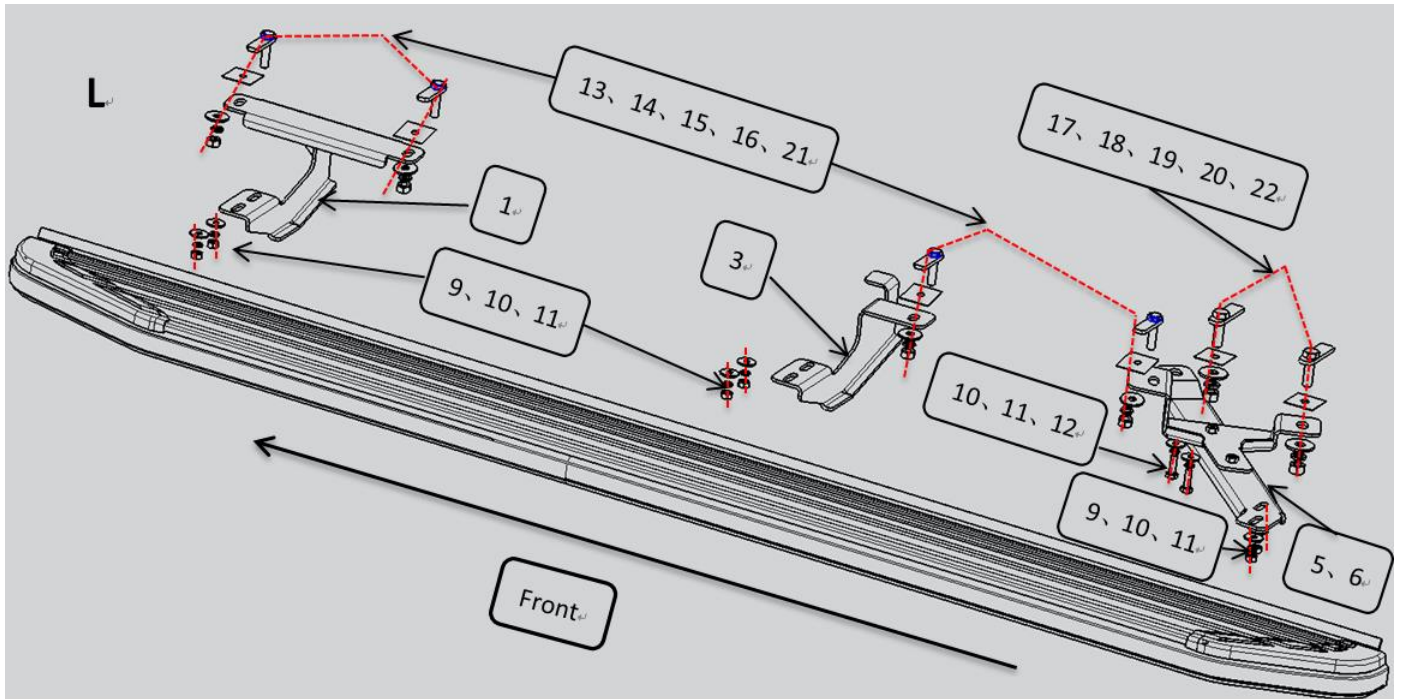
NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front Bracket (L)	②	1	 Front Bracket (R)
③	1	 Middle Bracket (L)	④	1	 Middle Bracket (R)
⑤	1	 Rear Bracket 1 (L)	⑥	1	 Rear Bracket 2 (L)
⑦	1	 Rear Bracket 1 (R)	⑧	1	 Rear Bracket 2 (R)

PREMIUM RUNNING BOARD BRACKET FOR VW ATLAS 2019

<p>⑨</p>	<p>12</p>	 <p>Hex Nut M 8</p>	<p>⑩</p>	<p>16</p>	 <p>Large Washer D 8</p>
<p>⑪</p>	<p>16</p>	 <p>Spring Washer D 8</p>	<p>⑫</p>	<p>4</p>	 <p>Hex bolt M8-25</p>
<p>⑬</p>	<p>8</p>	 <p>Hex Nut M 10</p>	<p>⑭</p>	<p>8</p>	 <p>Large Washer D 10</p>
<p>⑮</p>	<p>8</p>	 <p>Spring Washer D 10</p>	<p>⑯</p>	<p>8</p>	 <p>PVC D10</p>
<p>⑰</p>	<p>4</p>	 <p>Hex Nut M 12</p>	<p>⑱</p>	<p>4</p>	 <p>Large Washer D 12</p>
<p>⑲</p>	<p>4</p>	 <p>Spring Washer D 12</p>	<p>⑳</p>	<p>4</p>	 <p>PVC D12</p>
<p>㉑</p>	<p>8</p>	 <p>T-bolt M10</p>	<p>㉒</p>	<p>4</p>	 <p>T-bolt M12</p>

Installation Steps

Installation Fig.



Step 1: Verify all parts are present.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.