








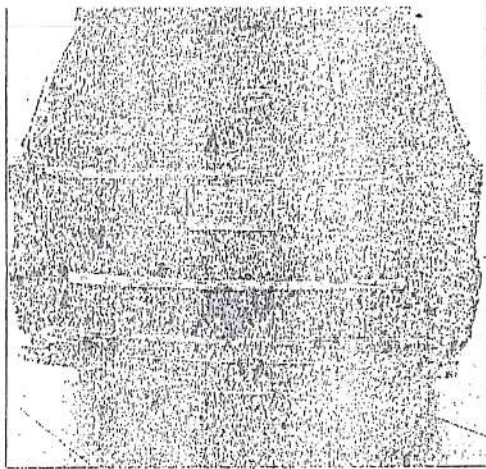
INSTALLATION INSTRUCTION  
Rear Guard FOR VOLKSWAGEN AMAROK Pickup 13  
ITEM NO: 8B021SS-DL

**ATTENTION**


1. Please read this installation instruction before installing this part.  
When install it, please pay attention to protecting your vehicles.
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

**PARTS LIST**

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Rear guard		1		⑤	Hex Nut		8	M12
②	Mount Bracket		2		⑥	flat washer		12	M12
③	"U" Bolt		2	M12	⑦	Lock Washer		8	M12
④	Bolt		4	M12X30					




①

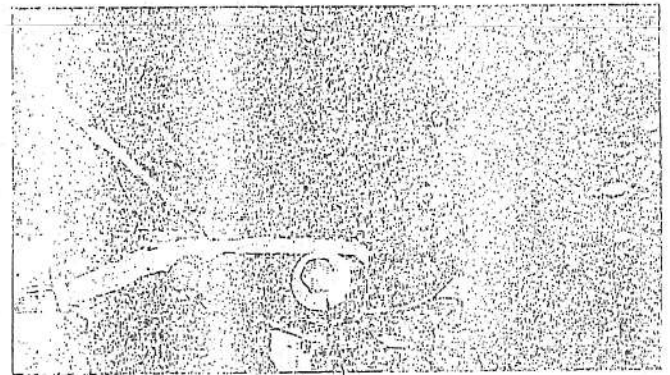


④ ⑤ ⑥ ⑦

③ ⑤ ⑥ ⑦

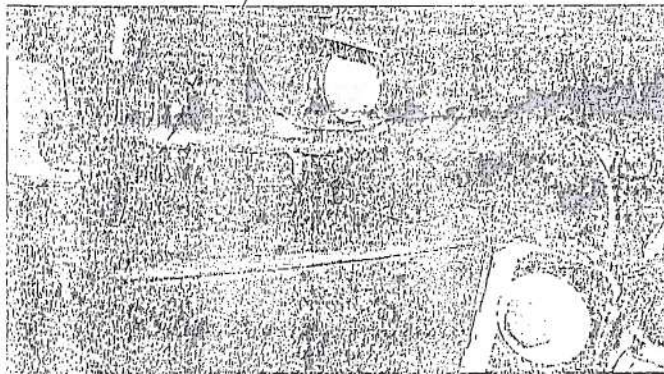

② ④ ⑤ ⑥ ⑦

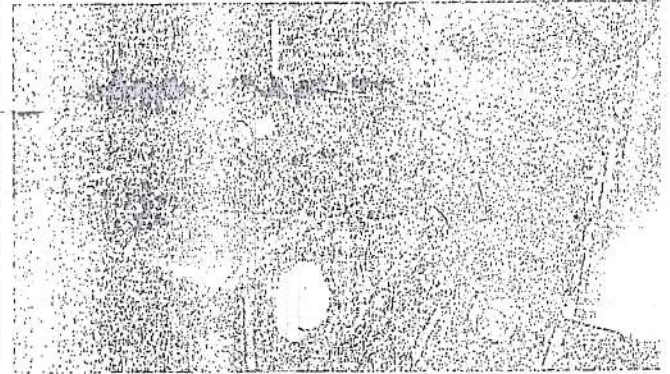

### INSTALLATION STEPS

STEP 1: Check the parts in the box carefully if match above list

STEP 2: Pls prepare the tools for installation, follow as: 10-12 wrench, 14-17 wre  
17-19 wrench.

STEP 3: Put the mount bracket into the girder of the car, and tighten it with  
③ "U" Bolt .

STEP 4: Install the Rear guard to the mount bracket, and tighten it with ④  
MM12X30 Bolt.

STEP 5: Installation is finished.

Learn more about other grille guards and bull bars by [Black Horse](#) on our website.