













INSTALLATION INSTRUCTION


SPRILLE GUARD FOR 2012 CRV

ITEM NO: 8B0520DSS - DL

1. Please read this installation instruction before installing this Rear guard.
When install it, please pay attention to protecting your Rear guard.
2. When you use it, please check this Rear guard at a fix time-lapse, such as one month or two month.

(PARTS LIST)

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
A	rear guard		1		G	M12 nut		4	M12
					F	Thin Tooth bolt		4	M10x1.25x25
	mount bracket 1		1		T	M10 lock washer		4	M10
	mount bracket 2		1		K	M10 lock washer		4	M10
D	M12x30 bolt		4	M12x30					
I	M12 lock washer		8	M12					
	M12 lock washer		4	M12					

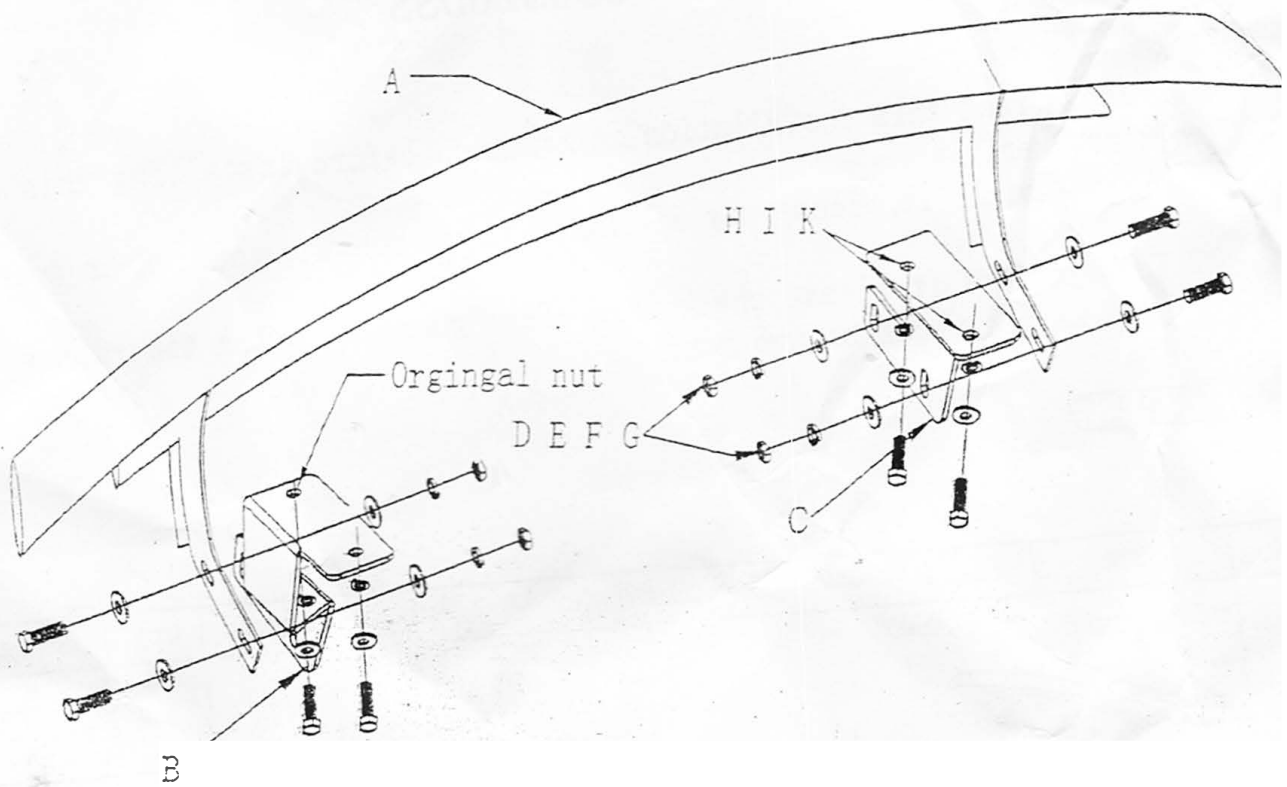

INSTALLATION STEPS

- STEP 1: Check the parts in the box carefully if match above list;
- STEP 2: Pls prepare the tools for installation, follow as: 14-17wrench. 17-19 wrench;
- STEP 3: Put the mount bracket into the girder of the car, and tighten it with the M10X25 bolt;
- TEP 4: Install the Rear guard to the mount bracket, with M12X30 hex bolt;
- TEP 5: Installation is finished