

Attention:


- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference. there might be some differences between pictures and real parts but no affect for your fitting.

PART LIST


NO.	NAME	QTY	REMARK	NO	NAME	QTY	REMARK
1	Side Tube(D)	1		9	T-bolt 4-1	4	
2	Side Tube(P)	1		10	Hexagon Nut	12	M10
3	Bracket 1 (D)	1		11	Deformed Bolt	8	M10*35
4	Bracket 1 (P)	1		12	Plastic Fixture	12	Φ10
5	Bracket 2 (D)	1		13	Deformed Bolt Sleeve	8	
6	Bracket 2 (P)	1		14	Large Washer	24	Φ10x30x2.5
7	Bracket (D)	1		15	Spring Washer	24	Φ10
8	Bracket (P)	1		16	Hexagon Bolt	12	M10x35

Remark: The installation way for the driver side is same with the passenger side.

INSTALLATION PICTURE

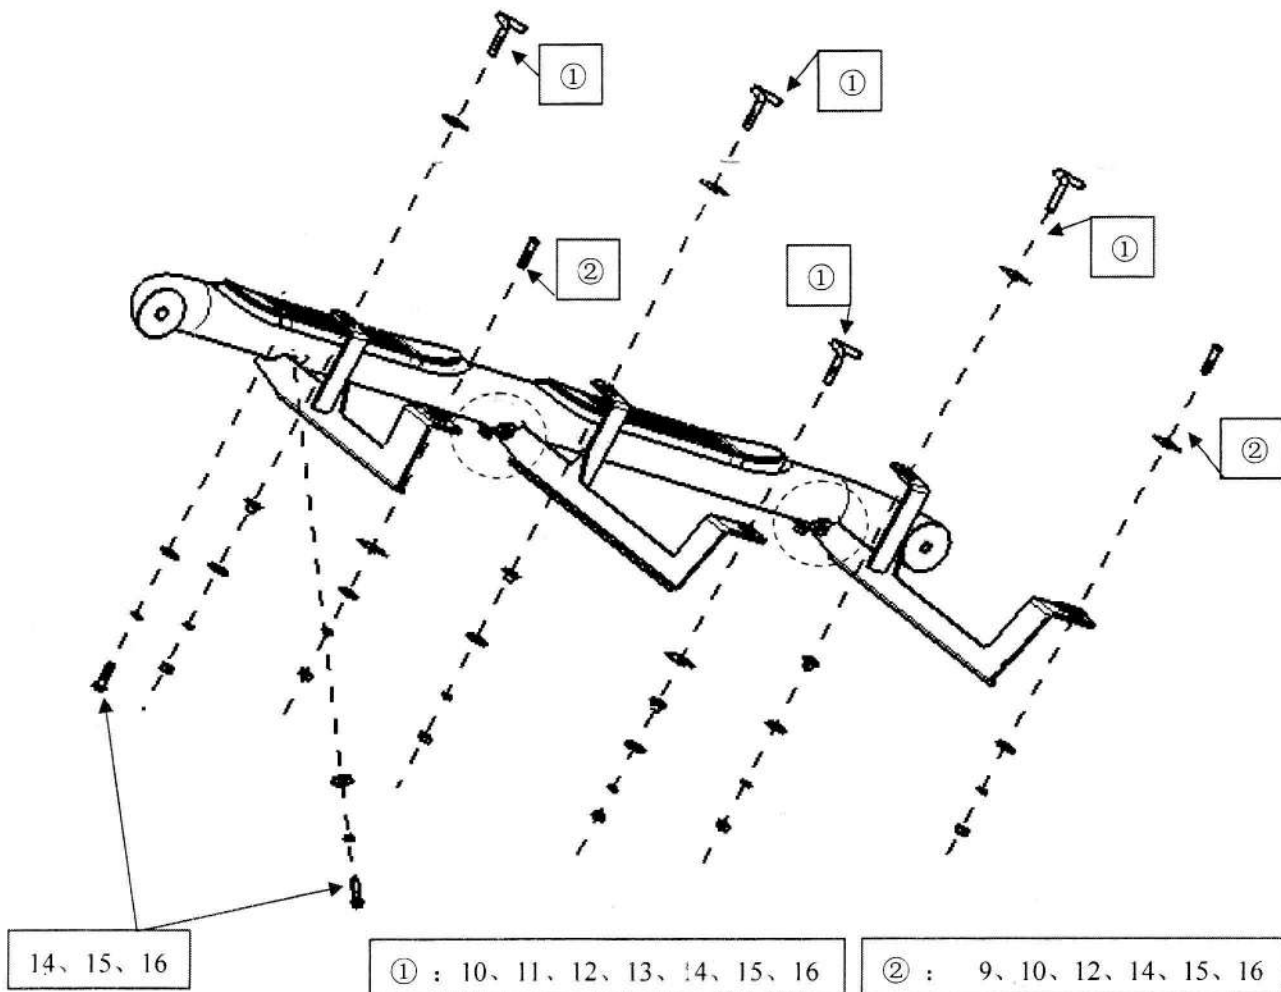

## INSTALLATION PROCEDURES


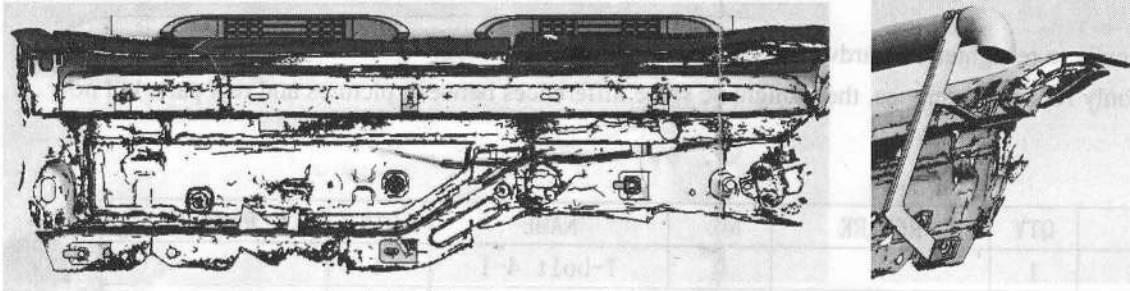


Step 1: Refer to Part List to check if all hard ware are included.

Step 2: Refer to the following picture to install left, middle and right brackets.

Step 3: Install the side bar on the brackets and then adjust them to the proper positions.

Step 4: Check if all hard ware are installed and then fasten all to complete the installation.

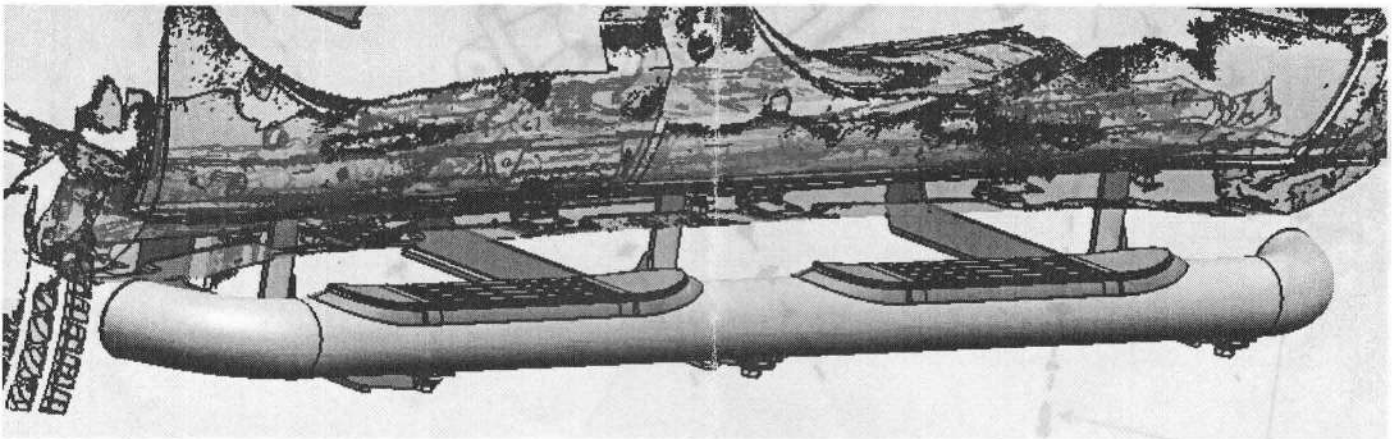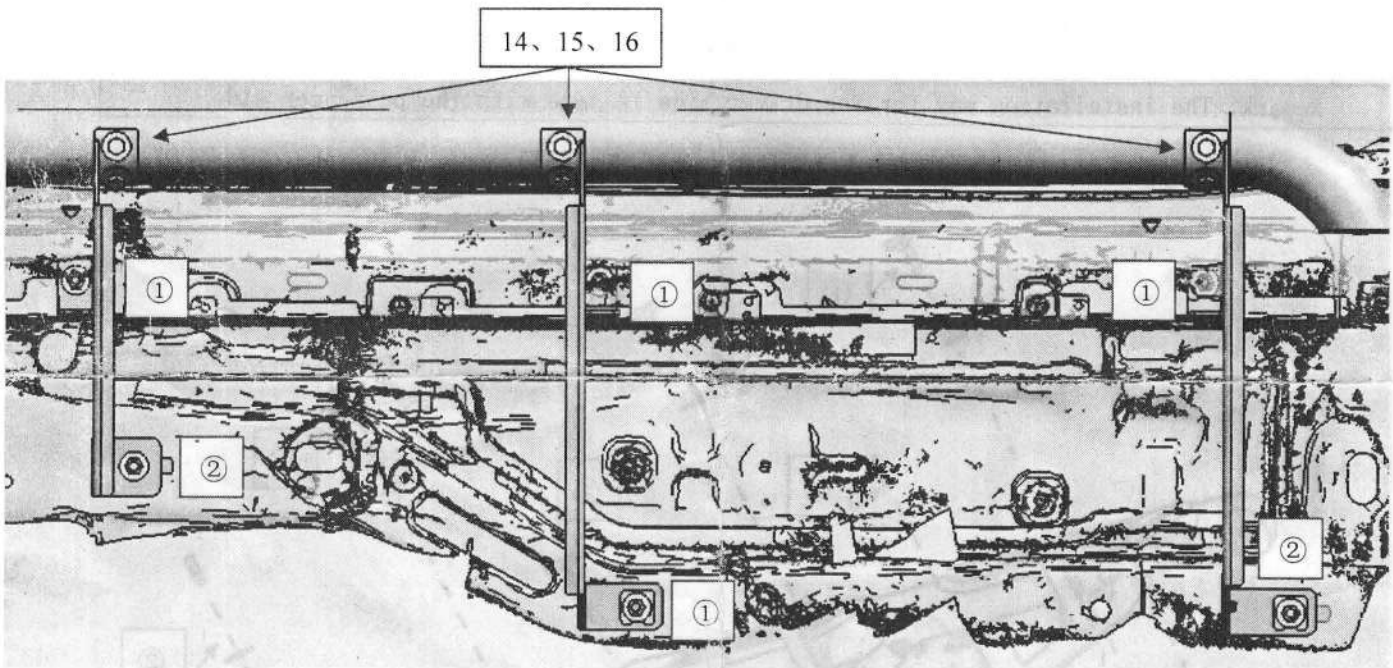

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.

[Learn more about other running boards and step bars by Black Horse on our website.](#)