



INSTALLATION INSTRUCTIONS

REAR BUMPER GUARD (DOUBLE LAYER) FOR FORD EXPLORER

11-19

PART # CRDL-FOF101S

INSTALLATION INSTRUCTIONS





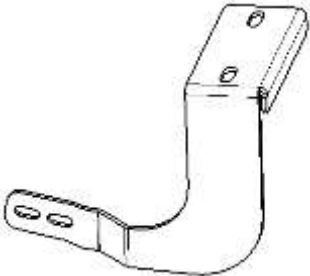
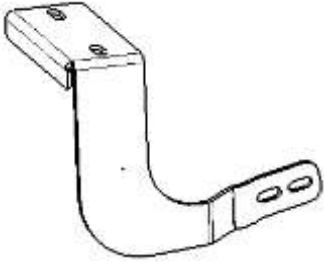
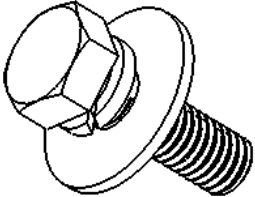

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.





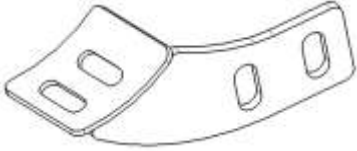


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear bumper guard	②	1	 Bracket-A(L)
③	1	 Bracket-A(R)	④	2	 Bracket-B(L&R)
⑤	1	 Bracket-C(L)	⑥	1	 Bracket-C(R)
⑦	4	 Assembling bolt M8*25	⑧	4	 Hex Bolt M10*35

INSTALLATION INSTRUCTIONS

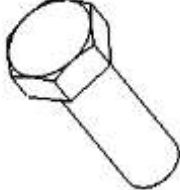⑨	8	 Flat washer D10	⑩	4	 Spring washer D10
⑪	4	 Nut D10	⑫	8	 Flat washer D12
⑬	4	 Spring washer D12	⑭	4	 Nut D12
⑮	4	 Hex Bolt M12*35			

Installation Steps

STEP 1: Check all the contents are available in accordance with the above list.

STEP 2: Using M12 bolt to install Bracket-B&C as FIG. ,Do not tighten the bolts.


STEP 3: As the FIG. install the rear bar on Bracket-A. Do not tighten all the bolts.

STEP 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

STEP 5: Installation is finished.

INSTALLATION FIG.

INSTALLATION INSTRUCTIONS

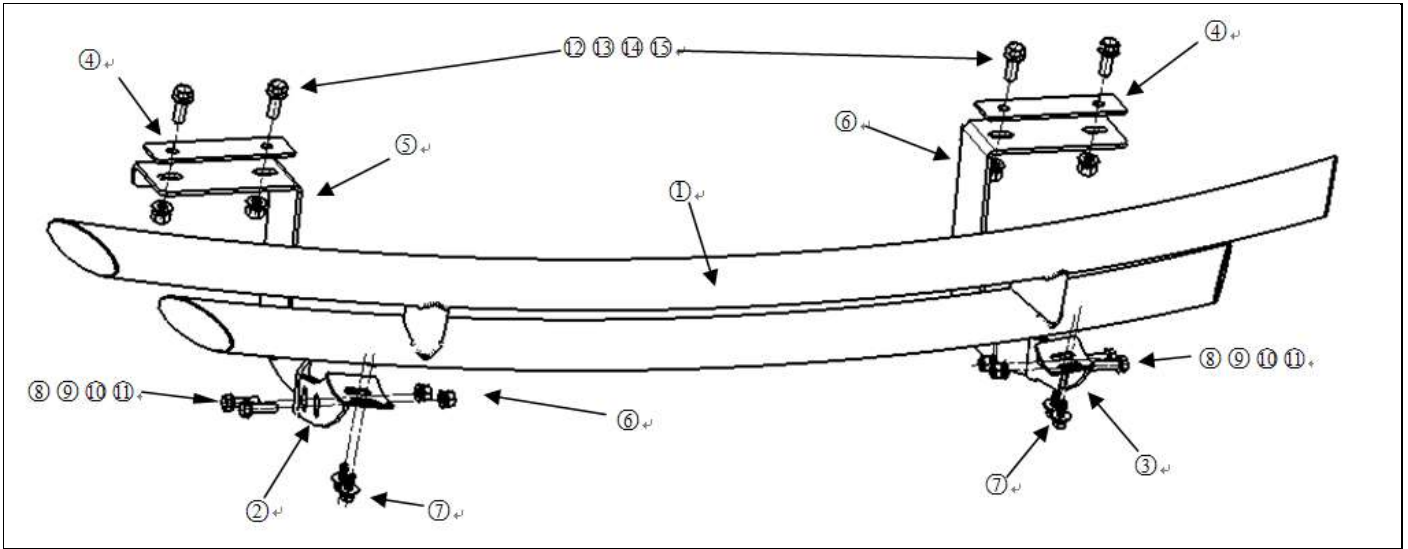

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.