



# **INSTALLATION INSTRUCTIONS**

**S/S REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA**

**ODYSSEY 18-20**

**PART # CRDL-HOH704S**



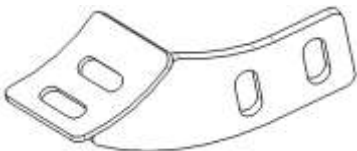


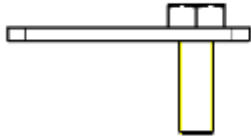
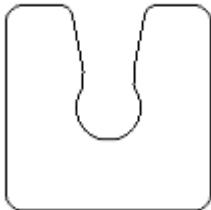
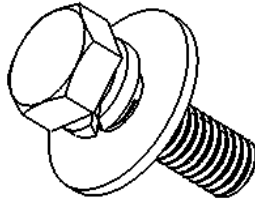
## Before Installation



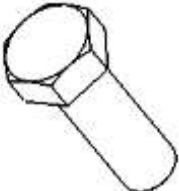


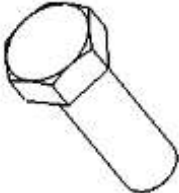

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear Bumper Guard	②	1	 Bracket-A (L)
③	1	 Bracket-A (R)	④	1	 Bracket-B (L)
⑤	1	 Bracket-B (R)	⑥	2	 T Bolt (M10x30 Hex Bolt) (68x20-15-4)
⑦	2	 M12 Plastic Block	⑧	4	 Assembling Bolt M8*25

⑨	6	 Hex Nut D10	⑩	6	 Spring Washer D10
⑪	4	 Hex Bolt M10*35	⑫	12	 Flat Washer D10
⑬	2	 Spring Washer D12	⑭	2	 Hex Bolt M12x1.25_30
⑮	2	 Flat Washer D12			

## Installation Steps

STEP 1: Verify that all parts are present according to the manual..

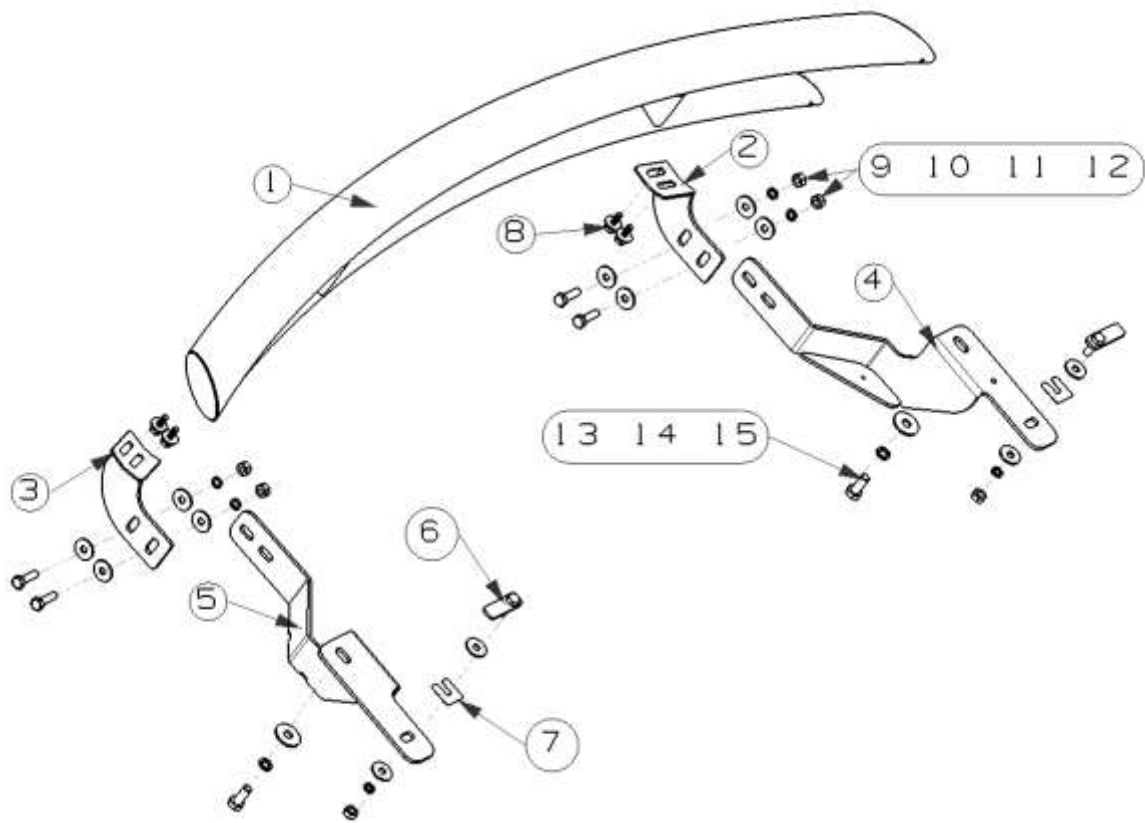
STEP 2: Use M10 T bolts and M12 Hex Bolts to install Bracket-B L&R on the tail, standard parts do not need to be locked at this time.

STEP 3: Use M12 Hex Bolts to connect Bracket-A with Bracket-B. Use Assembling Bolts M8\*25 to install rear bumper on Bracket-A.

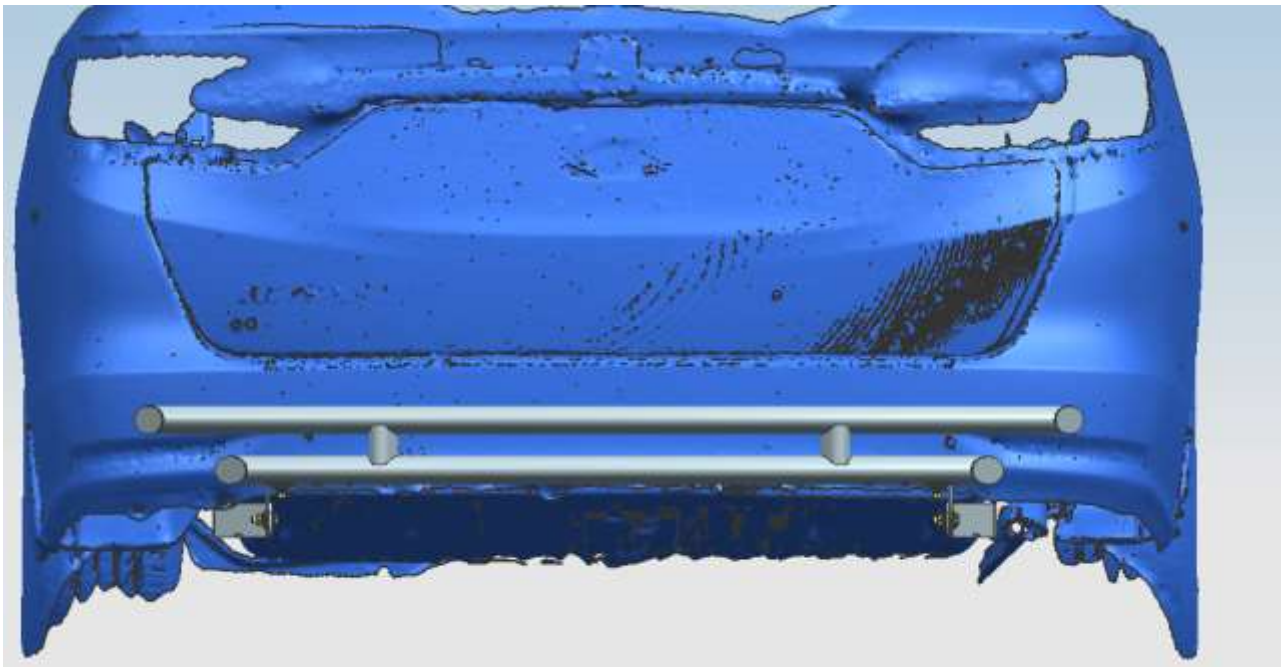
STEP 4: Test and make sure that the rear bumper is steadily fixed, and then tighten all the hardware.

STEP 5: Complete installation.

PIC1



PIC2



**NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.