



BX1126

2007-18 Jeep Wrangler/Wrangler Unlimited (JK) (All Models w/Standard Bumper) (No JL) Installation Instructions

Attachment Tab Height: 14-1/2"

Attachment Tab Width: 24"

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "it work".
- Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

Bolt Torque Specifications
Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380



Bolt Torque Specifications
Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

Reference your vehicle owner's manual for manufacturer's towing specifications.

! WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

BX1126

2007-18 Jeep Wrangler/Wrangler Unlimited (JK) (All Models w/Standard Bumper) (No JL)

Installation Instructions

Instruction Notes: The belly pan and metal bumper are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8869 Tail Light Wiring Kit is recommended for this vehicle.



Drill a hole according to the tail light wiring kit instructions.


NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

BX1126
2007-18 Jeep Wrangler/Wrangler Unlimited (JK)
(All Models w/Standard Bumper) (No JL)
Installation Instructions

Tools Required

Large Vise Grip
 Utility Knife
 Phillips Screwdriver
 Torque Wrench
 Drill
 Reciprocating Saw
 Tape Measure
 Loctite® RED
 17/32" Drill Bit
 18MM Socket
 3/4" Socket
 15/16" Socket

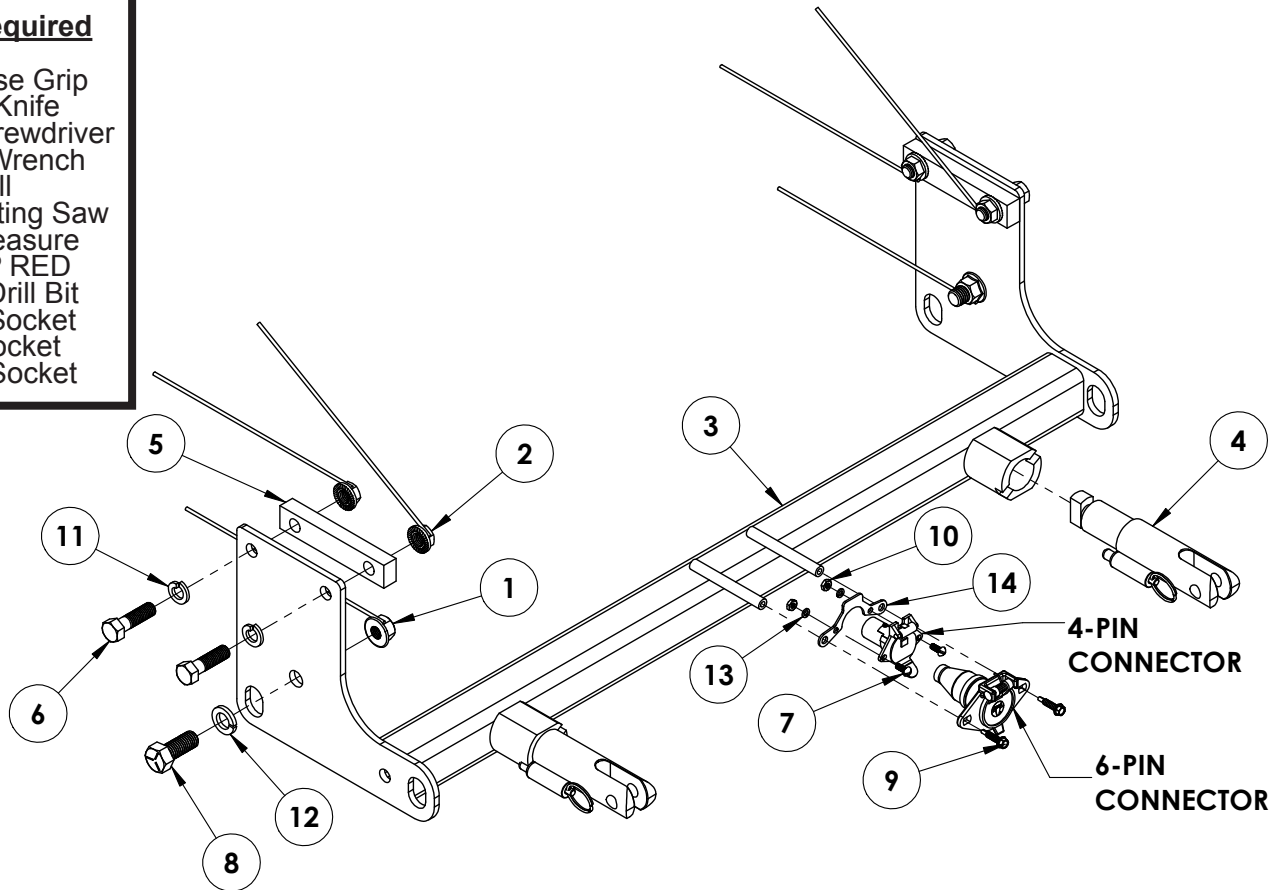


Item No.	Part No.	Description	Qty.
1.....	61-3997	5/8"-11 Nut Wire	2
2.....	61-4029	1/2"-13 Whiz Nut w/14" Wire	4
3.....	61-6344	BX1126 Baseplate	1
4.....	62-3468	Attachment Tab Assembly, SF/SB (R)	2
5.....	102-6768	BX1126 Spacer Plate	2
6.....	201-0068	1/2"-13 x 1-3/4" Hex Head Bolt, Grade 5, ZP	4
7.....	201-0192	#10-32 x 1/2" Round Head Slot Screw	2
8.....	201-0350	5/8"-11 x 1-1/2" Hex Head Bolt, Grade 5, ZP	2
9.....	201-0979	#12-14 x 1" Self Drilling Screw, ZP	2
10.....	202-0047	#10-32 Hex Nut	2
11.....	203-0012	1/2" Lock Washer, ZP	4
12.....	203-0013	5/8" Lock Washer, ZP	2
13.....	203-0054	#10 Lock Washer	2
14.....	299-0685	4-Way Bracket	1
15.....	226-0046(not shown)	Class III Safety Cables	2
16.....	229-0359(not shown)	3/8" Quicklink, ZP	2
17.....	290-0437(not shown)	Black Cap Plug Receiver	2


Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.


BX1126
2007-18 Jeep Wrangler/Wrangler Unlimited (JK)
(All Models w/Standard Bumper) (No JL)
Installation Instructions

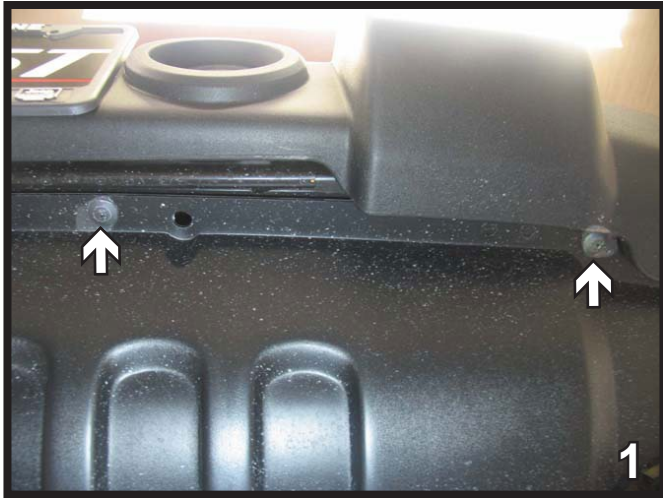


1. Using a Phillips screwdriver, remove the four (4) push pins from the bottom of the belly pan. There are two (2) on each side.

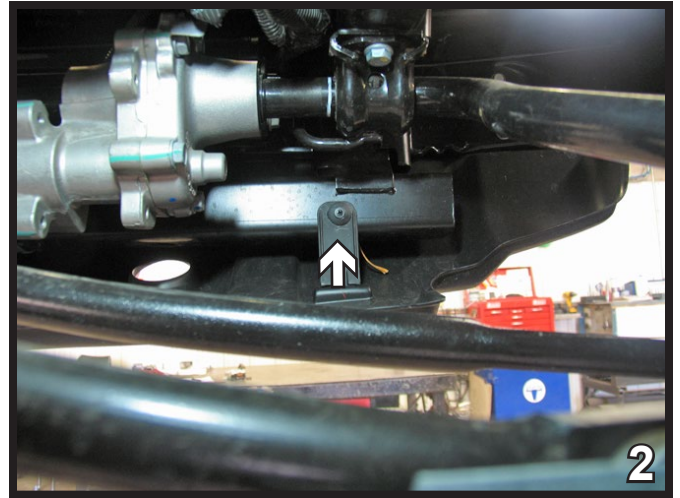

2. Using a Phillips screwdriver, remove the two (2) push pins from tabs on the backside of the belly pan. Set the belly pan aside.

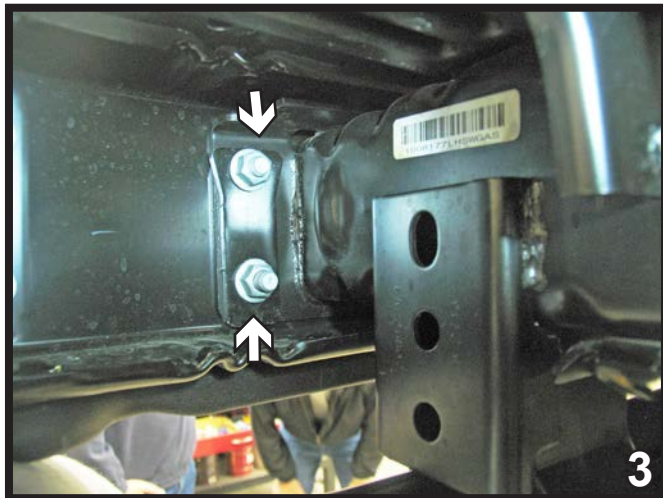


3. Disconnect the foglights from back side of bumper. Using a 18mm socket, remove the two (2) bolts on outside edge of frame. Do this on both sides of the vehicle.

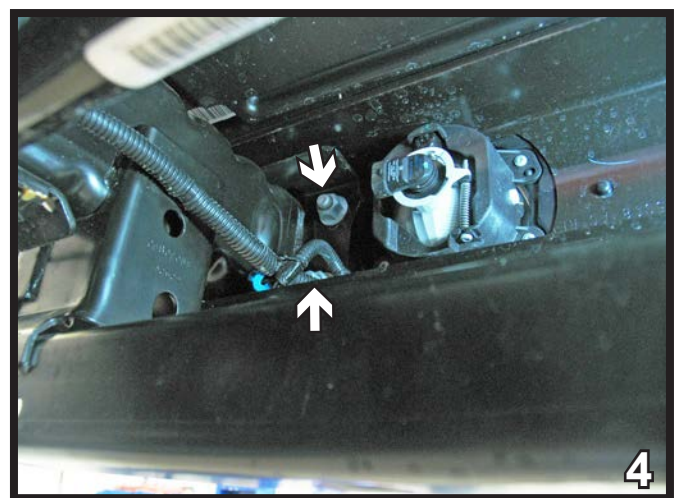


4. Using a 18mm socket, remove the two (2) bolts on inside edge of frame. Do this on both sides of the the vehicle.


BX1126
2007-18 Jeep Wrangler/Wrangler Unlimited (JK)
(All Models w/Standard Bumper) (No JL)
Installation Instructions

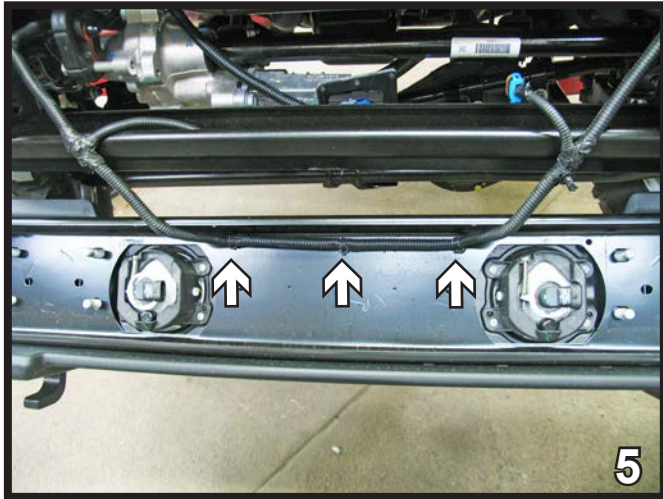

5. Pull the bumper forward and disconnect clips from the wiring loom running along the backside of the bumper. Set the bumper aside.

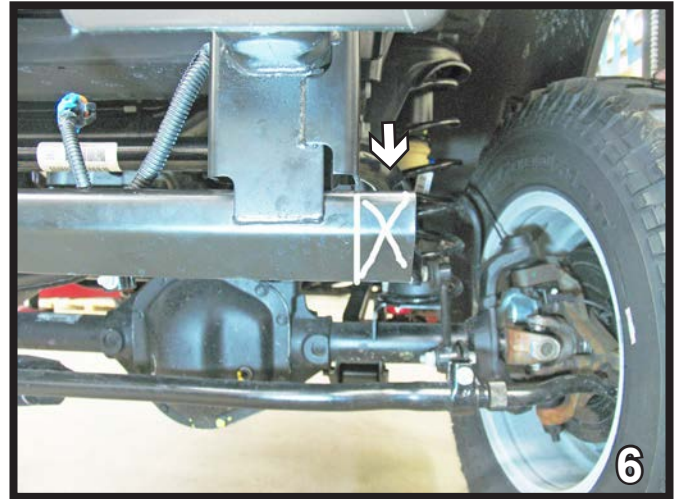

6. **On the 2007-09 models:** Using the reciprocating saw, cut the lower frame extension flush with the outside edge of the lower side bracket. Do this to both sides of the vehicle. We recommend painting the cut edges to prevent them from rusting.

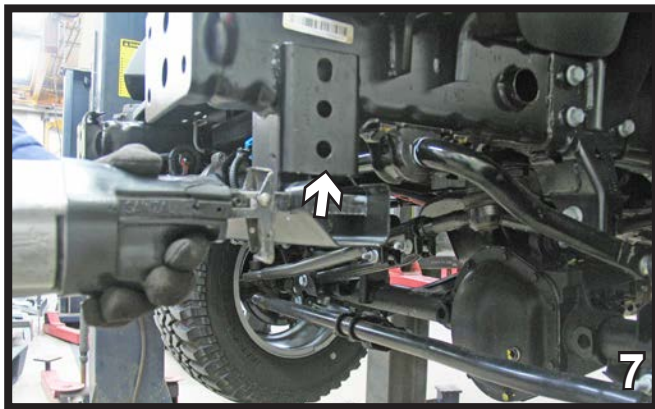


7. **On the 2007-09 models:** Align the baseplate's lower hole with the existing lower hole in the frame, insure baseplate is level with frame and clamp in place with the vice grips. Do this to both sides of the vehicle.




8. **On the 2010 models and newer:** Align the baseplate's lower hole with the existing middle hole in the frame, insure baseplate is level with frame and clamp in place with the vice grips. Do this to both sides of the vehicle.

BX1126
2007-18 Jeep Wrangler/Wrangler Unlimited (JK)
(All Models w/Standard Bumper) (No JL)
Installation Instructions

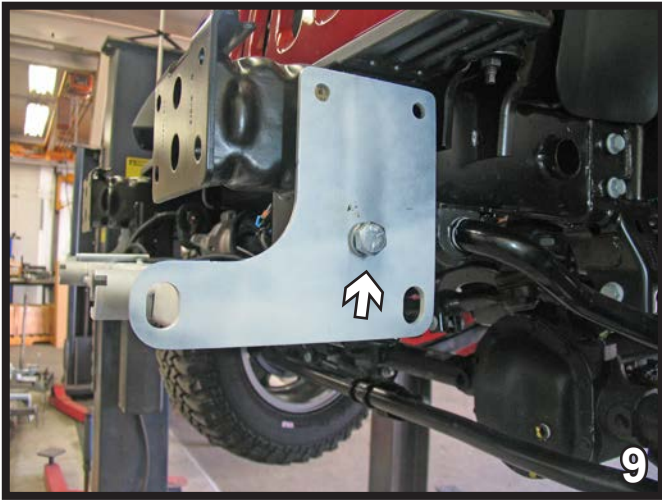

9. Insert the 5/8"-11 whiz nut into the frame end and align with the lower hole on the 2007-09s and the middle hole on the 2010s and newer. Install the 5/8"-11 x 1-1/2" hex bolt and 5/8" lock washer and tighten to whiz nut. Do this on both sides of the vehicle.

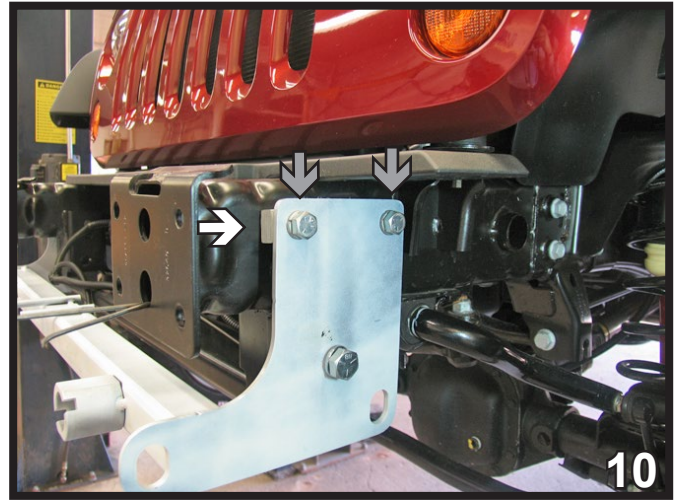

10. Using a 17/32" drill bit, drill the top holes of the baseplate thru the frame. Install the spacer plate in between the baseplate and frame (white). Install 1/2"-13 x 1-3/4" bolts with 1/2" lock washers thru the baseplate, spacer and frame (gray). Insert 1/2" whiz nuts with wires on the inside of the frame. Do this on both sides of the vehicle.

11. Reinstall the bumper and wiring loom. Re-connect the foglights.

12. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate (gray arrow). The photo above shows the recommended installation of the cables to frame of vehicle (white arrow). Additional options may interfere with suggested mounting; in this case secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this to both sides of the vehicle.



BX1126
2007-18 Jeep Wrangler/Wrangler Unlimited (JK)
(All Models w/Standard Bumper) (No JL)
Installation Instructions



13. Hold the belly pan up to its original position, mark and trim a slot for baseplate endplate to come through with the utility knife. Do this to both sides of the vehicle. Slide the belly pan between baseplate crosstube and lower frame suspension. Allow endplate to come through slot and reinstall the belly pan to its original location.



General Information

1. **It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip.** Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
2. **It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.**
3. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

1. **It is YOUR responsibility to watch for:**

- Oil cooler and air conditioner lines
- Electrical wires and hoses
- Missing parts or attaching points on the frame

** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation


Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

Option #1

(Baseplates with Convenience Link Tabs)

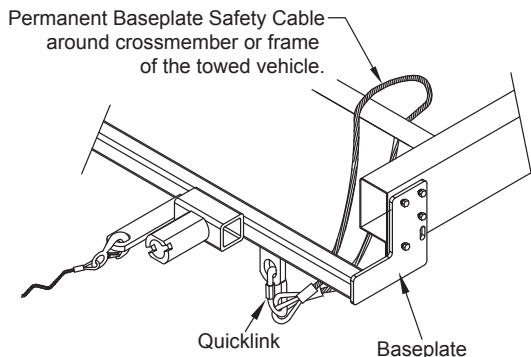

Option #2

(Baseplates with out Convenience Link Tabs)

