

BLUE OX[®]

Offset Triple Lug Kit BX88154

Installation Instructions

Replace the existing connection ends on your tow bar with the offset triple lugs by following the instructions below.

1. Lay the tow bar on a work surface. Remove the existing connections.
2. Insert the offset triple lugs so that the UP decal is to the outside of the tow bar legs and the arrow is pointing the proper direction.
3. Insert the 1/2-13 x 2" hex bolt through the first hole of the pivot connection on the tow bar leg. Slide one 0.51 x .523 ID x 1.375 OD washer onto the bolt followed by the offset triple lug and another 0.51 x .523 ID x 1.375 OD washer onto the bolt. Push the bolt through the second hole of the pivot connection on the tow bar leg and install the 1/2-13 Essna jam nut (see Figure 2 for proper installation).

Figure 2

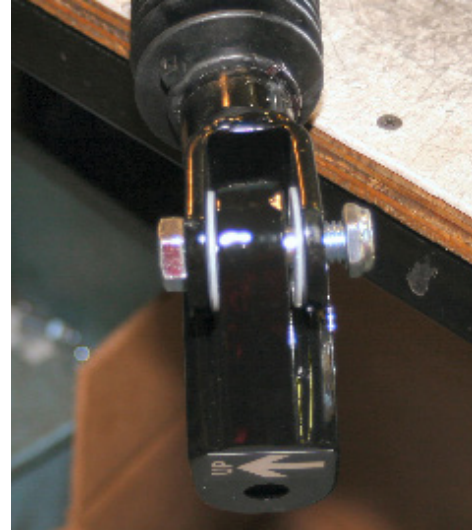


Figure 1



4. Using a 3/4" wrench to hold the bolt, tighten the nut with 3/4" wrench until the nut is secure but the offset triple lug is still able to pivot for easy hooking and unhooking of the tow bar.
5. The installation of the triple lug is complete. You can use the 1/2 x 2 5/8" pin and quick pin or locks to secure your tow bar to your baseplate. **DO NOT** substitute any other devices if the tow bar pins and clips are misplaced.

Parts List

Ref. #	Part #	Qty.	Description
1	299-0736	2	Offset Triple Lug
2	290-0381	4	Washer, 0.51 x .523 ID x 1.375 OD
3	201-0645	2	1/2-13 x 2 Hex Bolt, Short Thread
4	202-0143	2	1/2-13 Essna Jam Nut, ZP
5	229-0520	2	Pin, 1/2 x 2 5/8 Eff.
6	62-3213	2	Quick Pin Assembly