

# BLUE OX®

## Adapter Kit BX88185


## Installation Instructions

### BX88185 Adapter Kit

The BX88185 Adapter Kit is designed to adapt Blue Ox® tow bars to Roadmaster brackets which are equipped with the cross bar already.


#### CONTENTS:

Qty.	Part #	Description
2	61-5639	Wldm't, Adapter, Roadmaster
8	290-0381	Washer, .051 x .523
2	202-0143	1/2-13 Essna jam Nut, ZP
2	202-0645	1/2-13 x 2 Hx Bolt, Shrt Thread

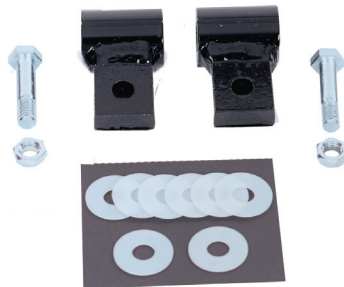

### Installation Instructions

1. Remove existing tow bar lug from the leg pivot.
2. Install adapters to the tow bar leg pivots using the hex bolts, nuts, and washers.
3. To attach the tow bar to the brackets, insert adapters into the attachment tabs of the bracket. Align the holes of the adapters with the holes of the brackets and pin in place using the existing bracket pins.

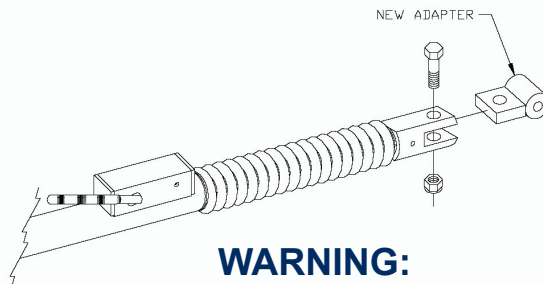

#### WARNING:

**USE ONLY GENUINE FACTORY REPLACEMENT PARTS.**  
Do NOT substitute homemade or non-typical parts. This may cause your adapter kit to fail and result in injury or death.

Shop for other trailer hitches and towing on our website.