



STB020 Installation Instructions

Tools required:

Ratchet
13mm socket
14mm socket
14mm wrench

1. Using the 13mm socket, remove the 6 strut tower bolts as shown in **IMAGE 1**.
2. Install STB020 using supplied hardware, placing provided spacers under the STB020 at each bolt as shown in **IMAGE 2**.
3. Tighten all 13mm mounting bolts to 16 ft/lbs.
4. Tighten two 14mm nuts until brace is secure.

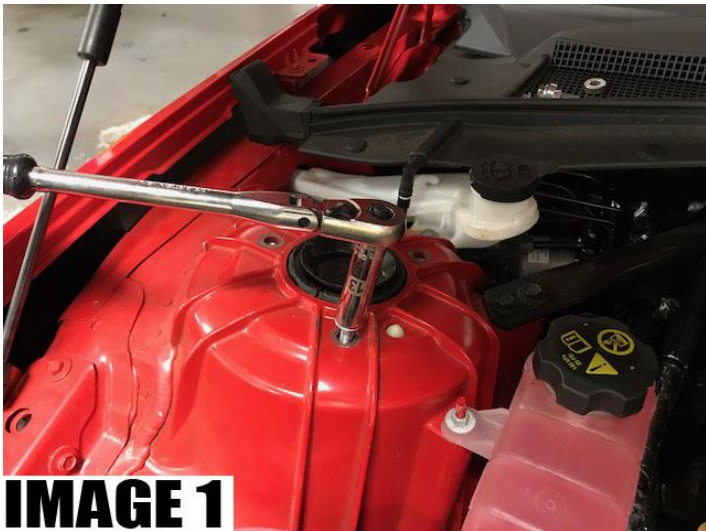


IMAGE 1



IMAGE 2

