

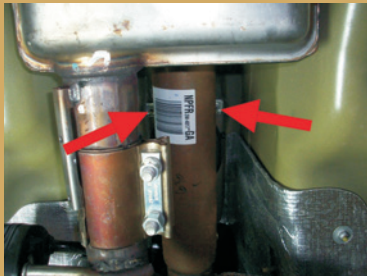

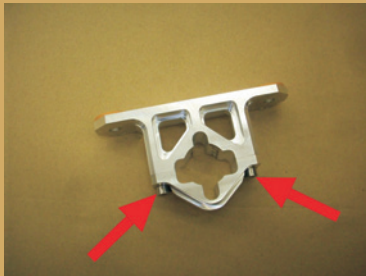






# FORD MUSTANG SHIFTER BRACKET

## TOOLS REQUIRED

M10 socket wrench  
5 mm allen wrench

## MATERIALS REQUIRED

None

<p><b>1</b></p>	<p><b>When lifting the car always use stands to secure the car.</b></p>	<p><b>2</b></p>	<p>Remove the nuts holding the shifter bracket.</p>
			<p><b>3</b></p> <p>Pull the shifter assembly down to disengage the bracket and the threaded studs. Pull the shifter bracket toward the back of the car to remove it from the shifter.</p> 
<p><b>4</b></p>	<p>Remove cover from the Boomba Racing Shifter Bracket.</p>	<p><b>5</b></p>	<p>Place the rubber washers on the top of the shifter bracket.</p>
	<p><b>6</b></p> <p>Place the shifter bracket on the top of the shifter assembly.</p> 	<p><b>7</b></p> <p>Push the shifter assembly up and align the mounting studs. Secure the bracket to the body.</p> 	<p><b>8</b></p> 
<p><b>9</b></p>	<p>Install the shifter bracket cover.</p>	<p><b>10</b></p>	
			

# FORD MUSTANG SHORT THROW SHIFTER

## TOOLS REQUIRED

M18 socket wrench  
3 mm allen wrench  
Flat screw driver  
Wire cutter  
Razor blade

## MATERIALS REQUIRED

Silicone lube spray

<p><b>1</b></p>	<p>Remove (unscrew) the shift knob.</p>	<p><b>2</b></p>	<p>Remove the storage tray liner</p>
			
<p><b>5</b></p>	<p>Remove the rubber boot. Don't cut the zip tie. Save the zip tie for installation.</p>	<p><b>6</b></p>	<p>Remove the nut. Insert the block #2 between the tool and the block #1. Repeat step 13. After end of the thread is reached remove the nut and insert one more block #2 and repeat process. Gently pull the shifter from the shaft.</p>
			
<p><b>9</b></p>	<p>Place the locating keys in the slots of the rubber bushing.</p>	<p><b>10</b></p>	<p>Secure the screws on the shifter's side.</p>
			

13	Reinstall the rubber boot. Make sure top of the boot rests inside of the shifter's bottom groove. Place the original zip tie over the bottom of the boot.	14	Gently cut the shifter boot's cloth around the pull ring.	15	Mark line approximately 2.25" (57 mm) across and cut the cloth with the scissors.	16	Modified shifter boot.				
				17	Line up the boot assembly and pull the cloth over the shifter. Secure it in the top groove with the zip tie.	18	Snap the boot assembly into place and install the storage tray liner.	19	Install the Boomba Racing shift knob (sold separately). If shift pattern does not line up heat it up with the hair dryer. Line up the shift knob with the car.	20	Boomba Racing Short Throw Shifter after installation.
											