

CIVIC X - SHIFTER PLATE INSTALLATION MANUAL

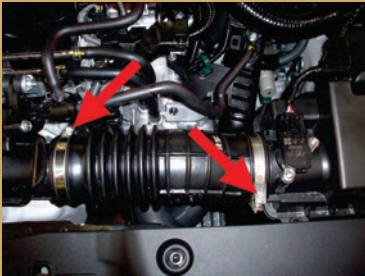
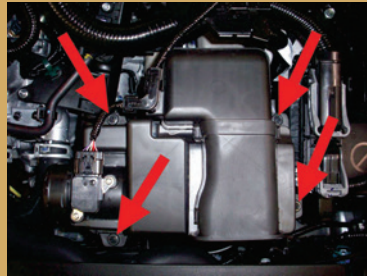
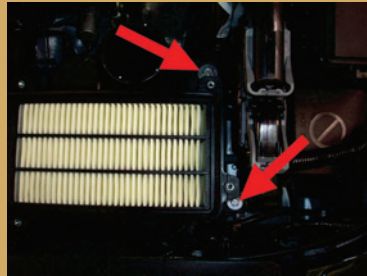
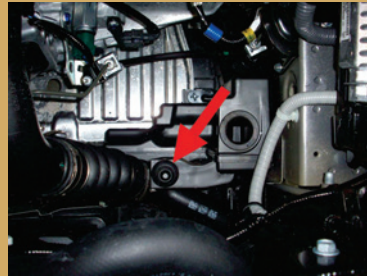


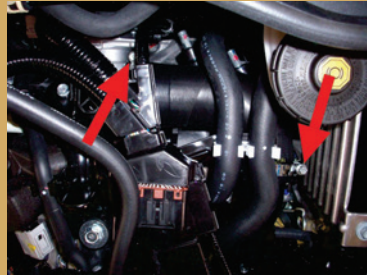
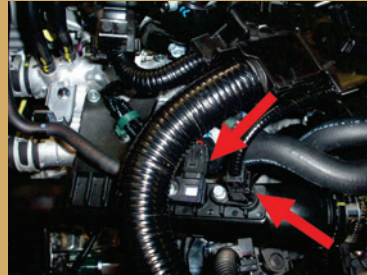
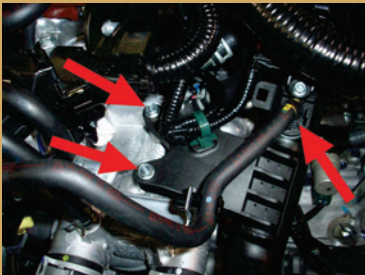
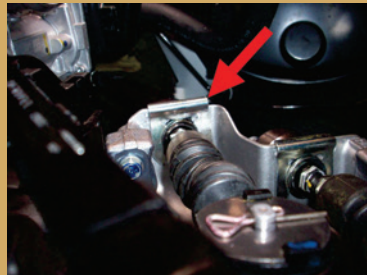


TOOLS REQUIRED



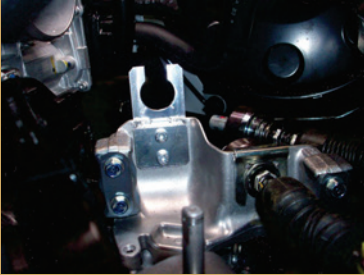
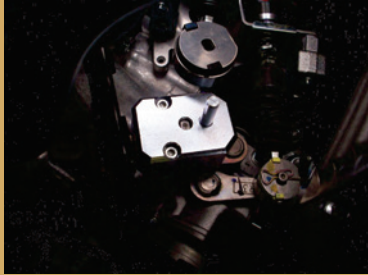
M5.5 socket wrench
M8 socket wrench
M10 socket wrench
4 MM allen wrench
Flat screw driver

Pliers
Small hammer

MATERIALS REQUIRED

None

<p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>Remove the air tube.</p> 	<p>Remove the air filter cover.</p> 	<p>Remove the air filter box.</p> 	<p>Remove the rubber grommet.</p> 
<p>5</p>	<p>6</p>	<p>7</p>	<p>8</p>
<p>Insert the rubber grommet into the base of the air filter box.</p> 	<p>Remove the charge pipe clamp.</p> 	<p>Remove the throttle body elbow clamps.</p> 	<p>Disconnect the wire harnesses connected to the charge pipe sensors.</p> 
<p>9</p>	<p>10</p>	<p>11</p>	<p>12</p>
<p>Disconnect the vacuum line from the charge pipe.</p> 	<p>Remove the shifter cable clip.</p> 	<p>Remove the shifter bushing cotter pin.</p> 	<p>Remove the shifter cable assembly.</p> 

13	Prepare the Boomba Racing shifter plate for assembly.	14	15	16
				
17	18	19	20	
