

VELOSTER 19+ SHORT THROW SHIFTER

TOOLS REQUIRED






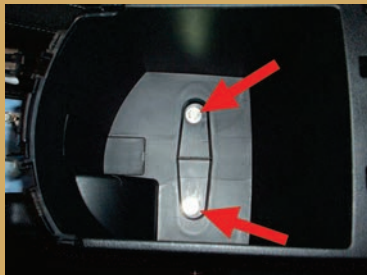
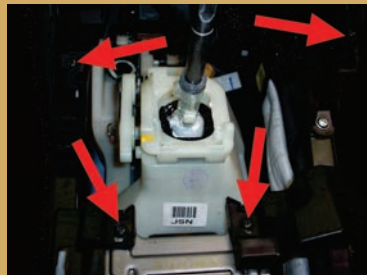





M10 socket wrench
M12 socket wrench
3 MM allen wrench
Flat screw driver
Small flat screw driver
Phillips screw driver
Wire cutters
Interior trim tool
Hooked pick
5/32 punch
Small hammer
Plastic hammer

TOOLS REQUIRED

Dremel with cut off wheel

MATERIALS REQUIRED


Mobil 1 synthetic grease

<p>1</p> <p>Remove the side trim.</p>	<p>2</p> <p>Unscrew the shift knob. Remove the shifter boot.</p>	<p>3</p> <p>Remove the shelf cover. Remove the shelf.</p>	<p>4</p> <p>Disconnect the wire harness.</p>
			
<p>5</p> <p>Remove the parking brake cover. Remove the top trim by pulling it up, starting from the back of the trim.</p>	<p>6</p> <p>Remove the center console bolts.</p>	<p>7</p> <p>Remove the screws securing the center console.</p>	<p>8</p> <p>Remove the screw holding the trim under the steering column.</p>
			
<p>9</p> <p>Pull the right side of the trim out to gain the access to the screw holding the center console's side trim.</p>	<p>10</p> <p>Remove the side trim by pulling it toward back of the car.</p>	<p>11</p> <p>Remove the screw holding the center console.</p>	<p>12</p> <p>Remove the right side clip.</p>
			

13 Remove the left side clip.




14 Remove the center console's support bracket.

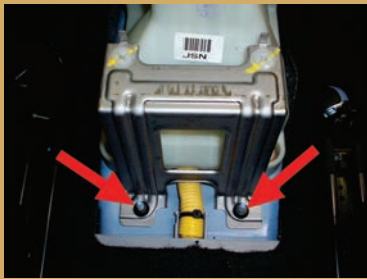


15 Remove the spring clip securing the side shift link. Remove the side shift cable from the shifter base.



16 Unlock both shift cables by pulling the safety ring toward the back of the car and lifting the lock clip. The lock clip should stay in upper position preventing the safety ring from moving back.

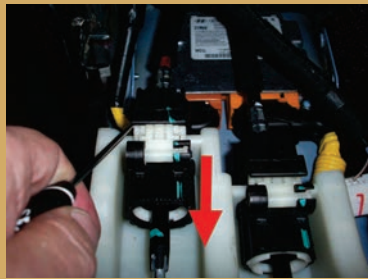

17 Remove all of the bolts securing the shifter base.

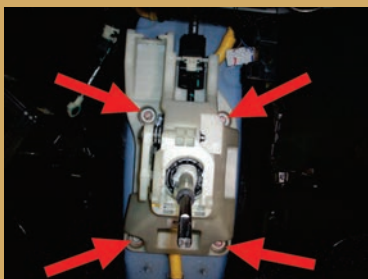

18 Turn shifter on its side. Separate the spring clips and disconnect the main shift cable.




19 Remove plastic cup from the shifter arm.



20 Cut the spring clip with the Dremel tool and remove the side shift arm.



21 Slide small flat screw driver under the latches to brake the sharp corners. Tap out the shift lever from the opposite side.

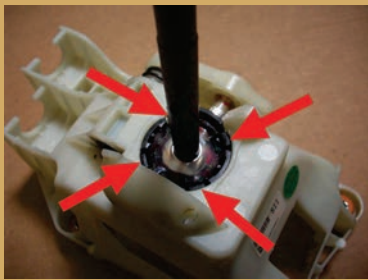

22 Tap out the roll pin. Remove the reverse lock and the ball bushing.



23 Prepare Boomba Racing Short Throw Shifter assembly.
SHIFT KNOB NOT INCLUDED



24 Remove the reverse lock. Grease the main shifter ball and the ball at the end of the shifter shaft. Install the ball bushing and the plastic cup.




25 Reinstall shifter shaft.



26 Install the side shift arm and secure it with the provided spring clip. Place 10 mm socket over the clip and tap it in with a hammer.



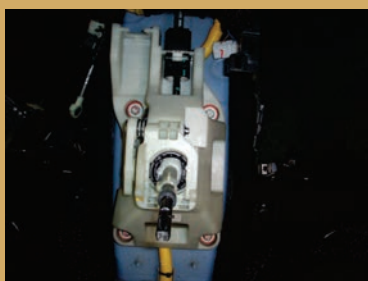



27 Connect the main shift cable and lock it to the shifter base. Install the shifter bushings. Secure shifter base to the floor.



28 Connect the side shift cable and lock it to the shifter base.

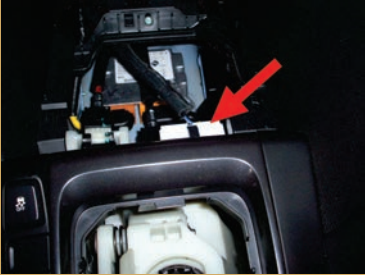

29	Install the center console's support bracket.	30	Reinstall the center console.	32	Reinstall the side trim and the steering column trim.
					
33	Remove the plastic trim from the shift boot.	34	Push the reverse lock through the boot. Rotate it to the proper orientation. Secure it to the boot with the zip tie.	35	Secure the reverse lock to the shifter shaft.
