

Exhaust System Installation For Subaru Impreza and Subaru Outback PN-14885



These instructions have been written to help you with the installation of your Borla Performance Exhaust System. Please read this document completely before beginning the installation of your system.

Please compare the parts in the box with the bill of materials provided to assure that you have all the parts necessary for this installation.

Thank you for purchasing a Borla [Performance Exhaust System](#).

Borla Performance Exhaust System (PN-14885) is designed for the Subaru Impreza Coup/Sedan/Wagon and Subaru Outback, 2.2L /2.5L 4-cyl non-turbo engine, AWD, automatic or manual transmissions.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

Minimum Required Tool List:


TOOLS:

1. 3/8" Drive Ratchet
2. 3/8" Drive Extension 3"
3. 13mm Socket
4. 14mm Socket
5. 15mm Socket
6. Pry Bar

SHOP SUPPLIES:

- 1 Spray Lubricant

Borla Performance - Bill of Materials

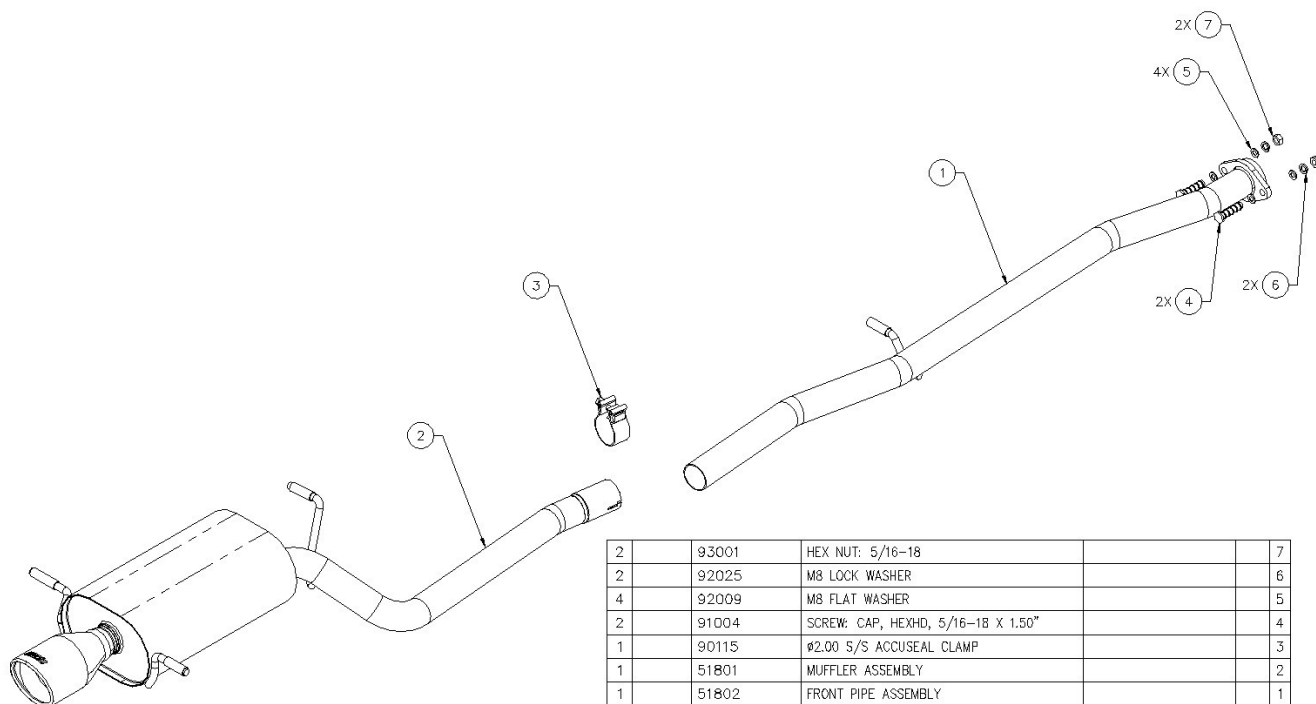

2	93001	HEX NUT: 5/16-18		7
2	92025	M8 LOCK WASHER		6
4	92009	M8 FLAT WASHER		5
2	91004	SCREW: CAP, HEXHD, 5/16-18 X 1.50"		4
1	90115	Ø2.00 S/S ACCUSEAL CLAMP		3
1	51801	MUFFLER ASSEMBLY		2
1	51802	FRONT PIPE ASSEMBLY		1