

## Exhaust System Installation for the Ford Mustang PN's-140629, 140630



Precision manufactured using aircraft quality T-304 stainless steel; this system is designed to endure years of heavy use. Installing a Borla Performance Exhaust System on your vehicle will eliminate the restrictive design of the stock exhaust, allowing your engine to discharge exhaust gas easier. The result is more horsepower and torque, longer engine life, and a distinctive throaty growl- all this, with easy bolt-on installation. These installation instructions have been written to help you in the installation of your Borla Performance Exhaust System. Please read it completely before installing your system.

Thank you for purchasing a Borla Performance Cat-Back™ [Exhaust System](#).

**Borla Performance Cat-Back™ Exhaust Systems (PN's- 140629, 140630) are designed for the Ford Mustang GT equipped with a 5.0L V-8 engine, automatic or manual transmissions.**

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

*Please take time to read and understand the following...*

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

**Minimum Required Tool List:**

**TOOLS:**

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Socket
- 4 13mm Socket
- 5 Flat blade screwdriver
- 6 Pry Bar


*NOTE: 140629 & 140630 includes (1)-L/H and (1)-R/H Extension Pipes. These pipes are only used to connect the X-Pipe to Borla PN-17290 Long Tube Header, completing a true-dual 3-inch Off-Road-Use-Only Exhaust System.*

*When installing 140629 or 140630 to the factory band-clamps and catalytic converter pipes, use the included (2) Nipples.*

**SHOP SUPPLIES:**


- 1 Spray Lubricant

**Borla Performance Cat-Back™ Bill of Materials**

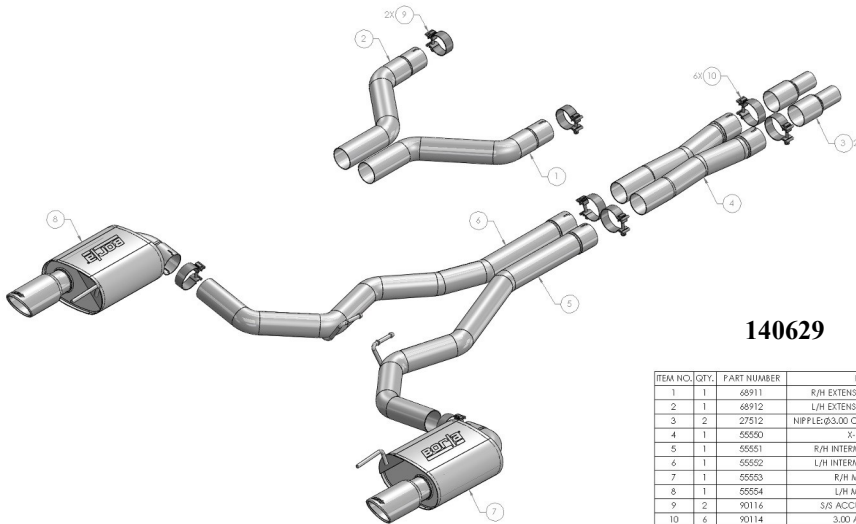

**140629**

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	68911	R/H EXTENSION PIPE: Ø3.00 X 27.03"
2	1	68912	L/H EXTENSION PIPE: Ø3.00 X 26.52"
3	2	27512	NIPPLE: Ø3.00 O.D. X 7.00" L.S. X Ø2.25 O.D.
4	1	55550	X-PIPE ASSEMBLY
5	1	55551	R/H INTERMEDIATE PIPE ASSEMBLY
6	1	55552	L/H INTERMEDIATE PIPE ASSEMBLY
7	1	55553	R/H MUFFLER ASSEMBLY
8	1	55554	L/H MUFFLER ASSEMBLY
9	2	90116	S/S ACCUSEAL CLAMP: Ø2.75
10	6	90114	3.00 ACCUSEAL CLAMP

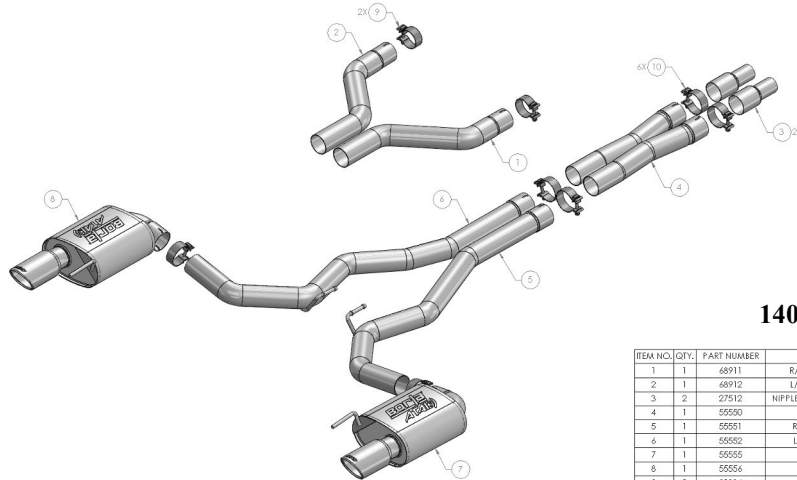

**140630**

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	68911	R/H EXTENSION PIPE: Ø3.00 X 27.03"
2	1	68912	L/H EXTENSION PIPE: Ø3.00 X 26.52"
3	2	27512	NIPPLE: Ø3.00 O.D. X 7.00" L.S. X Ø2.25 O.D.
4	1	55550	X-PIPE ASSEMBLY
5	1	55551	R/H INTERMEDIATE PIPE ASSEMBLY
6	1	55552	L/H INTERMEDIATE PIPE ASSEMBLY
7	1	55553	R/H MUFFLER ASSEMBLY
8	1	55554	L/H MUFFLER ASSEMBLY
9	2	90116	S/S ACCUSEAL CLAMP: Ø2.75
10	6	90114	3.00 ACCUSEAL CLAMP

**Caution!!!** *Never work on a hot exhaust system. Serious injury in the form of burns can result* If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

*Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Cat-Back™ Exhaust System.*

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

**Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Cat-Back™ Exhaust System.**

## Original Exhaust System Removal

*Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.*

1. Loosen (2) factory band clamps on the factory mid-muffler. (See Fig.1)
2. Beginning with the left-side, use a flat blade screwdriver and twist to release the pin and slide the left-side band-clamp away from the muffler. (See Fig. 2)
3. Repeat Step 2 to remove the right-side band-clamp.
4. Lubricate all hangers and rubber isolators.
5. Loosen (2) factory bolts on both rear left-side and right-side rubber brackets. Leave rubber isolator assembly on muffler hangers. (See Fig. 3)
6. With help from an assistant, carefully remove the front hangers from the rubber isolators and slide the muffler assembly rearwards leaving rear rubber isolators on hangars. (See Fig. 4)
7. Factory exhaust from the vehicle. (See Fig. 5)

**Warning:** Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. **DO NOT** use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

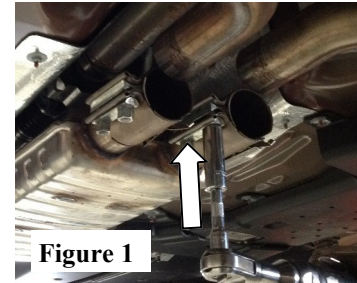


Figure 1

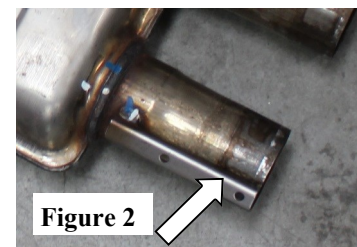


Figure 2

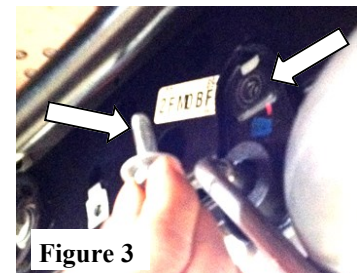


Figure 3



Figure 4



Figure 5

**Warning:** Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. **DO NOT** use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

## Borla Performance Cat-Back™ Exhaust System Installation

*NOTE: 140629 & 140630 includes (1)-L/H and (1)-R/H Extension Pipe. These pipes are used to connect the X-Pipe to Borla PN-17290 Long Tube Header, completing a true-dual 3-inch Off-Road-Use-Only exhaust system.*

*When installing 140629 or 140630 to the factory band-clamps and catalytic converter pipes, use the included (2) Nipples.*

1. Transfer the both brackets & rubber isolators from factory exhaust to the vehicle using factory hardware. Tighten to 20 ft lbs. (Refer to Fig. 3 image)
2. Install the Left-side and Right-side factory band clamps onto the X-pipe. (See Fig. 6) **DO NOT TIGHTEN THE CLAMP BOLTS.**
3. Install the L/H Intermediate Pipe Assembly to the Left-side of vehicle inserting the hangers into the rubber isolators. (See Fig. 7)
4. Repeat Step 2 for the R/H Intermediate Pipe Assembly installation to the right-side. (See Fig. 8)
5. Starting on the left-side, place a clamp on the L/H Muffler Assembly inlet pipe. Position the L/H Muffler Assembly hanger into the rear rubber isolator then insert into the L/H Intermediate Pipe Assembly . (See Fig. 9) **DO NOT TIGHTEN THE CLAMPS.**
6. Repeat Step 4 for installation of the R/H Intermediate Pipe Assembly . Check your exhaust system for proper clearance under the vehicle and also for tip alignment. (See Fig. 10)
7. Start tightening clamps on your new exhaust beginning at the X-Pipe and moving to the Rear Mufflers. Once position has been determined to be correct, tighten the Accuseal™ clamps to 32-35 ft. lbs. making sure the clamp bolts are centered between the notches in the pipe.
7. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
8. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.

*Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.*

**Congratulations!!!** You have completed the installation of the world famous Borla Performance Stainless Steel Exhaust System.

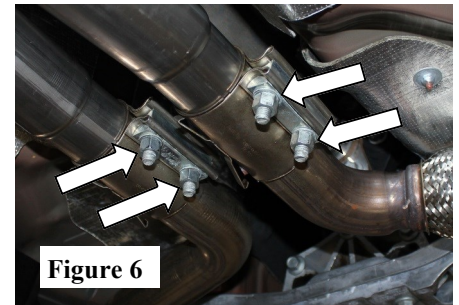


Figure 6

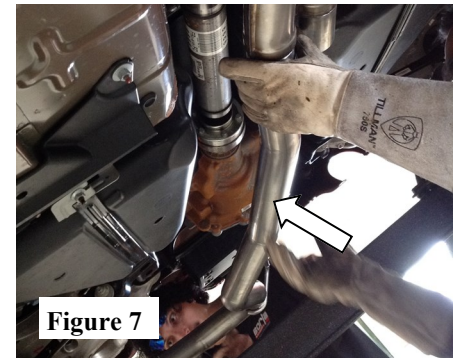


Figure 7

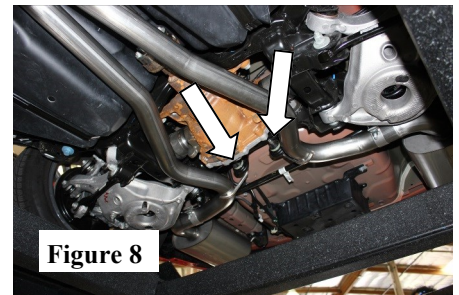


Figure 8

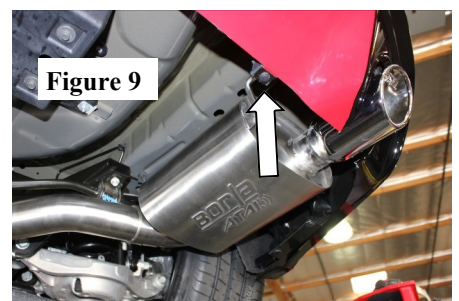


Figure 9



Figure 10