

PART NUMBER LIST


PIAA

PIAA makes it easy to replace your worn blades.
Simply match the length of the refill to the length of the wiper blade.

| LENGTH INCH | LENGTH METRIC | SUPER SILICONE | | CURVED | SUPER SPORZA | | GRAPHITE | REFILLS | |
|----------------|------------------|----------------|--------------|--------|--------------|--------------|----------|----------|----------|
| | | BLACK | CARBON FIBER | BLACK | BLACK | CARBON FIBER | BLACK | SILICONE | GRAPHITE |
| 12" | 300mm | - | - | - | - | - | 93530 | - | 94530 |
| 13" | 330mm | - | - | - | - | - | 93533 | - | 94533 |
| 14" | 350mm | - | - | - | - | - | 93535 | - | 94535 |
| 15" | 380mm | 93038 | 93138 | - | - | - | 93538 | 94038 | 94538 |
| 16" | 400mm | 93040 | 93140 | - | - | - | 93540 | 94040 | 94540 |
| 17" | 430mm | 93043 | 93143 | - | - | - | 93543 | 94043 | 94543 |
| 18" | 450mm | 93045 | 93145 | 93245 | - | - | 93545 | 94045 | 94545 |
| 19" | 475mm | 93048 | 93148 | 93248 | 93348 | 93448 | 93548 | 94048 | 94548 |
| 20" | 500mm | 93050 | 93150 | 93250 | 93350 | 93450 | 93550 | 94050 | 94550 |
| 21" | 525mm | 93053 | 93153 | 93253 | 93353 | 93453 | 93553 | 94053 | 94553 |
| 22" | 550mm | 93055 | 93155 | 93255 | 93355 | 93455 | 93555 | 94055 | 94555 |
| 24" | 600mm | 93060 | 93160 | - | 93360 | 93460 | 93560 | 94060 | 94560 |
| 26" | 650mm | 93065 | 93165 | - | 93365 | 93465 | - | 94065 | - |
| 28" | 700mm | 93070 | 93170 | - | - | - | - | 94070 | - |

REFILLS

PIAA wiper refills will also fit some original equipment and other manufacturers wiper blade's provided your blades have a square type claw and stop as illustrated below.

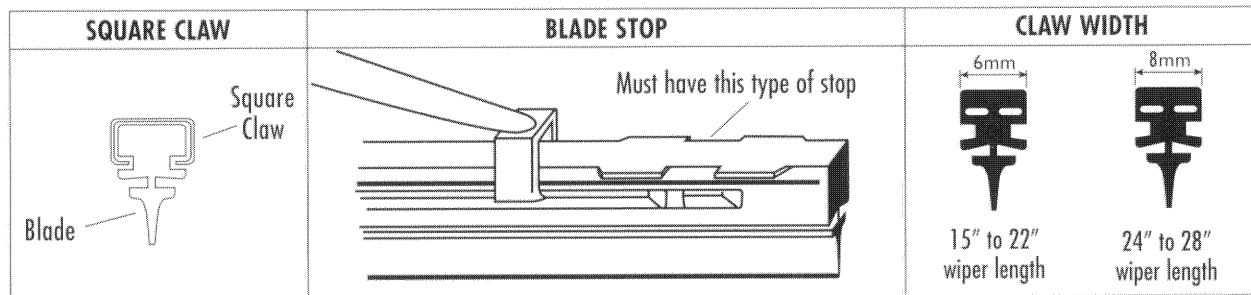

PIAA WIPER BLADE INSTALLATION

PREPARATION

1. Park vehicle in a safe location, turn off engine and set parking brake.
2. Remove old wiper blades.

CAUTION

WIPER BLADE ARMS ARE SPRING LOADED, MAKE SURE THEY DO NOT IMPACT THE WINDSHIELD, THIS MAY CAUSE DAMAGE.

3. Wash windshield thoroughly with soap and water or a glass cleaner.
4. For Super Silicone Wiper Blades Only; apply the windshield treatment solution. Remove the windshield treatment towel from its packet. Wipe the entire windshield with windshield treatment towel. Let the windshield treatment solution dry on the windshield for 10 minutes, then wipe windshield with a clean, dry or slightly damp towel.

INSTALLATION

5. Choose the correct wiper blade adapter from the adapter pack.
 - a. Test fit the adapter into the wiper arm to check fit. The correct adapter will "snap" into place.




- i. For hook type wiper systems. Adapters C1, C2, C3, C4, C5, C6 and C11




C1



C2

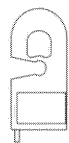

C3

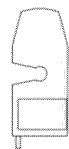

C4



C5




C6
28" blade
only




C11
graphite wipers
only


6. Once proper adapter is identified, press the adapter into the PIAA wiper blade.

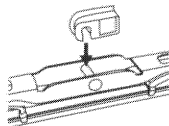


7. Install PIAA wiper blade onto wiper arm.
 - a. For hook type wiper systems.




- b. For 3/16" side lock pin style wiper systems. Adapter C11 only.

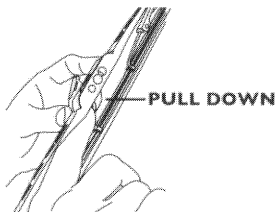

PRESS

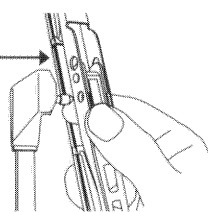

MAKE SURE
WIPER BLADE
IS SECURE

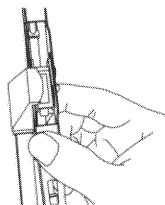

8. For Super Silicone Wiper Blades Only; Run the PIAA Super Silicone blades dry for 5 minutes for final windshield preparation. This applies an initial silicone coating to the windshield. Periodically run the PIAA Super Silicone Wiper Blades dry to maintain an even silicone coating.
9. Replacement Periods
 - a. Super Silicone Wiper Blades – Replace yearly or when damaged.
 - b. Graphite Wiper Blades – Replace every 6-8 months or when damage occurs.
10. Keeping the windshield and wiper blades clean will prolong the life of your wiper blades.