




WHAT SIZE HITCH DO I NEED?

HOW TO FIND THE PERFECT BULLETPROOF HITCH FOR YOUR VEHICLE

Fig. A (below)



Fig. B (below)

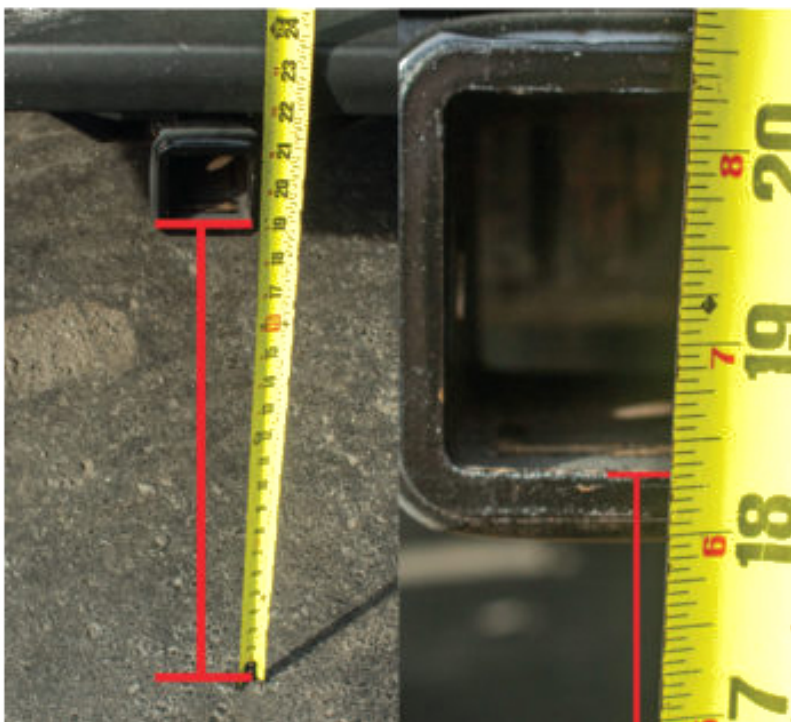

To find out which BulletProof Hitch will work best for your application, please follow the steps below.

First, measure the receiver opening either horizontally or vertically (**Fig. A**) to determine what size shank your vehicle requires. It will be 2", 2.5", or 3" (3" is applicable to some 2017 Ford Super Duty trucks and some RVs/Semis only).

Next, park the vehicle on level ground and measure from the ground to the bottom of the inside of the receiver tube (**Fig. B**), then take that measurement and apply it to information below. As you can see in the example this truck would require our 4" drop.

Receiver height as measured:

[12"-16"] requires 4" drop/rise hitch in rise position;

[16"-18"] requires 4" drop/rise hitch;

[19"-21"] requires 6" drop/rise hitch;

[22"-24"] requires 8" drop/rise hitch;

[25"-27"] requires 10" drop/rise hitch;

[28"-30"] requires 12" drop/rise hitch;

[31"-33"] requires 14" drop/rise hitch;

[34"-36"] requires 16" drop/rise hitch;

[36"+] requires custom order hitch, please contact us so we can assist you getting the hitch you need.

If you are unsure or have questions please contact us and we will be happy to help.