






INSTALLATION INSTRUCTIONS

Sport Truck Pedal Pads

BBS-2101

WARNING: BEFORE INSTALLATION PARK THE CAR SAFELY. TAKE THE KEYS OUT OF THE IGNITION AND APPLY THE PARKING BRAKE. AFTER INSTALLATION, CHECK THE PEDAL'S MOUNTING MECHANISM PERIODICALLY TO INSURE PROPER FIT AND SAFETY OF THE PEDALS.

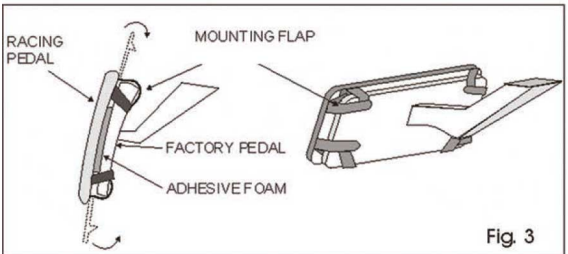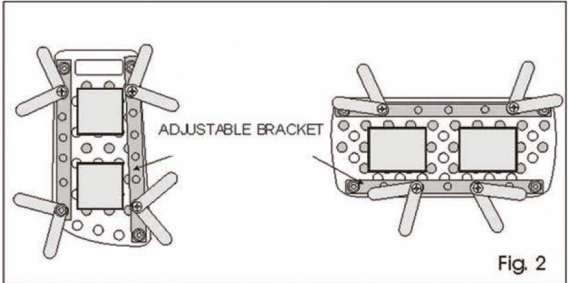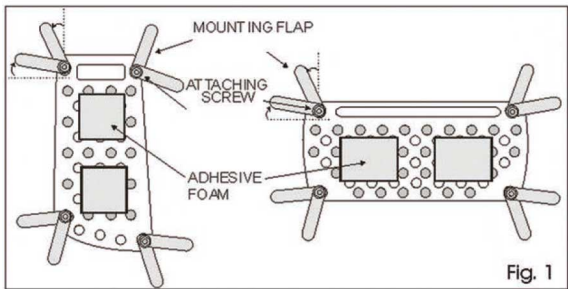

INSTALLATION INSTRUCTIONS:

1. ATTACH THE MOUNTING FLAPS TO THEIR ACCURATE MOUNTING LOCATIONS ON THE BACK OF THE SPORT PEDALS CORRESPONDING TO THE SHAPE AND THE SIZE OF THE FACTORY PEDAL. APPLY THE SUPPLIED SCREWS/NUTS THROUGH THE HOLES ON THE PEDAL. ADJUST THE FLAPS TO A PROPER ANGLE AGAINST THE VERTICAL/HORIZONTAL LINE, THEN FIRMLY TIGHTEN THE ATTACHING SCREWS TO FIX THE FLAPS TO THEIR MOUNTING POSITION. (FIG 1)
2. FOR THE SMALLER SIZE PEDALS, USE THE SUPPLIED ADJUSTABLE BRACKETS AND THE SMALL ROUND HEAD SCREWS TO MOUNT THE FLAPS TO THE RIGHT LOCATION. (FIG 2)
3. PLACE THE SPORT PEDAL ON THE CENTER TOP OF THE FACTORY PEDAL AND APPLY THE ADHESIVE FOAM IN BETWEEN. BEND THE TOP FLAPS TO THE REAR OF THE FACTORY PEDAL SO THE FLAPS WILL TIGHTLY GRASP AGAINST THE EDGE OF THE FACTORY PEDAL. BEND THE SIDE FLAPS AND THE BOTTOM FLAPS IN THE SAME WAY. (FIG 3)
4. STEP ON THE PEDALS TO TEST THE PROPER FIT. THE SPORT PEDAL SHOULD HAVE NO RELATIVE MOVEMENT AGAINST THE FACTORY PEDAL.