


Mounting Instructions

B-Pack Toolbox

It is recommended to mount the toolbox 3" min. from truck cab.

Check tightness of fasteners periodically.

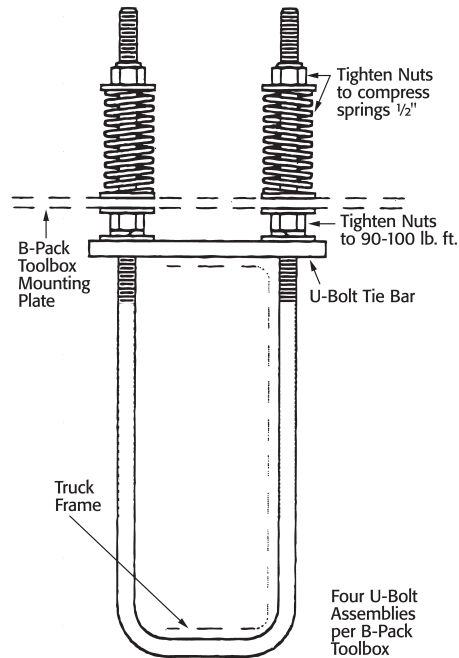

Mounting Instructions

B-Pack Toolbox

It is recommended to mount the toolbox 3" min. from truck cab.

Check tightness of fasteners periodically.

