


Installation Instructions

RC10S Small Rubber Clamp

- 1.** Use #10 bolt or screw to fasten. Do not over tighten.
- 2.** Clamp can be mounted with the strap facing in any direction.
- 3.** To Clamp: put the tool or implement into the jaws. With both of your thumbs on the strap, push strap to reach the desired tightness. Repeat
- 4.** For certain applications, like roof racks with round tubing, you can install the clamps using hose clamps. Make sure you center the hose clamp on the plastic washer to avoid cutting into the rubber clamp.
- 5.** For small diameter objects: push jaw without strap down inside other jaw and tighten strap on top of jaw
- 6.** Clamp can also be used as a pipe stand-off (particularly suited for marine applications). Do not use on exhaust pipes.

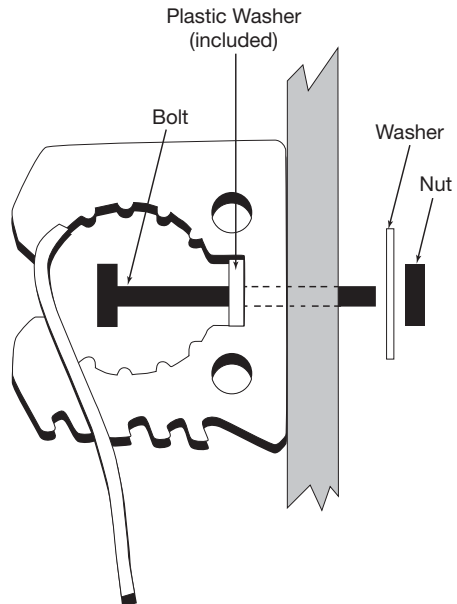

Warranty

Buyers Products Co. warrants all truck/trailer hardware manufactured or distributed by it, to be free from defects in material and workmanship for a period of one year from date of shipment. Parts must be properly installed and used under normal conditions. Any product which has been altered, including modification, misuse, accident or lack of maintenance will not be considered under warranty. Normal wear is excluded. The sole responsibility of Buyers Products Co. under this warranty is limited to repairing or replacing any part or parts which are returned, prepaid, and are found to be defective by Buyers Products Co. Authorization from Buyers Products Co. must be obtained before returning any part. No charges for transportation or labor performed on Buyers' products will be allowed under this warranty.