

CALIBER Ramp Grips™

Installation Instructions for Part No. 13204

HARDWARE INCLUDED:

Qty	Description
6	15" Ramp Grips
1	#10 x 1" Stainless Steel Truss Head Screws 33 pc Pack
1	T-20 Torx bit


TOOLS REQUIRED:

- Power Drill
- Tape Measure
- Pencil or Marker
- 9/64th drill bit

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLY

- Step 1:** Find the center of the traction area on the trailer ramp. Mark this on the trailer ramp at the rear.
- Step 2:** Place the first Ramp Grip at the very rear of the trailer ramp centered on the mark from **Step 1**.
- Step 3:** Layout the remaining 5 Ramp Grips on the ramp.
- Step 4:** Pre-drill pilot holes at 9/64th into aluminum cross member through ramp grip in all holes.
- Step 5:** With Torx driver carefully tighten to aluminum cross rail. (Do not overtighten or you will strip out aluminum)

WARNING: CALIBER Ramp Grips are designed to add traction to the trailer ramp for the snowmobile track, but are slippery, especially when wet or covered with frost, ice and/or snow. Extreme caution should be taken when walking or climbing on any trailer ramp on which Ramp Grips are installed. Always load snowmobiles at low speeds using extreme caution.

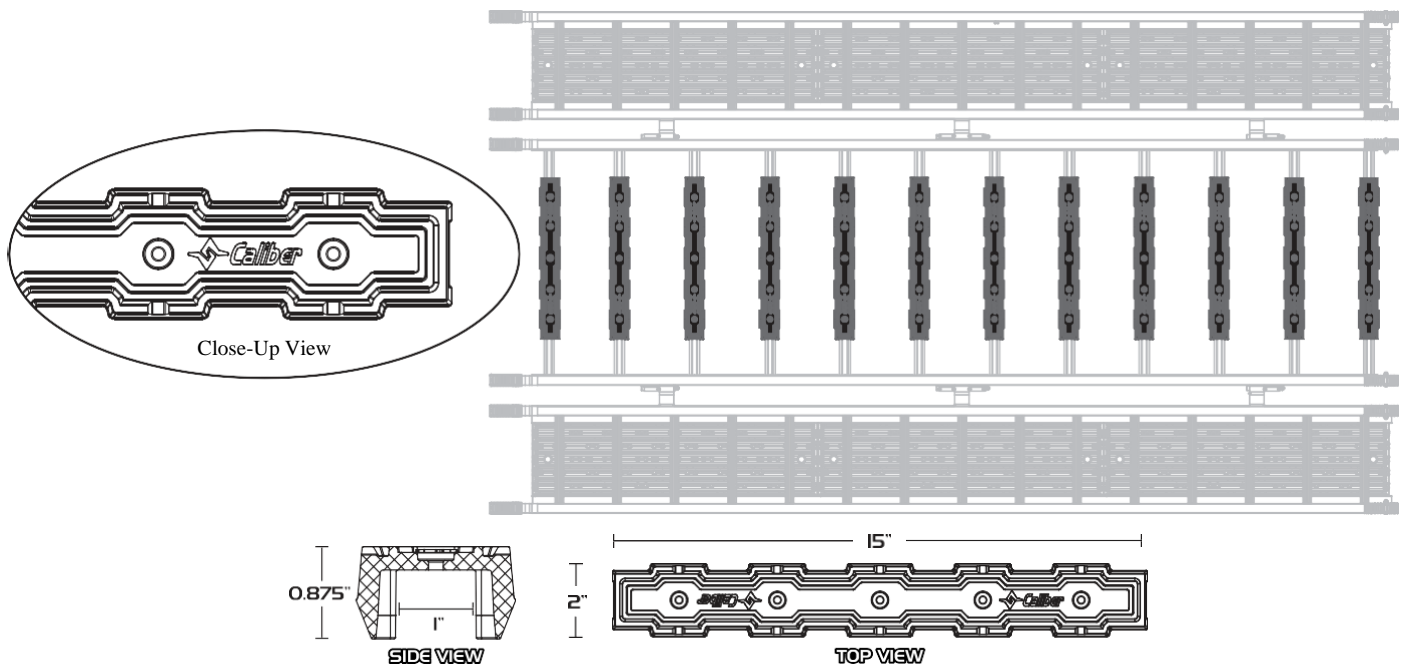

DISCLAIMER

Caliber, Inc. shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law, or in the event that any limited warranty fails of its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product.

CALIBER®

Looking for dependable trailer hitches and towing? Rely on Caliber for quality and long-lasting products.