

CALIBER[®] Flex-Glides Low

Installation Instructions for Part No. 13342

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

TOOLS REQUIRED:

- Power Drill (T20 Torx Included)
- Pencil or Marker

HARDWARE INCLUDED:

Qty	Description
8	Flex-Glides
2	8 Pack of Stainless Steel Screws

RECOMMENDED APPLICATIONS

Flex-Glides Low are designed for the front of non-enclosed v-front trailers. They also are used in the middle of enclosed trailers so snowmobiles can easily drive over them.

NOTE: Pre-drilling where the screws go into any metal part of the trailer may be needed, but caution should be used when installing the fasteners in areas where marker lights and wires have been installed under the trailer deck. Some trailers have thinner decks than others.

NON-ENCLOSED TRAILER



NOTE: The picture shows Flex-Glides Low on a non-enclosed trailer.

Step 1: Install the glides on the trailer deck first, but don't extend them into the v-front portion of the deck.

Step 2: Connect four of the Flex-Glides together and position them between the last glide and the front edge of the trailer. Also position the other side at this time before fastening any of them down to the deck.

NOTE: The protruding interlocking tab on the last Flex-Glide in the chain may have to be removed so it doesn't interfere with the lip of the trailer or with the last glide. It can easily be removed with a hacksaw.

Step 3: Fasten each Flex-Glide to the trailer deck with two screws in the designated locations

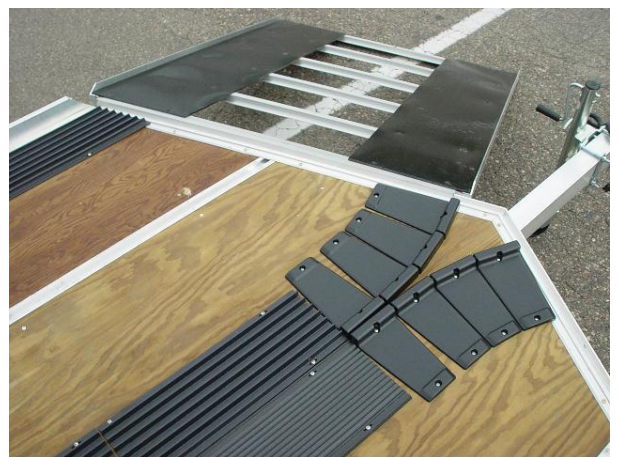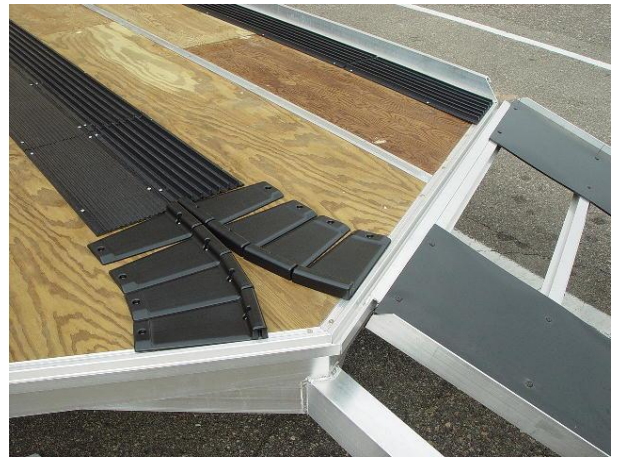

CALIBER[®]

ENCLOSED TRAILER

Due to the variety of enclosed trailers, there are many ways to layout Flex-Glides. Pictured below is one recommended layout.

HELPFUL HINT: Start at the rear of the trailer by laying out the glides first. Completely layout all glides and Flex-Glides before fastening anything to the trailer deck. The glides can easily be cut with any type of saw.



Flex-Glides Low



Flex-Glides Low

WARNING: These products are designed only to reduce resistance created when loading/unloading snowmobiles from trailer deck. Surfaces are slippery, especially when wet or covered with frost, ice and/or snow. Extreme caution should be taken when walking or climbing on any trailer deck on which **Multi-Glides™** or **Grips™** are installed. Do not use these products for any other use. Do not stand behind snowmobiles when loading/unloading. Always load snowmobiles at low speeds using extreme caution.

DISCLAIMER

Caliber, Inc. shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law, or in the event that any limited warranty fails of its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product.

CALIBER®

Looking for dependable trailer hitches and towing? Rely on Caliber for quality and long-lasting products.