# CALIBER® Edge Glides Tilt

## **Installation Instructions for Part No. 13362**

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

#### **TOOLS REQUIRED:**

## • Power Drill with #2 Phillips Bit

• Pencil and 5/32" Drill Bit

#### **HARDWARE INCLUDED:**

Qty. 4 Edge Glides

Qty. 1 33 Pack of #10 Truss Head SS Screws

### **RECOMMENDED APPLICATIONS**

**Edge Glide Tilt Part No. 13362 -** Designed for the back leading edge of non-enclosed trailers to eliminate hard entrance on the trailer deck.


**NOTE:** Pre-drilling where the screws go into any metal part of the trailer may be needed, but caution should be used when installing the fasteners in areas where marker lights and wires have been installed under the trailer deck. Some trailers have thinner decks than others.

*NOTE:* The diagram shows Edge Glide Tilt on a non-enclosed or tilt trailer, but Edge-Glide Enclosed can also be used for the same application with a clamshell cover to eliminate the concern for closing the clamshell and eliminating a potential gap in rear clamshell weather stripping seal.

Step 1: Position the Edge Glide up to the back edge of the trailer with alignment to your glides, until the small step hits the back edge of the trailer. If you have an aluminum edge that has a curved drop off (as shown), position the Edge Glide until it stops and mark holes for drilling.

Step 2: If you are fastening into aluminum, pre-drill holes with a 11/64" drill bit. Fasten the part with #10 Truss Head SS Screws until you have solid connection.

#### DO NOT STAND ON EDGE GLIDE

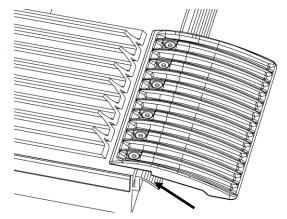

HELPFUL HINT: Make sure you leave a minimum of 3/8" clearance between Edge Glide and deck glides for expansion.

**WARNING:** These products are only designed to reduce resistance created when loading/unloading snowmobiles from trailer deck. Surfaces are slippery, especially when wet or covered with frost, ice and/or snow. Extreme caution should be taken when walking or climbing on any trailer deck on which any Caliber products are installed. Do not use these products for any other use. **Do Not Stand On Edge Glides**. Do not stand behind snowmobiles when loading/unloading. Always load snowmobiles at low speeds using extreme caution.

#### DISCLAIMER

Caliber, Inc. shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law, or in the event that any limited warranty fails of its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product.

# **CALIBER®**