

CALIBER RampPro HD™

Assembly Instructions for Part No. 13528

Hardware Included:

- 1 – Retrax Accessory Strap (PN. 13548)
- 1 – Clevis Pin

Tools Required:

- 6mm Allen Key
- 13mm Socket/Wrench

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLY

- **Maximum recommended load surface height: 45 inches**
- **Maximum loaded vehicle width - complete ramp: 52 inches**
- **Rated capacity of complete ramp: 3,000 lbs.**
- **Rated capacity of each side section: 1,250 lbs.**
- **Always use safety straps attached to both the transport vehicle and ramp**
- **Always use additional safety strap when the ramp is separated. Additional retractable straps available (Caliber PN 13548)**
- **Always load or unload on a solid, level, and stable surface with the transport vehicle in park, parking brake on, and engine off**

DISCLAIMER


Caliber, Inc. shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law. In the event that any limited warranty fails of its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product

Step 1:

- Remove Retrax accessory strap from top rung of ramp.

Step 2:

- Install Retrax accessory strap with the nut/bolt fixed to the top run of the ramp – using a 6mm Allen and 13mm wrench.
- Use elongated slot fixed in the center of the ramp to clip the 2" hook for storage.

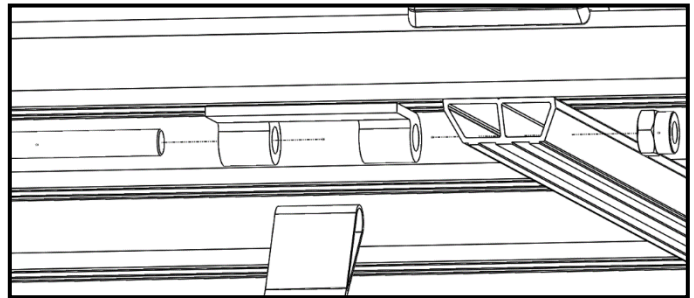

Step 3:


- Place ramp on vehicle and remove clevis pin for use. Ensure Retrax strap is attached to the receiver and secured.

To use with Full-Size UTVs, Snow bikes, Dirt bikes, and Motorcycles see next page.

Full-Size UTV:

Step 1:

- Remove all six (6) bolts from outer portions of the ramp and put them back into the center section for storage purposes.

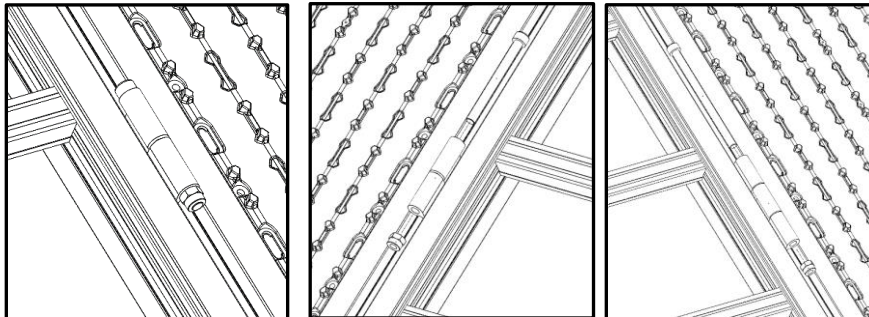


Step 2:

- Attach additional accessory strap required for split-ramp use (P/N 13548).

Step 3:

- Remove strap from center section of the ramp and attach to secondary outer portion. Purchasing two accessory straps for both outer portions is also an option to keep all straps in place.

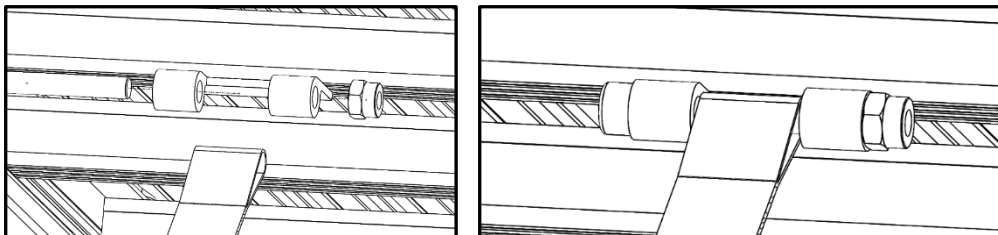


Step 4:

- Place ramps on trailer and ensure Retrax straps are securely fastened to the trailer prior to loading vehicle (Outer portions have 1,250lb. capacity each).

Snowbike – Dirtbike – Motorcycle:


Step 1:

- Remove all six (6) bolts from outer portions of the ramp and put three (3) back into the center section for storage purposes

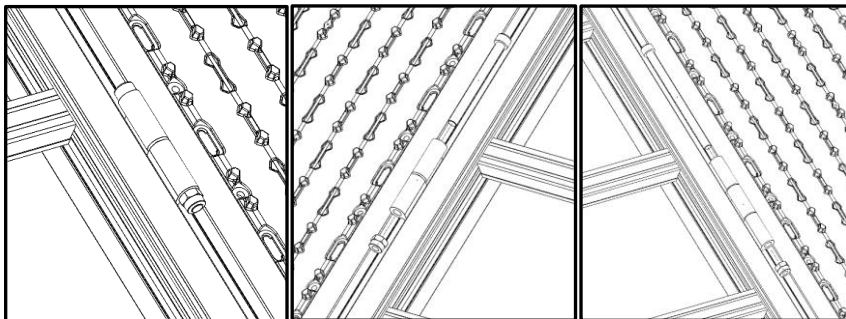

Step 2:

- Remove strap from center section of the ramp and attach to secondary outer portion, or use an additional accessory strap (P/N 13548)

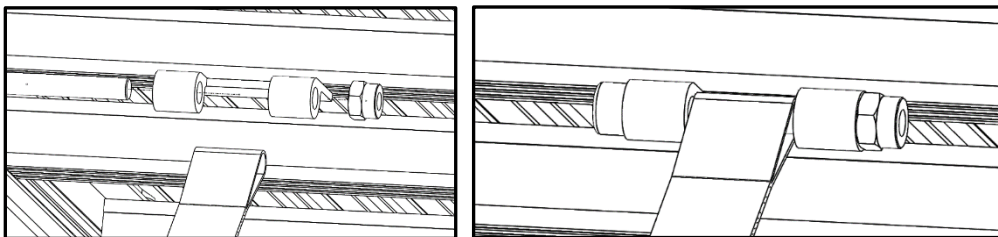

Step 3:

- Place ramp on vehicle and ensure Retrax strap is securely fastened to the vehicle prior to loading vehicle (Outer portions have 1,250lb. capacity each).