

CALIBER MOTO RampPro™

Assembly Instructions for Part No. 13561

Hardware Included:

1 – Retrax Accessory Strap (PN. 13548)

Tools Required:

6mm Allen Key

13mm Socket/Wrench

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLY


- **Maximum recommended load surface height: 45 inches**
- **Maximum loaded vehicle width - complete ramp: 38 inches**
- **Rated capacity of complete ramp: 1,200 lbs.**
- **Rated capacity of each side section: 600 lbs.**
- **Always use safety straps attached to both the transport vehicle and ramp**
- **Always use additional safety strap when the ramp is separated. Additional retractable straps available (Caliber PN 13548)**
- **Always load or unload on a solid, level, and stable surface with the transport vehicle in park, parking brake on, and engine off**

DISCLAIMER

Caliber, Inc. shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law. In the event that any limited warranty fails of its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product.

Step 1:

- Remove Retrax accessory strap from top rung of ramp and install using a 6mm Allen and 13mm wrench.
- Use elongated slot fixed in the center of the ramp to clip the 2" hook for storage.

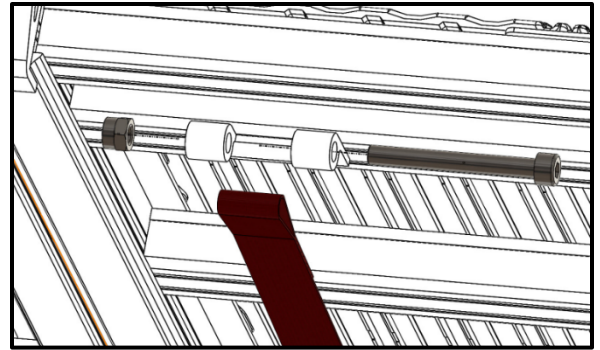

Use with four-wheeled vehicles:

Step 1:

- Remove all three (3) bolts from the hinges of the ramp – place back in hinges for storage – tighten

Step 2:

