




# REAR WING ASSEMBLY, INSTALLATION AND PAINTING INSTRUCTIONS BOD-690-219 & BOD-713-220

## FIBERGLASS

**ASSEMBLY:** Mount pedestals to spoiler as shown below. To make positioning the spoiler easier, leave 1/4" mounting studs off until holes are drilled.

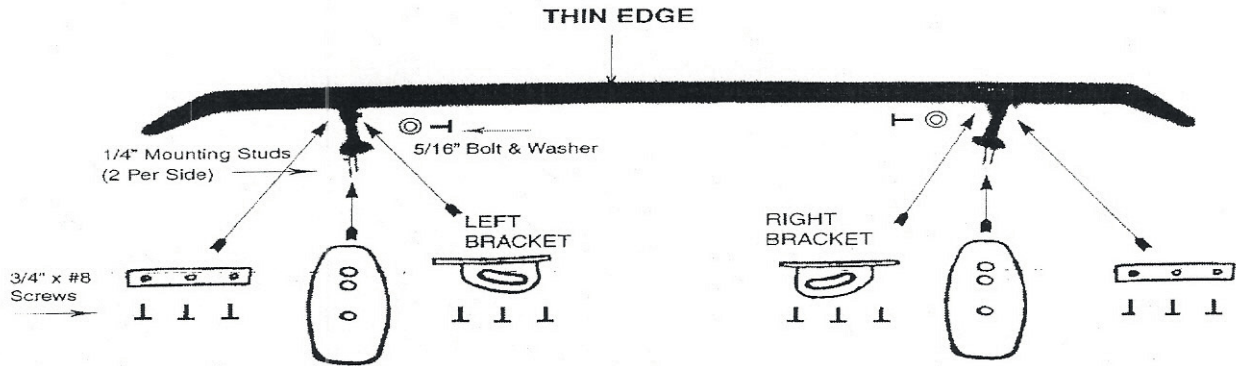

**PAINTING:** The spoiler can be installed without additional painting. If repainting is desired, lightly scuff surface and paint with an acrylic enamel compatible paint.

**INSTALLATION:** Put tape on pedestal gaskets as shown below. Put the sticky side down, lip on gasket up with the gaskets on the pedestals. Position spoiler on vehicle. Make sure spoiler is centered side to side, and is the same distance from the rear of the vehicle. When spoiler is positioned, tape gaskets to vehicle and use as a template. Before drilling 1/4" holes, check under panel for wires or other things that could be damaged. Screw studs into pedestal, mount spoiler on vehicle and secure with 1/4" nuts and washers. Do not over tighten.

Tape gaskets to vehicle after positioning spoiler. Use gasket as template to drill holes. Only two holes are used per side depending on model.

**NOTE:** Only two holes are used to mount spoiler on each side. Set gaskets on pedestals and place tape over unused hole to prevent an error in drilling. Put a bead of Silicone sealer around each hole to seal and prevent rust.