

# UPPER CONTROL ARM GREASE FITTING KIT

SOLVES FRONT END  
"SQUEAK" PERMANENTLY

• EASY TO INSTALL

• INCLUDES INSTALLATION  
TOOL AND SPECIAL  
FITTINGS


• NO CUTTING OR  
TORCHING  
REQUIRED

FOR: 1961 & UP

• FAIRLANE  
• FALCON  
• MUSTANG

• COMET  
• COUGAR  
• MONTEGO

• MAVERICK  
• TORINO  
• THUNDERBIRD

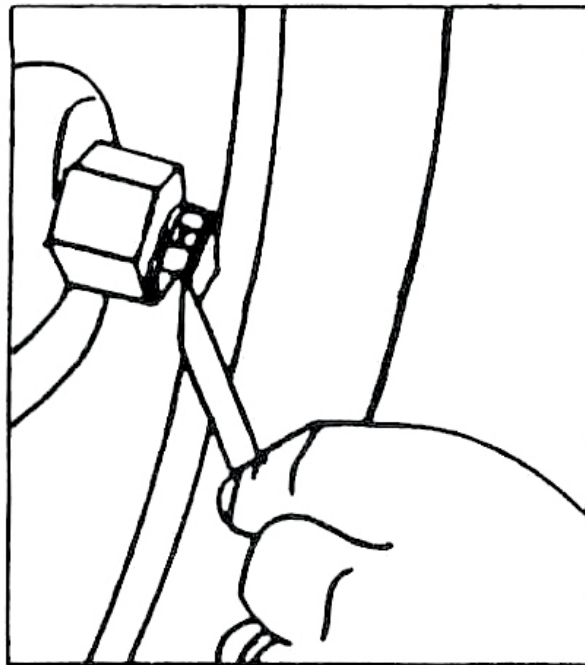

INSTALLS WHERE SPACE IS VERY LIMITED

Part No. S00-610-003

READ INSTRUCTIONS FULLY  
BEFORE STARTING

1. SEPARATE LONG ZERK FROM ELBOW
2. REMOVE PLUG FROM PIVOT NUT WITH 9/32" OPEN END OR BOX END WRENCH.
3. SNAP SPECIAL ELBOW FITTING INTO CHANNEL OF INSTALLING TOOL SO THREAD SECTION PROTRUDES THROUGH NOTCH.
4. HOLD ELBOW FIRMLY AGAINST THREADED HOLE IN PIVOT NUT AND CAREFULLY TURN IN WITH 11/32" OPEN END WRENCH. WHEN THREADS ARE ENGAGED, SNAP TOOL OFF. TIGHTEN FITTING, LEAVING HOLE FACING OUT.
5. INSTALL LONG ZERK. TIGHTEN WITH 5/16" SOCKET.
6. FOLLOW PROCEDURE FOR OTHER PIVOTS AND GREASE VEHICLE.