


CARR MEGA STEP FLAT MOUNT INSTALLATION INSTRUCTIONS

Part No. 190001 / 190005 / 190007

WARNINGS!

- The manufacturer and distributor of this product are in no way responsible for the consumer's failure to adhere to the warnings and directions of these instructions in the event of damage to the consumer's vehicle, other properties and or personal injury.

1. Find a flat surface to mount your step.
2. Place the Mega Step assembly up against the flat surface.
3. Use the four holes in each corner as a guide and mark the holes with a pencil.
4. Take your drill motor with the 11/32" drill bit and drill out each hole.
5. Use the 5/16" hardware provided, along with the steel straps, securely tighten your Mega Step to the mounting surface. (See Diagram)
6. To keep the step moving up and down easily, be sure to grease the area where the stainless steel springs comes in contact with the step casting.

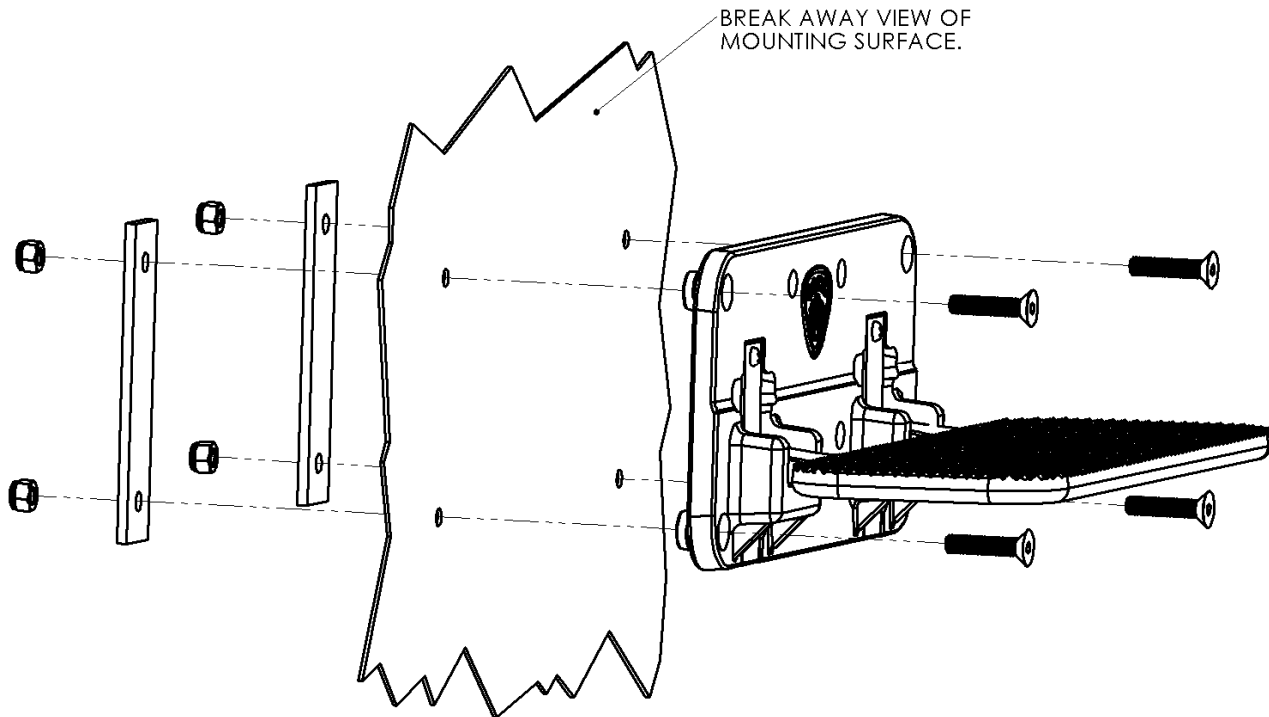

Materials Furnished:

Mega Hitch Step, Hardware, Instructions

Tools Needed:

Pencil, drill motor, 11/32 drill bit, 1/2" wrench, 3/16" Allen wrench