


40551/ 40552 / 40553 1994-99 Chevy CK Series PU, Suburban & Tahoe – Bolt Over

Step 1: Center billet grille in opening. Use bolts, nuts and brackets supplied and attach per illustration below.

Step 2: Check to make sure the grille is properly in place and tighten the bolts just enough to hold the grille in place. **DO NOT OVER TIGHTEN** as this may cause the grille shell to crack.

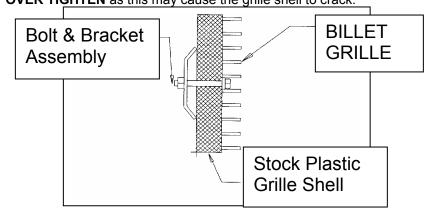

Note: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Carriage Works recommends applying a high quality automotive wax to maintain the original appearance.