



2007 Chevy Tahoe Tow hook [Bumper Grille](#)

After



Part# 43031 (Brushed) 43032 (Polished) 43033 (Black)

HARDWARE

- 2 - Upper Bkts
- 2 - Lower Bkts
- 8 - U-Clips
- 8 - #8 x 5/8" Phil pan head screw

Before



1 Remove the rubber surrounding tow hooks, by pushing straight back to release.




2 Place the supplied U-clips on the supplied brackets as shown above.



3 Then attach brackets to billet grille using the supplied #8 x 5/8" Phil pan head screws as shown above.



4 Place billet grille into opening and center. Then using a 90° scribe mark the location of the holes in bracket where it meets the vehicle.

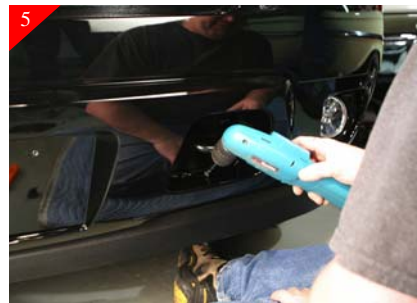

5 Remove the billet grille from opening and also remove the brackets from the billet grille. Then drill a 3/16" hole in each of the just marked locations.



6 Now attach the brackets to the just marked locations. Attach the top bracket by placing a supplied u-clip on the top side of the tow hook opening as shown above then attach brackets to uclip using #8 x 5/8" Phil pan head screws. Repeat process for the bottom brackets.



7 Now attach billet grilles to the just attached brackets as shown above.

Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Work's control.

Also Carriage Works Inc. Recommends applying a high quality automotive wax to maintain the original appearance.