






1970 Ford

After

PART# 43311 (Brushed) 43312 - (Polished) 43313 - (Black) Upper



HARDWARE


- 4 - Top Brackets 
- 2 - Outer Brackets 
- 2 - Inner Brackets 
- 16 - #8 x 5/8" Phillips pan head screw
- 16 - U-Clips



Remove the stock "egg crate" sections by removing the (4) per side screws as shown above. If you are using your old stock shell you will need to remove the inner plastic screw retainers.



Remove brackets from hardware pack. Place supplied U-clips on all ends of the supplied brackets. Attach the (4) identical Top brackets to mounting tabs in shell using the supplied #8 x 5/8" Phil pan head screws as shown above.

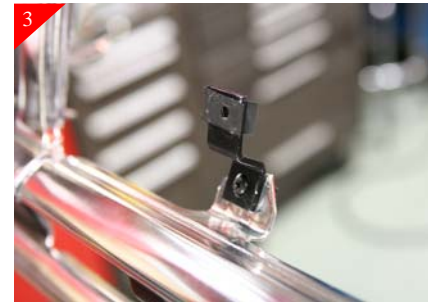

Locate the (2) brackets that have a slightly longer end than the other. These brackets attach to the outer most mounting tab per side in the stock shell. Attach the shorter end to the stock shell using the supplied #8 x 5/8" Phil pan head screws as shown above.



Attach the remaining (2) brackets to the inner (2) mounting tabs in stock shell per side using the supplied #8 x 5/8" Phil pan head screws as shown above.



With All brackets attached simply attach [billet grille](#) to brackets using the supplied #8 x 5/8" Phil pan head screws.

Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Also Carriage Works Recommends applying a high quality automotive wax to maintain the original appearance.